




D Level Meter

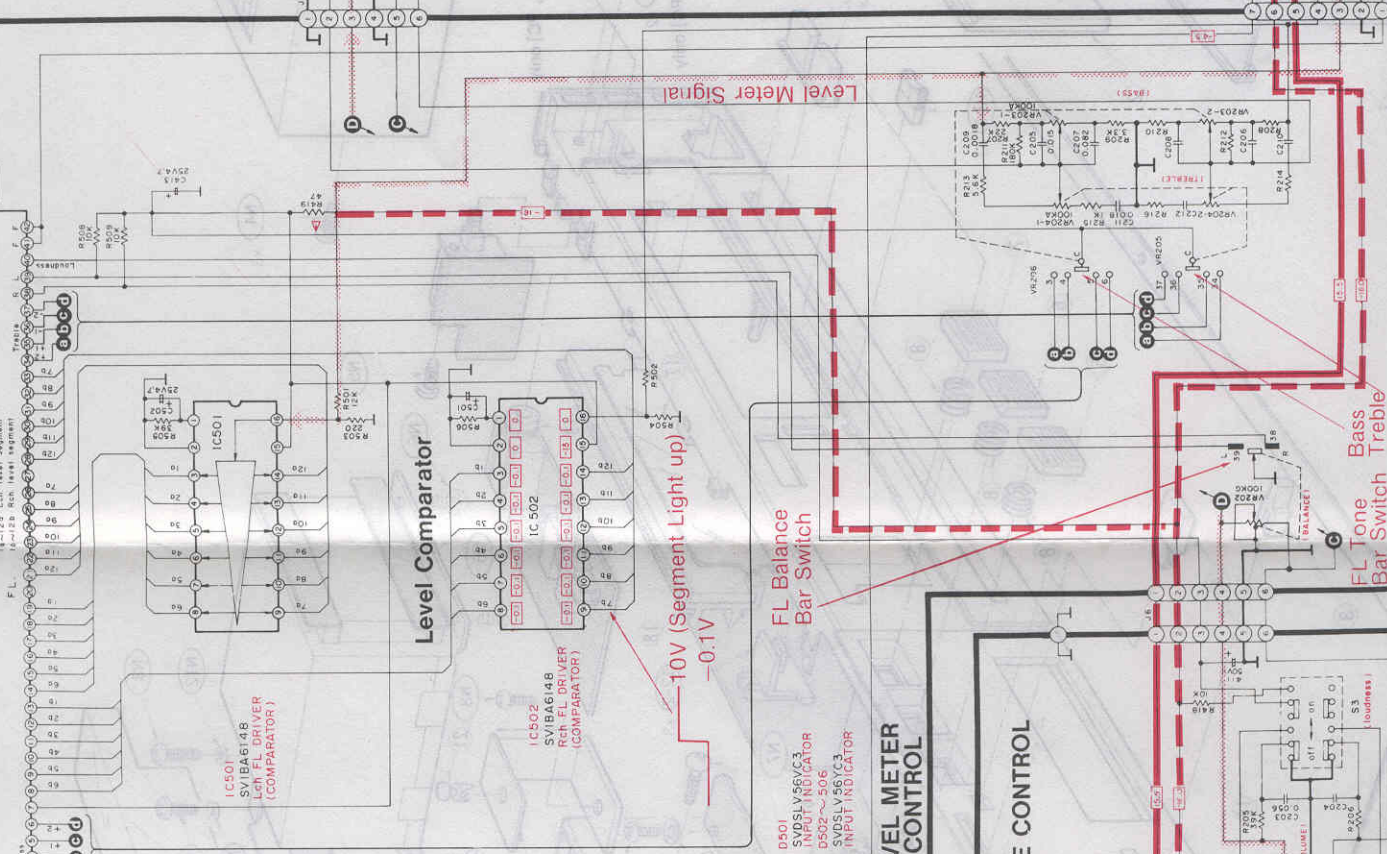


G POWER AMPLIFIER, MUTING AND POWER SUPPLY

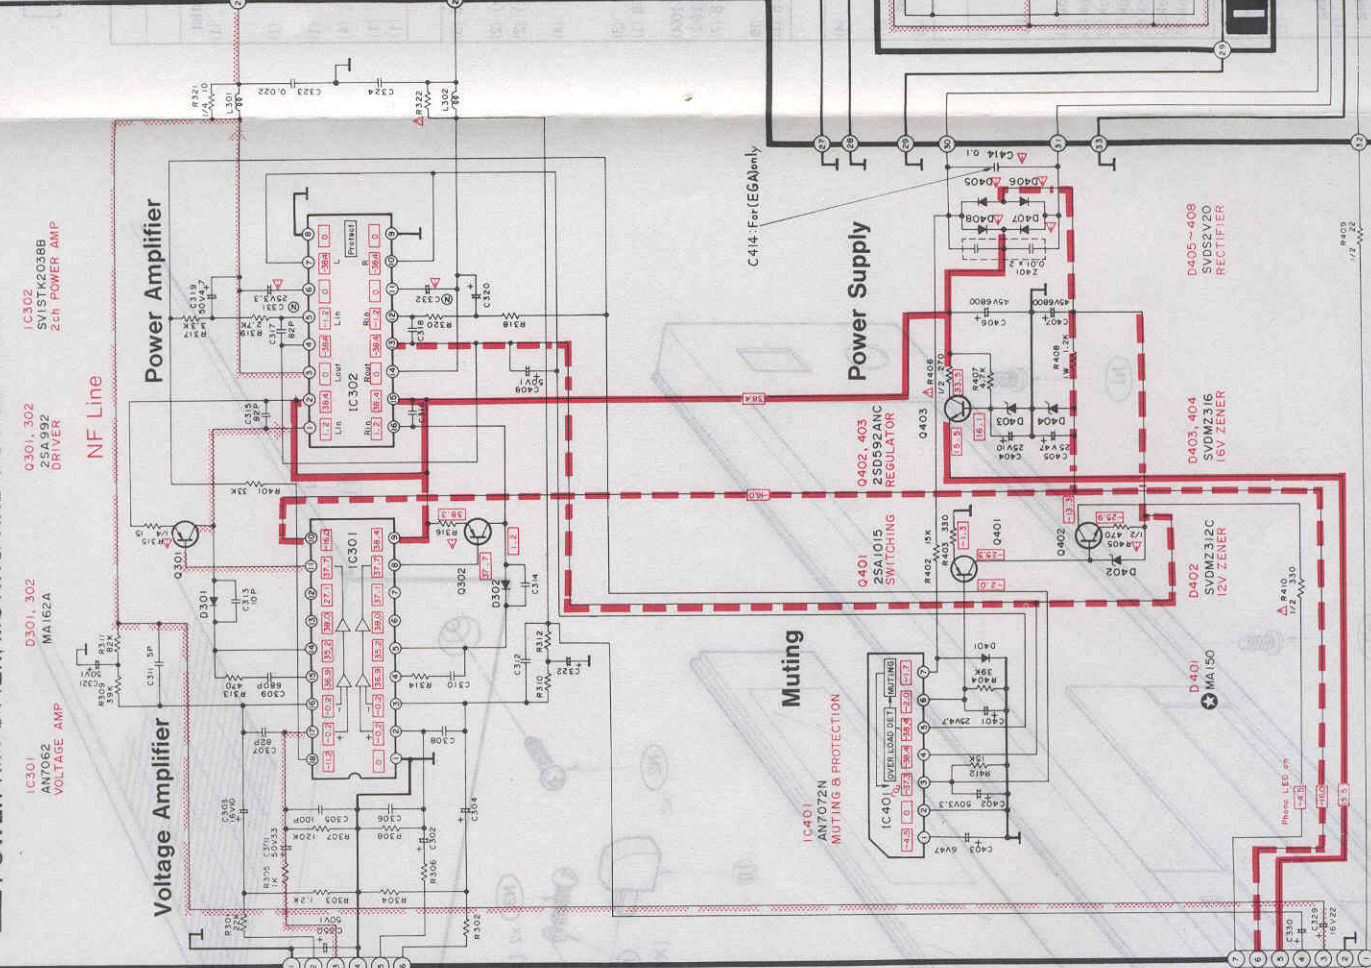


H SPEAKER TERMINI

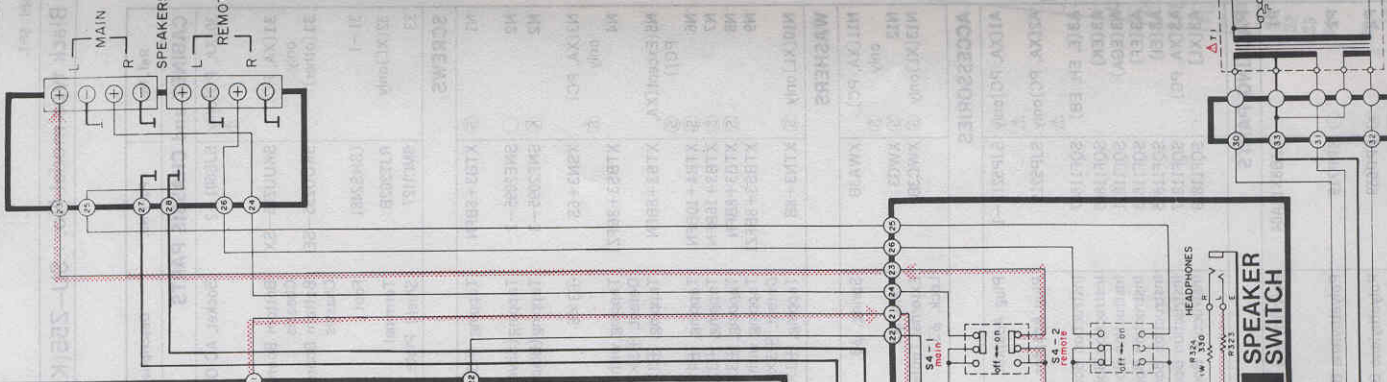

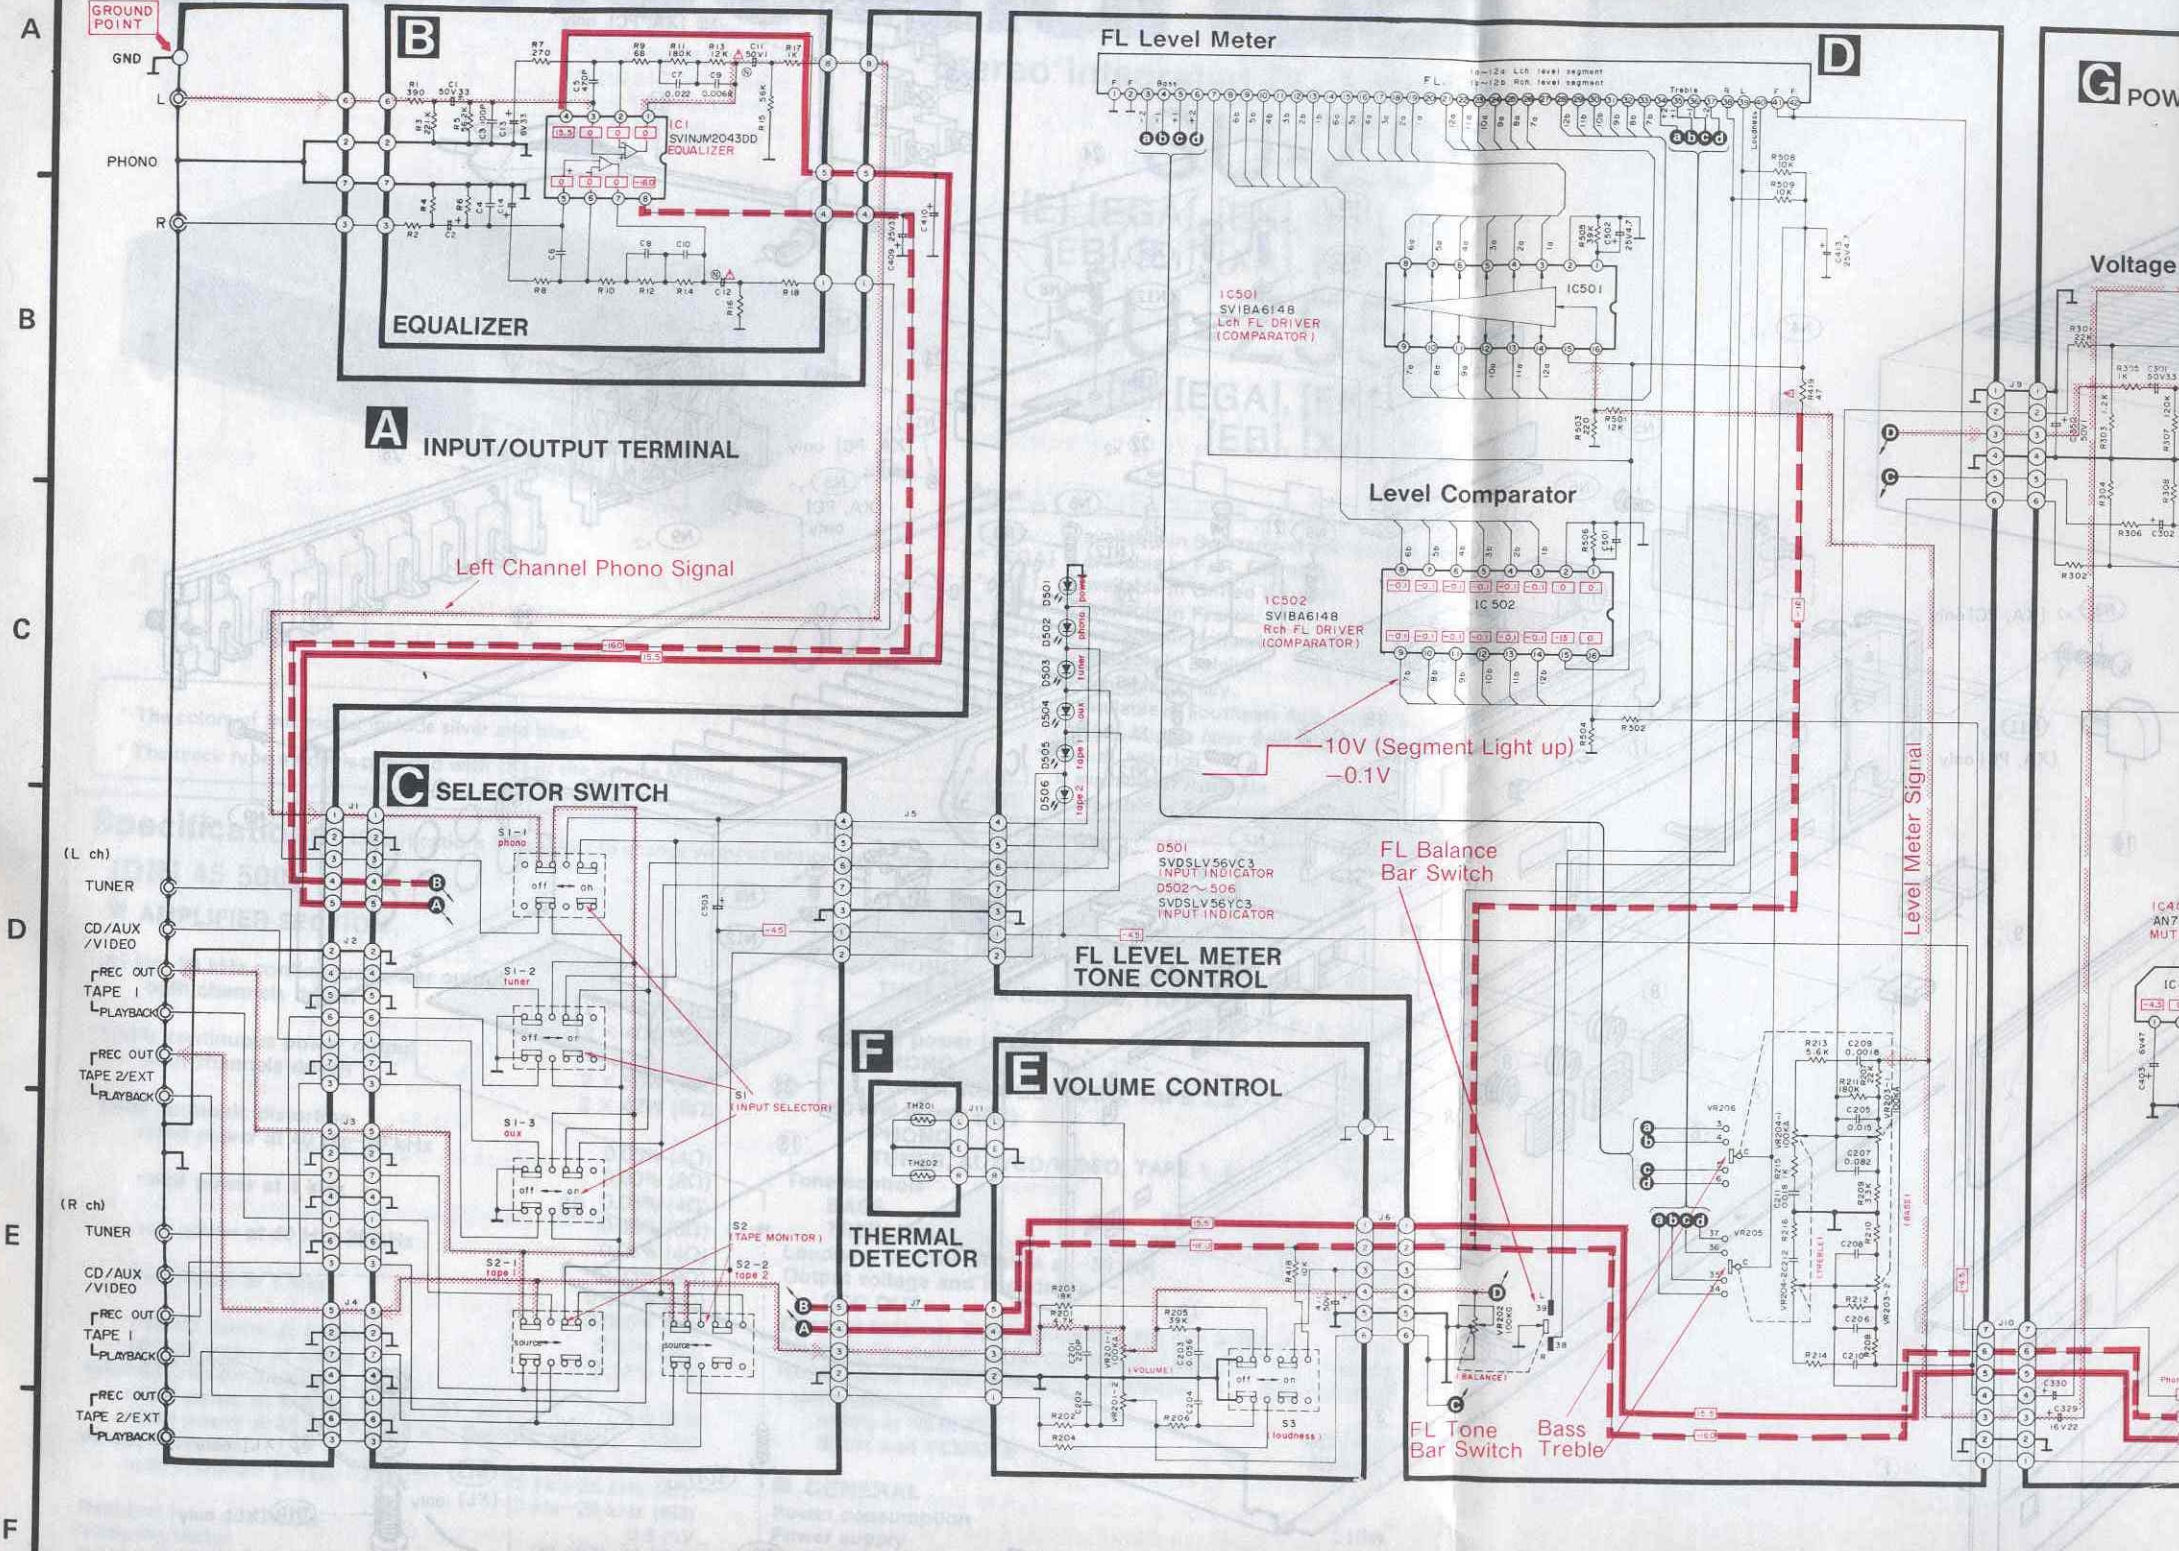

GROUND POINT

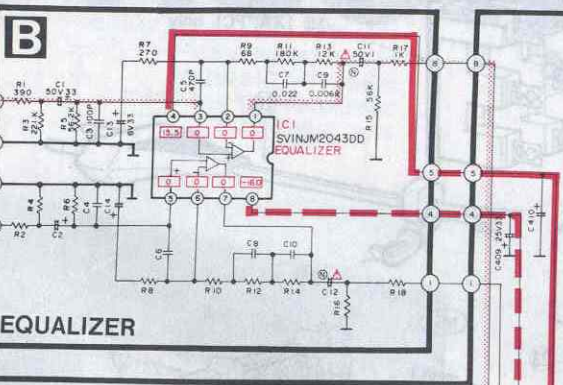

A INPUT/OUTPUT TERMINAL


Left Channel Phono Signal

C SELECTOR SWITCH

- (L ch)
- TUNER
- CD/AUX /VIDEO
- REC OUT TAPE 1
- PLAYBACK
- REC OUT TAPE 2/EXT
- PLAYBACK


- (R ch)
- TUNER
- CD/AUX /VIDEO
- REC OUT TAPE 1
- PLAYBACK
- REC OUT TAPE 2/EXT
- PLAYBACK

FL Level Meter

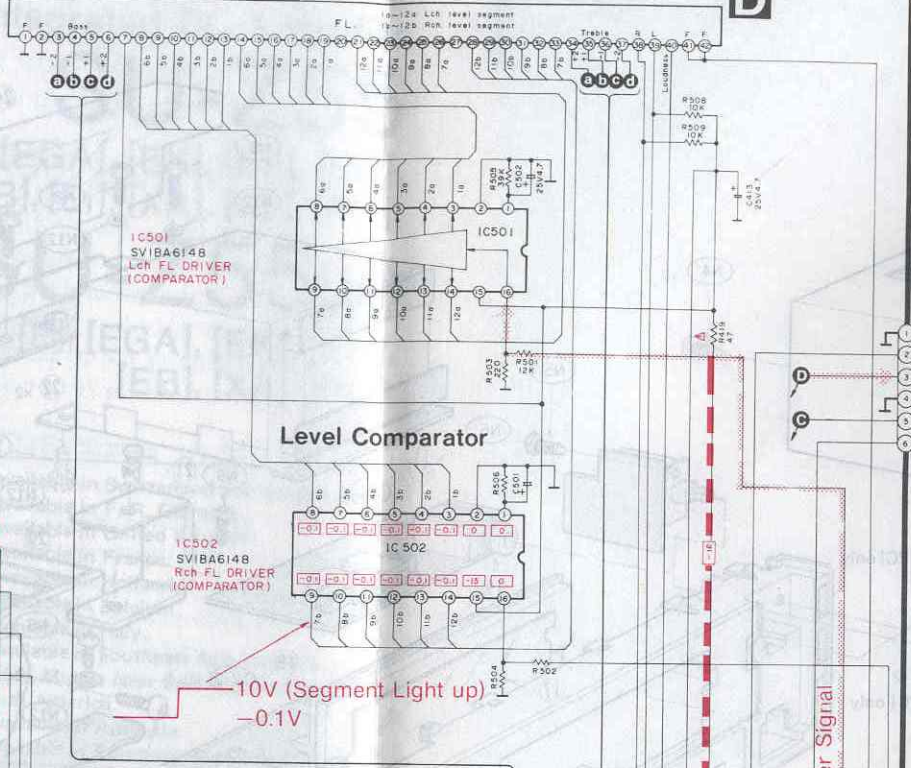


D501 SVDSL56VC3 INPUT INDICATOR
D502 ~ D106 SVDSL56VC3 INPUT INDICATOR

FL LEVEL METER TONE CONTROL

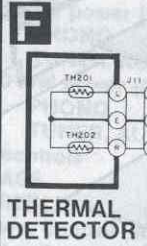

E VOLUME CONTROL

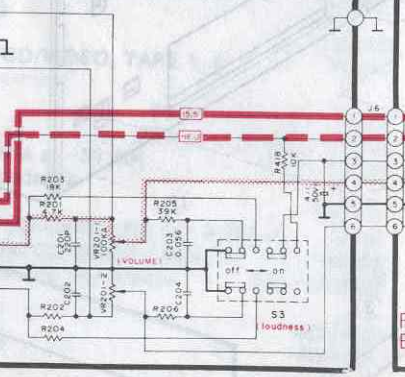

G POWER

Voltage



IC401 AN700 MUTING

IC402



F