


### How to Adjust the Rotating Phase of the Gear, Main Cam

- 1) Push down the hooking catch of the CHAS. MECH, and remove the TRAY.
- 2) Align the arrow mark of the Gear, Main Cam with the black round mark of the CHAS. MECHA as shown below.
- 3) Confirm that the Slide, Mech Cam is located in the right position, then insert the TRAY gently.

Caution: If the rotating phase of the Gear, Main Cam is incorrectly adjusted, the chucking operation and tray movement will have malfunction.

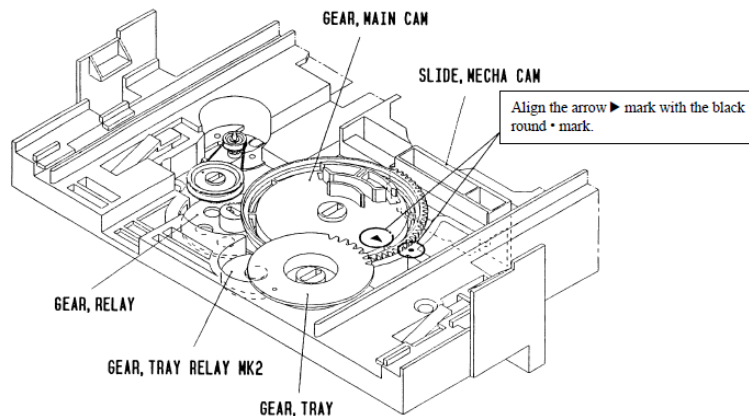

### COMO AJUSTAR A POSIÇÃO DA ENGRENAGEM PRINCIPAL:

- 1) Empurre a trava do chassis (está no desenho do lado esquerdo do motor) para baixo e remova a bandeja.
- 2) Alinhe a seta da engrenagem, CAME PRINCIPAL, marca redonda preta com a marca do chassis, como mostra o desenho acima.
- 3) Verifique se a alavanca deslizante (SLIDE. MECHA CAM) está na posição correta, então insira a bandeja suavemente. O mecanismo da unidade ótica deve estar na posição levantada. Ou seja na posição de play.