

# CX-JN5

## SERVICE MANUAL

Ver 1.1 2003.06



*US Model  
Canadian Model  
AEP Model  
UK Model  
E Model  
Australian Model*

CX-JN5 is the amplifier, CD player, tape deck and tuner section in JAX-N5/PK5.

CD Section	Model Name Using Similar Mechanism	NEW
	CD Mechanism Type	CDM74-K6BD71A, CDM74S-K6BD71A, CDM74S-K6BD72
	Base Unit Name	BU-K6BD71A, BU-K6BD72
	Optical Block Name	KSM-213DCP
	Optical Pick-up Name	KSS-213D
Tape deck Section	Model Name Using Similar Mechanism	NEW
	Tape Transport Mechanism Type	CWM43FF13, CWM43FR16, CWM43FR26

### SPECIFICATIONS

#### TUNER

FM tuning range  
Except CIS model: 87.5 MHz to 108 MHz  
CIS model: 65 MHz to 74 MHz (10 kHz step)  
87.5 MHz to 108 MHz (50 kHz step)

FM usable sensitivity (IHF)  
Except AEP, UK, CIS models: 13.2 dBf  
AEP, UK models: 16.8 dBf  
CIS model: 15.3 dBf (65 MHz to 74 MHz)  
12.8 dBf (87.5 MHz to 108 MHz)

FM antenna terminal 75 ohms (unbalanced)  
AM tuning range  
US, CND, E51, MX models: 530 kHz to 1710 kHz (10 kHz step)  
531 kHz to 1710 kHz (9 kHz step)  
AEP, UK, CIS, E, SP, TW models: 531 kHz to 1602 kHz  
KR, AUS models: 531 kHz to 1602 kHz (9 kHz step)  
530 kHz to 1710 kHz (10 kHz step)

AM usable sensitivity 350  $\mu$ V/m  
AM antenna Loop antenna

#### AMPLIFIER

Power output  
US, CND models: 96 W + 96 W (40 Hz - 20 kHz, THD less than 1 %, 6 ohms)  
120 W + 120 W (1 kHz, THD less than 10 %, 6 ohms)

AEP, UK, CIS models: Rated: 64 W + 64 W (6 ohms, T.H.D. 1 %, 1 kHz/DIN 45500)  
Reference: 80 W + 80 W (6 ohms, T.H.D. 10 %, 1 kHz/DIN 45324)  
MUSIC POWER: 195 W + 195 W  
Rated: 80 W + 80 W (1 kHz, T.H.D. 1 %, 6 ohms )  
Reference: 100 W + 100 W (1 kHz, T.H.D. 10 %, 6 ohms)

Total harmonic distortion  
US, CND models: 0.08 % (45 W, 1 kHz, 6 ohms)  
AEP, UK, CIS models: 0.08 % (32 W, 1 kHz, 6 ohms, DIN AUDIO)  
Except US, CND, AEP, UK, CIS models: 0.08 % (40 W, 1 kHz, 6 ohms, DIN AUDIO)  
Input VIDEO/AUX: 400 mV  
Outputs SPEAKERS: 6 ohms or more  
PHONES: 32 ohms or more

#### CASSETTE DECK

Track format 4 tracks, 2 channels stereo  
Frequency response 50 Hz - 8 kHz  
Recording system AC bias

#### Heads

Deck A: playback x 1  
Deck B: recording/playback x 1, erase x 1

#### CD PLAYER

Laser Semiconductor laser ( $\lambda = 780$  nm)  
Emission duration: continuous  
1 bit dual  
Signal-to-noise ratio 85 dB (1 kHz, 0 dB)  
Harmonic distortion 0.05 % (1 kHz, 0 dB)

#### GENERAL

Power requirements  
US, CND, MX models: 120 V AC, 60 Hz  
AEP, UK, CIS models: 230 V AC, 50/60 Hz  
E, E51, SP, TW models: 110 - 120 V/220 - 240 V AC (switchable), 50/60 Hz  
KR model: 220 V AC, 60 Hz  
AUS model: 240 V AC, 50/60 Hz  
Power consumption  
US, CND models: 100 W  
AEP, UK, CIS models: 93 W

- Continued on next page -

## COMPACT DISC DECK RECEIVER

9-877-250-02

2003F05-1

© 2003.06

**Sony Corporation**

**Home Audio Company**

**Published by Sony Engineering Corporation**



# CX-JN5

Except US, CND, AEP, UK,

CIS models: 105 W  
 Power consumption With ECO mode on: 0.25 W  
 in standby mode With ECO mode off: 20 W  
 Dimensions (W x H x D) 280 x 330 x 392.5 mm  
 (11 1/8 x 13 x 15 1/2 in.)

Weight  
 US, CND, E51, KR models: 8.0 kg (17 lbs 10 oz)  
 AEP, UK models: 7.2 kg  
 CIS model: 7.6 kg  
 E, MX, SP, TW models: 7.9 kg

Specifications and external appearance are subject to change without notice.

- Abbreviation  
 AUS : Australian model  
 CND : Canadian model  
 E51 : Chilean and Peruvian models  
 KR : Korean model  
 MX : Mexican model  
 SP : Singapore model  
 TW : Taiwan model

## COPYRIGHT

Check copyright laws relevant to recordings from discs, tuner or tape for the country where the unit is to be used.

Licensed by BBE Sound, Inc. under USP4638258, 5510752 and 5736897.

## SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer: Check the antenna terminals, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.


## LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes.). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers’ instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)


## CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.



This appliance is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT MARKING is located on the rear exterior.

The following caution label is located inside the unit.

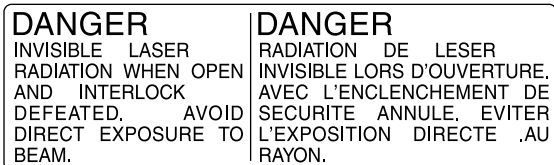

## SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  $\Delta$  OR DOTTED LINE WITH MARK  $\Delta$  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

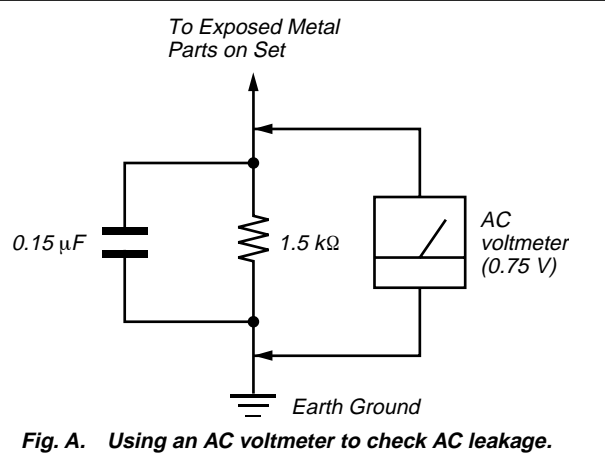


Fig. A. Using an AC voltmeter to check AC leakage.

## Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

## Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

## ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE  $\Delta$  SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

**TABLE OF CONTENTS**

<b>1. SERVICING NOTES</b> .....	4	<b>7. EXPLODED VIEWS</b>	
<b>2. GENERAL</b>		7-1. Case Section .....	49
Location of Controls .....	7	7-2. Front Panel Section-1 .....	50
<b>3. DISASSEMBLY</b>		7-3. Front Panel Section-2 .....	51
3-1. Disassembly Flow .....	9	7-4. Front Panel Section-3 .....	52
3-2. Case (SIDE-L/R) .....	10	7-5. Front Panel Section-4 .....	53
3-3. Case (Top) .....	10	7-6. Chassis Section .....	54
3-4. Tray Panel .....	11	7-7. CD Mechanism Deck Section-1 (CDM74-K6BD71AS, CDM74S-K6BD71A, CDM74S-K6BD72) .....	55
3-5. CD Mechanism Deck (CDM74-K6BD71AS, CDM74S-K6BD71A, CDM74S-K6BD72) .....	11	7-8. CD Mechanism Deck Section-2 (CDM74-K6BD71AS, CDM74S-K6BD71A, CDM74S-K6BD72) .....	56
3-6. Front Panel Section .....	12	7-9. CD Mechanism Deck Section-3 (CDM74-K6BD71A, CDM74S-K6BD71A, CDM74S-K6BD72) .....	57
3-7. Mechanical Deck (CWM43FF13, CWM43FR16, CWM43FR26) .....	12	7-10. Base Unit Section (BU-K6BD71A, BU-K6BD72) .....	58
3-8. Rear Cabinet Section .....	13	<b>8. ELECTRICAL PARTS LIST</b> .....	59
3-9. PT Board, MAIN Board .....	13	• Abbreviation	
3-10. Table Assy .....	14	AUS : Australian model	
3-11. Motor (TB) Board .....	14	CND : Canadian model	
3-12. Motor (LD) Board .....	15	E51 : Chilean and Peruvian models	
3-13. Base Unit (BU-K6BD71A, BU-K6BD72) .....	15	KR : Korean model	
3-14. Motor Gear Assy (Sled) (M701), BD Board .....	16	MX : Mexican model	
3-15. Optical Pick-up (KSS-213D) .....	16	SP : Singapore model	
<b>4. TEST MODE</b> .....	17	TW : Taiwan model	
<b>5. ELECTRICAL ADJUSTMENTS</b>			
CD Section .....	19		
<b>6. DIAGRAMS</b>			
6-1. Block Diagram – CD Section – .....	20		
6-2. Block Diagram – TUNER/TAPE/PANEL Section – .....	21		
6-3. Block Diagram – AMP/POWER SUPPLY Section – .....	22		
6-4. Note for Printed Wiring Boards and Schematic Diagrams .....	23		
6-5. Printed Wiring Board – BD Section – (AEP, UK, CIS, E51, MX) .....	24		
6-6. Schematic Diagram – BD Section – (AEP, UK, CIS, E51, MX) .....	25		
6-7. Printed Wiring Board – BD Section – (US, CND, E, SP, TW, KR, AUS) .....	26		
6-8. Schematic Diagram – BD Section – (US, CND, E, SP, TW, KR, AUS) .....	27		
6-9. Printed Wiring Boards – CHANGER Section – .....	28		
6-10. Schematic Diagram – CHANGER Section – .....	29		
6-11. Schematic Diagram – MAIN Section (1/4) – .....	30		
6-12. Schematic Diagram – MAIN Section (2/4) – .....	31		
6-13. Schematic Diagram – MAIN Section (3/4) – .....	32		
6-14. Schematic Diagram – MAIN Section (4/4) – .....	33		
6-15. Printed Wiring Board – MAIN Section – .....	34		
6-16. Printed Wiring Board – HP Section – .....	35		
6-17. Schematic Diagram – HP Section – .....	35		
6-18. Printed Wiring Board – PANEL Section – .....	36		
6-19. Schematic Diagram – PANEL Section – .....	37		
6-20. Printed Wiring Boards – KEY Section – .....	38		
6-21. Schematic Diagram – KEY Section – .....	39		
6-22. Printed Wiring Board – PT Section – (Except E, E51, SP, TW) .....	40		
6-23. Schematic Diagram – PT Section – (Except E, E51, SP, TW) .....	41		
6-24. Printed Wiring Board – PT Section – (E, E51, SP, TW) .....	42		
6-25. Schematic Diagram – PT Section – (E, E51, SP, TW) .....	43		
6-26. IC Pin Function Description .....	47		

## SECTION 1 SERVICING NOTES

### NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic break-down because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.

During repair, pay attention to electrostatic break-down and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

### NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

### LASER DIODE AND FOCUS SEARCH OPERATION CHECK

Carry out the "S curve check" in "CD section adjustment" and check that the S curve waveforms is output three times.

### UNLEADED SOLDER

Boards requiring use of unleaded solder are printed with the lead-free mark (LF) indicating the solder contains no lead.

(Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size)

#### : LEAD FREE MARK

Unleaded solder has the following characteristics.

- Unleaded solder melts at a temperature about 40 °C higher than ordinary solder.

Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time.

Soldering irons using a temperature regulator should be set to about 350 °C.

Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!

- Strong viscosity


Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.

- Usable with ordinary solder

It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

### • MODEL IDENTIFICATION

– Back Panel –

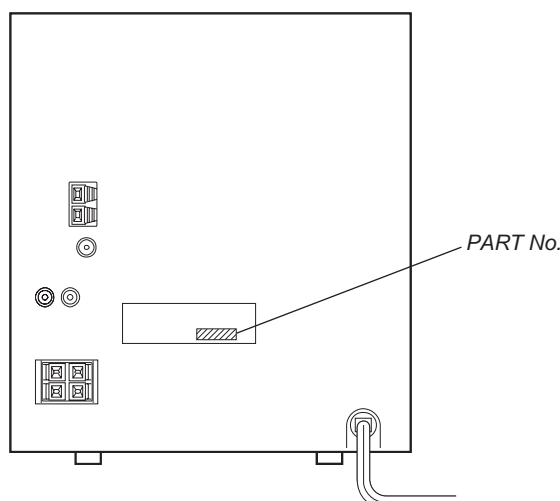


MODEL	PART No.
US model	4-245-154-0□
Chilean and Peruvian models	4-245-154-2□
CIS model	4-245-154-4□
E, Singapore and Taiwan models	4-245-154-6□
Korean and Australian models	4-245-154-8□
AEP and UK models	4-245-280-0□
Mexican model (made in Mexico)	4-245-280-3□
Mexican model (made in China)	4-245-280-4□
Canadian model	4-245-280-5□

HOW TO OPEN THE DISC TRAY WHEN POWER SWITCH TURNS OFF.

1 Remove the case (side-L).


2 Turn the loading gear in the direction of arrow A.

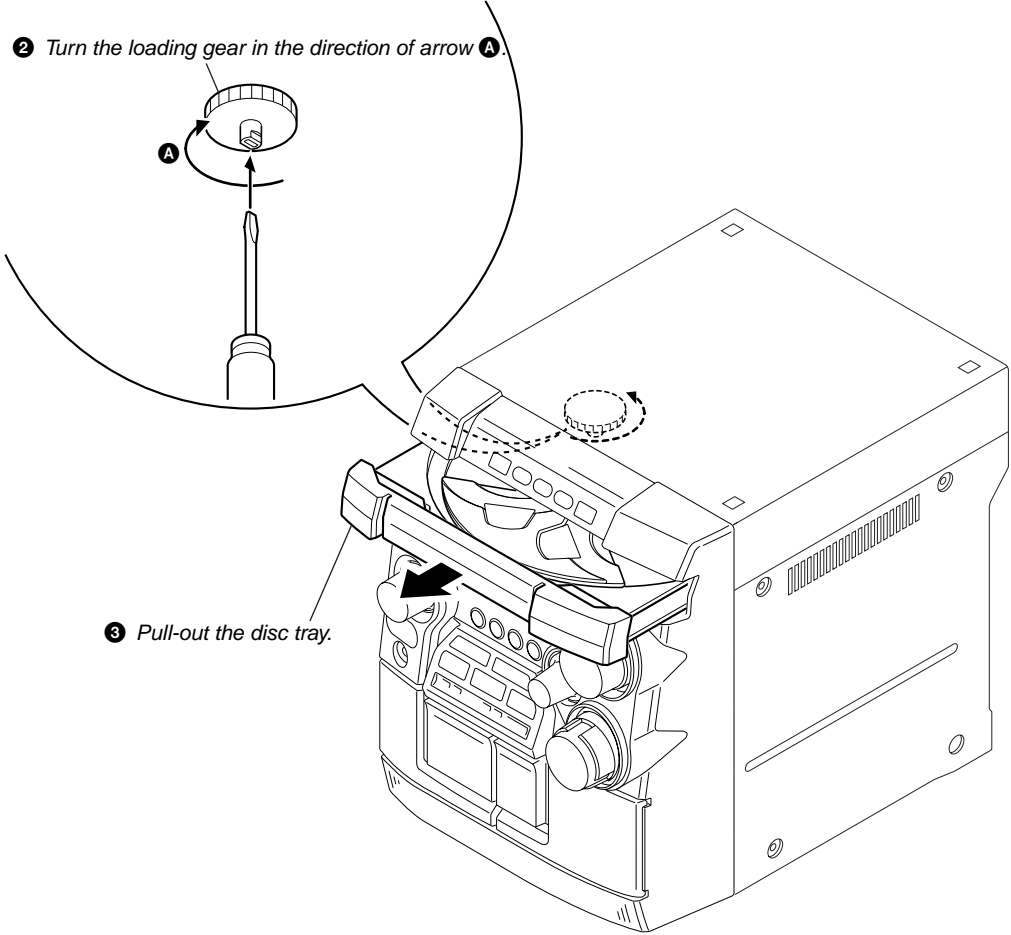


3 Pull-out the disc tray.

# CX-JN5

## SERVICE POSITION – CD mechanism deck –

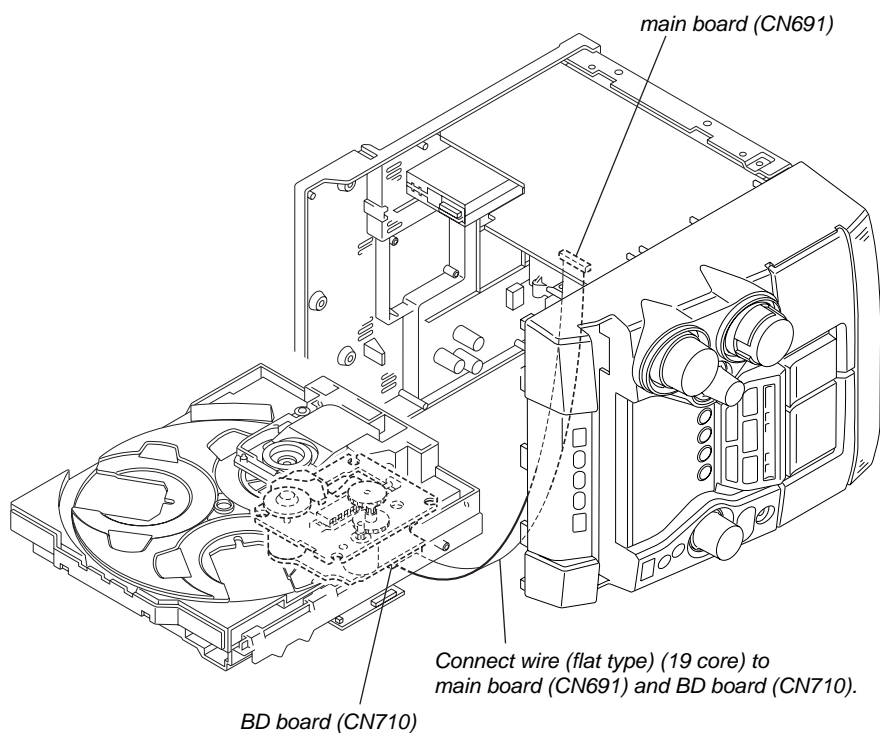

## – Tape mechanism deck –

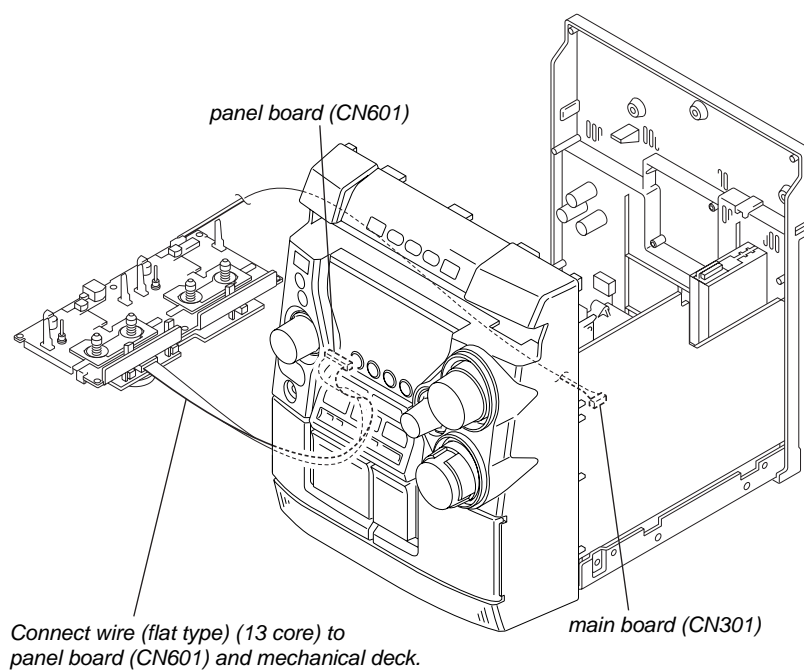


## SECTION 2 GENERAL

This section is extracted from instruction manual.

### • LOCATION OF CONTROLS

#### Main unit: front

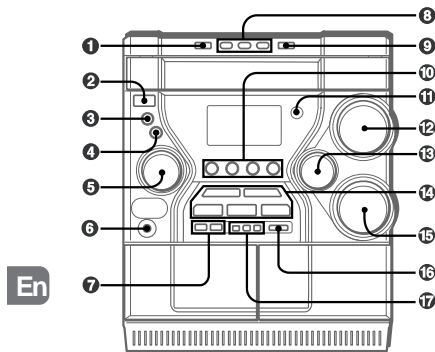


En

- 1 DISC CHANGE**  
Rotates the CD trays.
- 2 POWER  $\odot$ STANDBY/ON**  
Switches the unit on and off (standby).  
The red indicator flashes when receiving a signal from the remote.
- 3 MODE**  
Selects various modes (ECO and Repeat/Shuffle/Programmed playback, etc.) when used in combination with ENTER and MULTI JOG.
- 4 ENTER**  
Fixes the modes and the time (ECO, Repeat/Shuffle/Programmed playback, clock, and timer, etc.) when used in combination with ENTER and MULTI JOG.

- 5 MULTI JOG**  
When used in combination with ENTER and MULTI JOG, CD: selects a track and Repeat/Shuffle/Programmed playback.  
Tuner: selects a preset station.  
Tape: selects a reverse mode and specifies tape length.  
Clock and Timer: sets the time.  
i-Bass: selects a frequency range.  
Spectrum analyzer, ECO and Dimmer: selects the mode.
- 6 PHONES jack**  
Plug in here an optional headphones set with a mini stereo plug ( $\phi 3.5$  mm). Speaker output is canceled.
- 7 SYNC DUB**  
Starts dubbing a whole tape.  
● **REC/REC MUTING**  
Starts recording.
- 8 DISC DIRECT PLAY 1-3**  
Selects a disc.
- 9  $\triangle$ OPEN/CLOSE**  
Opens or closes the disc compartment.
- 10 TAPE A/B**  
Selects Tape function, and deck A or B.  
**TUNER/BAND**  
Selects Tuner function and the radio band.  
**VIDEO/AUX**  
Selects the function of external equipment connected to VIDEO/AUX jacks.  
**CD**  
Selects CD function.
- 11 Remotesensor**  
Receives a signal from the remote.
- 12 VOLUME**  
Adjusts the volume.

- 13 TREBLE**  
Enhances high frequency sound.
- 14  $\blacktriangleleft$ DIR (TAPE B)/PRESET**  
When the unit is turned off: activates or deactivates DEMO.  
CD and Tape: starts playback.  
Tuner: tunes into a preset station.  
**■ STOP/CLEAR**  
CD and Tape: stops playback.  
Tuner: clears a station preset.  
 **$\blacktriangleleft$ TUNING DOWN,  $\blacktriangleright$ TUNING UP**  
CD: searches a track in fast forward or fast reverse playback when held down.  
Tape: fast forward or rewinds the tape.  
Tuner: manually tunes down or up within the band.  
**|| PAUSE/SET**  
CD and Tape: pauses playback.  
Tuner: stores the received station into preset.
- 15 BASS**  
Emphasizes low frequency sound.
- 16 i-Bass**  
Produces rich and clear low frequency sound.
- 17 DISPLAY**  
Displays the time and the remaining time for CD.  
**ALBUM  $\nabla$ ,  $\blacktriangle$  (AEP, UK, CIS, Chilean, Peruvian and Mexican models)**  
Selects a previous album or a succeeding album MP3-CDs.


#### Main unit: rear

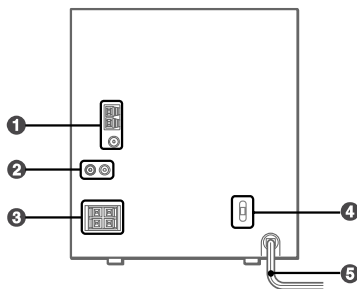

- 1 AM LOOP, Y FM 75  $\Omega$  terminals**  
Plug in the supplied AM and FM antennas here.
- 2 VIDEO/AUX jacks**  
Accepts analog sound signals from external equipment. Connect using an optional connecting cable with RCA phono plugs (red plug to R jack, white plug to L jack). Refer also to the operating instructions of your equipment. To switch function to external input, press VIDEO/AUX.  
**Tip:**  
To change the displayed name for this function, turn the unit on, then hold down VIDEO/AUX and press POWER on the unit. Repeat the procedure to select "VIDEO", "AUX" or "TV".
- 3  $\boxplus$  SPEAKER terminals**  
Connect the speaker cord of the supplied front speakers here.
- 4 AC voltage selector (E, Chilean, Peruvian, Singapore, Taiwan)**  
Switches AC voltage between 110 - 120V and 220 - 240V.  
Make sure it matches your local voltage.
- 5 AC power cord**

## Remote control

Refer to the pages indicated in parentheses for details.

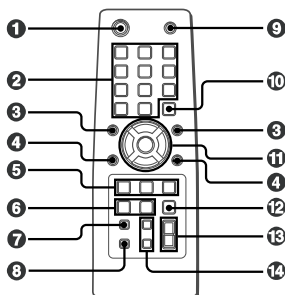

Buttons with the same or similar names with the main unit basically have the same function.

### 1 POWER

### 2 1-0/10, +10

CD: selects a CD track of the specified number.  
Tuner: tunes into the station with the specified preset number.

The numbered buttons take on these functions below when pressed with **SHIFT** held down:

### EDIT

Enters AI Edit Recording or Programmed Edit Recording mode when pressed in stop mode.

### BAND

Selects Tuner function and the radio band.

### TAPE A/B

### SPECTRUM

Changes the spectrum analyzer display.

### TUNER MODE

Switches between stereo or monaural FM reception.

### 3 ◀▶, ▶▶

CD: selects a track.  
Tuner: selects a preset station.  
Tape: specifies tape length.  
BASS and TREBLE: adjusts the level.  
Clock and Timer: sets the time.

### 4 ALBUM ∨, ∧

Selects a previous album or a succeeding album.

### 5 PLAY MODE

CD: selects Shuffle, Programmed playback, etc.  
Tape: selects a reverse mode (deck B only).

### REPEAT

Enters CD repeat playback mode.

### ENTER

### 6 CLOCK/TIMER/SET

Enters timer setting mode.

### CLOCK/TIMER/SELECT

Selects timer playback, timer recording or timer off.

### 7 DISPLAY

### 8 SHIFT

Hold down when pressing a numbered button to change its function to that printed above the number.

*e.g.)*

"Press **SHIFT+BAND** on the remote" indicates "Hold down **SHIFT** and press '2' (BAND)". Doing so makes you be able to select Tuner function and the radio band.

### 9 FUNCTION

Switches the active function among CD, TAPE, TUNER and VIDEO (AUX or TV).

### 10 DISC SKIP

Select a disc.

### 11 ▶/◀▶

When the unit is turned off: activates or deactivates DEMO.

CD and Tape: starts playback.



CD and Tape: stops playback.



CD: searches a track in fast forward or fast reverse playback when held down.

Tape: fast forwards or rewinds the tape.

Tuner: manually tunes down or up within the band.



CD and Tape: pauses playback.

### 12 SLEEP

Switches the sleep-timer on/off and selects the duration.

### 13 VOLUME (+, -)

Adjusts the volume.

### 14 SOUND

Selects BASS or TREBLE setting mode

### CLEAR

Clears a track of the CD programmed playback and Radio preset station.

#### Note

The button not explained above (**KARAOKE**) does not operate for US, Canadian, AEP, UK and CIS models.

The buttons not explained above (**ALBUM ∨, ∧**) do not operate for US, Canadian, E, Singapore, Taiwan, Korean and Australian models.

En

En

## Setting the clock

Use the remote.

### 1 Press CLOCK/TIMER/SET.

Go to step 3 when the time appears and the 'hour' flashes.

### 2 Press ◀▶ or ▶▶ repeatedly until "CLOCK SET" appears in the display and then press ENTER.

### 3 Press ◀▶ or ▶▶ repeatedly to set the hour and then press ENTER.

### 4 Press ◀▶ or ▶▶ repeatedly to set the minute and then press ENTER.

The time display stops flashing and the clock starts from 00 seconds.

• MULTI JOG is also available in place of ◀▶ or ▶▶.

### To display the time

Press DISPLAY on the remote. The time will be displayed for 6 seconds.

#### Tip:

"AM 12:00" indicates midnight and "PM 12:00" noon.

### If "-: -:" appears when the unit is turned off


There has been a power interruption. Re-set the clock.




## SECTION 3 DISASSEMBLY

• This set can be disassembled in the order shown below.

### 3-1. DISASSEMBLY FLOW


**Note 1:** The process described in  can be performed in any order.

**Note 2:** Without completing the process described in , the next process can not be performed.

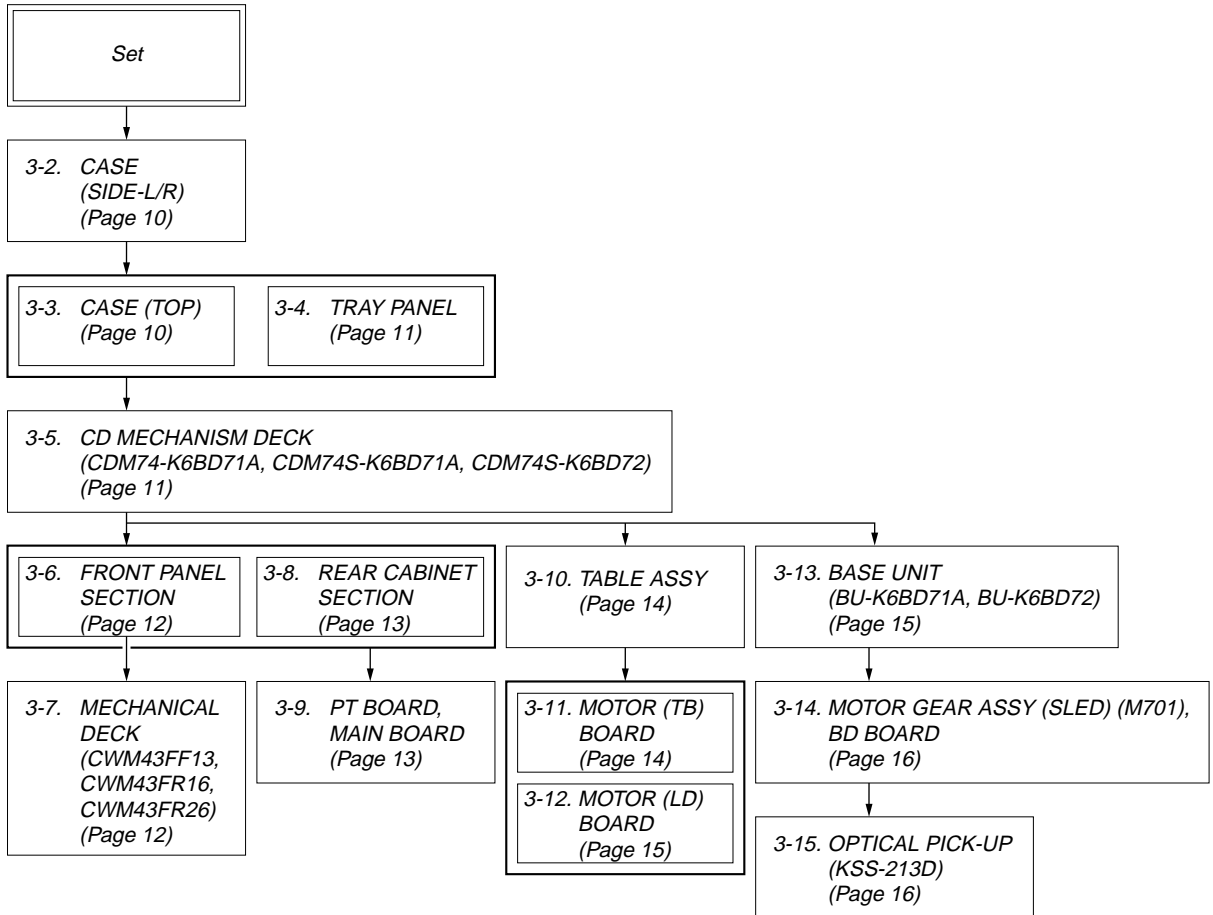


**Note:** Follow the disassembly procedure in the numerical order given.


## 3-2. CASE (SIDE-L/R)

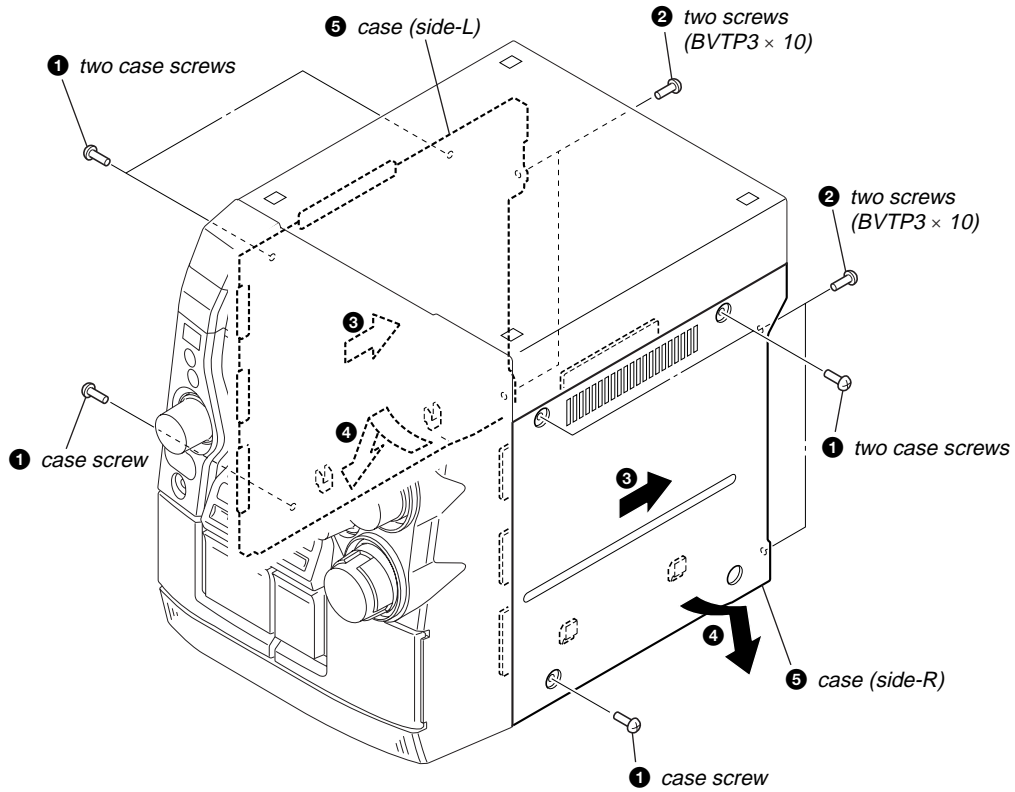


## 3-3. CASE (TOP)

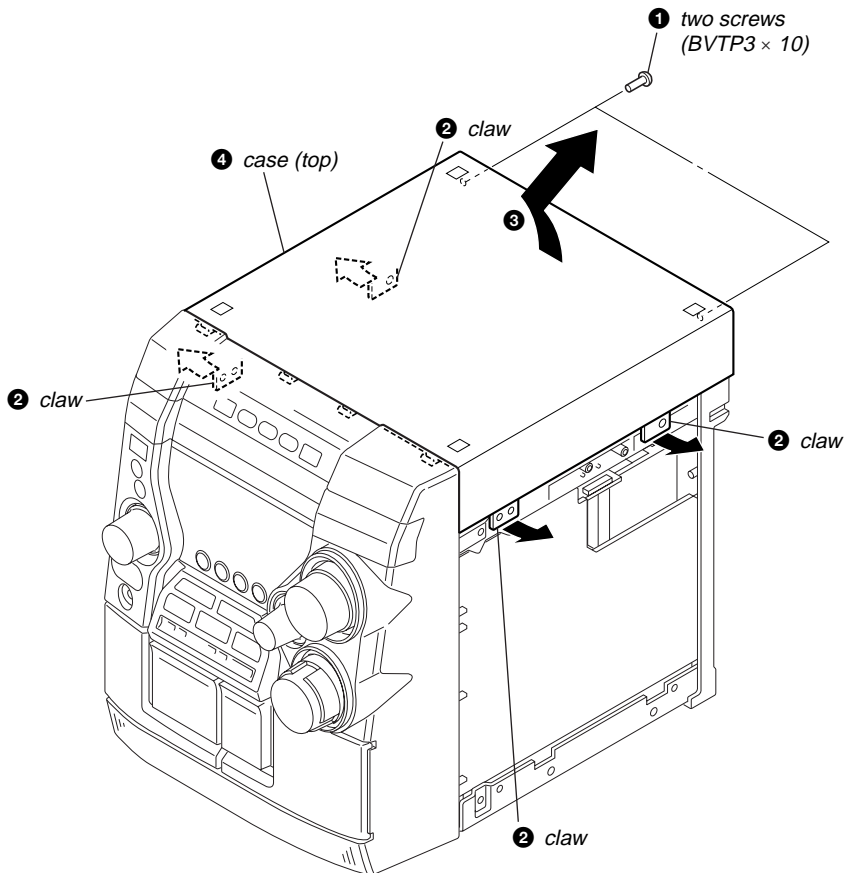


### 3-4. TRAY PANEL

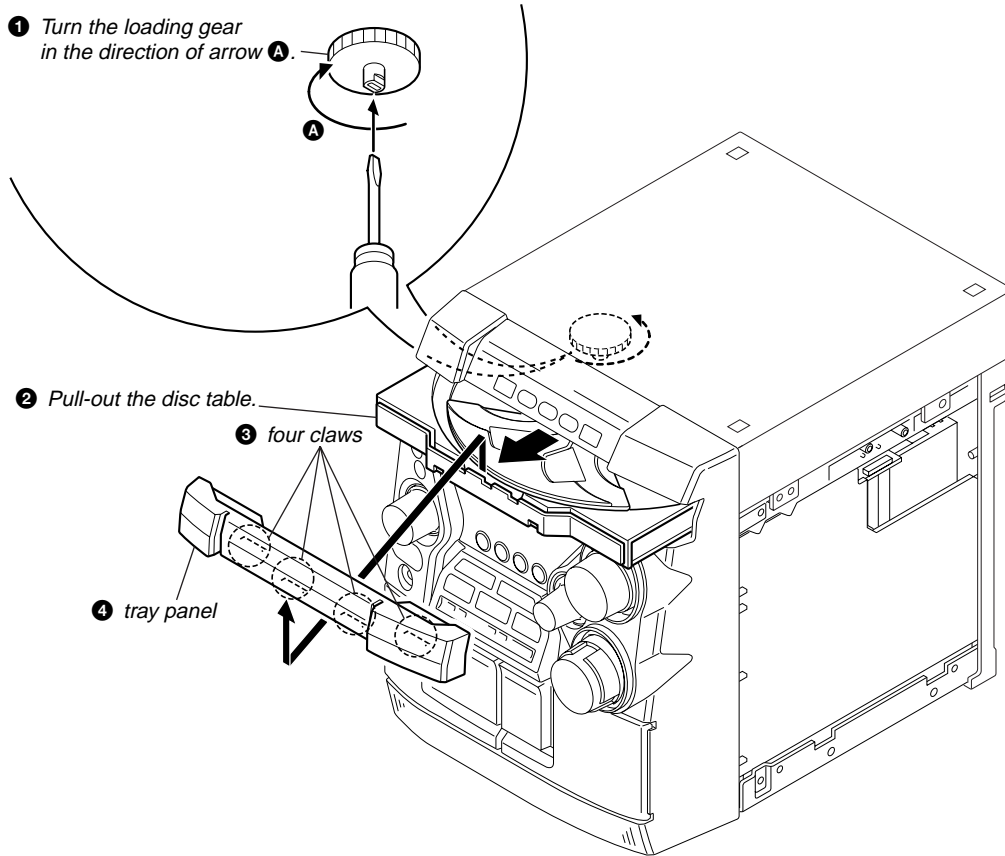


### 3-5. CD MECHANISM DECK (CDM74-K6BD71AS, CDM74S-K6BD71A, CDM74S-K6BD72)

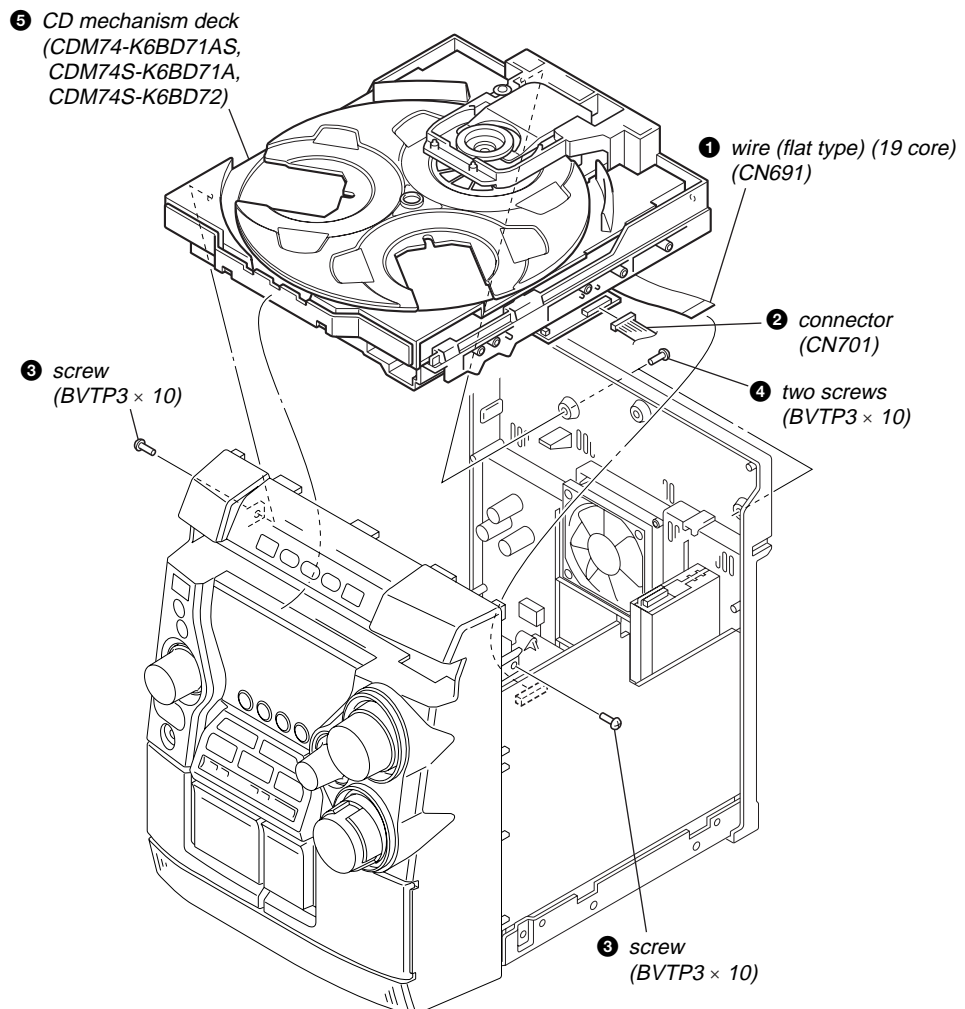


### 3-6. FRONT PANEL SECTION

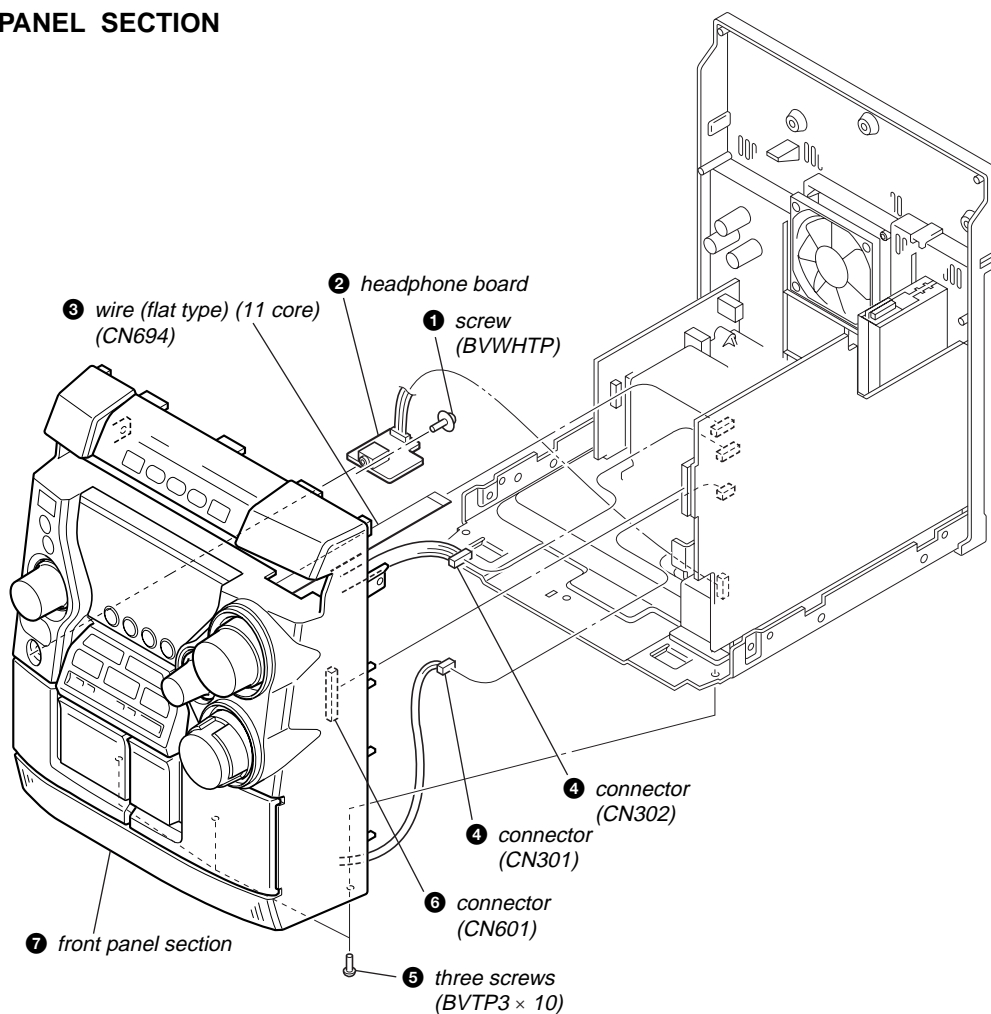

### 3-7. MECHANICAL DECK (CWM43FF13, CWM43FR16, CWM43FR26)

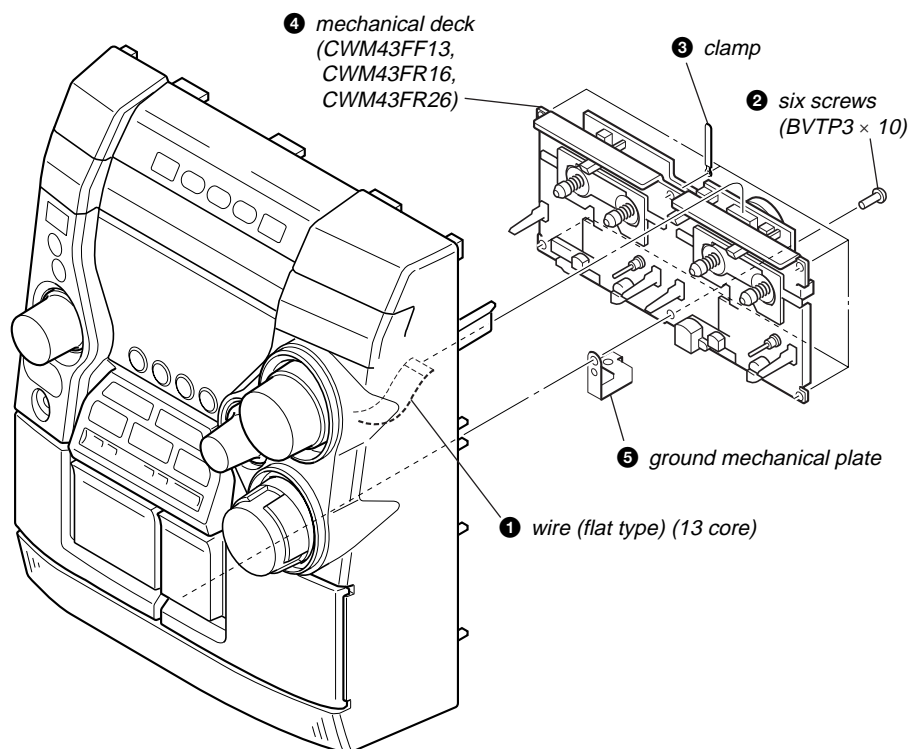

### 3-8. REAR CABINET SECTION

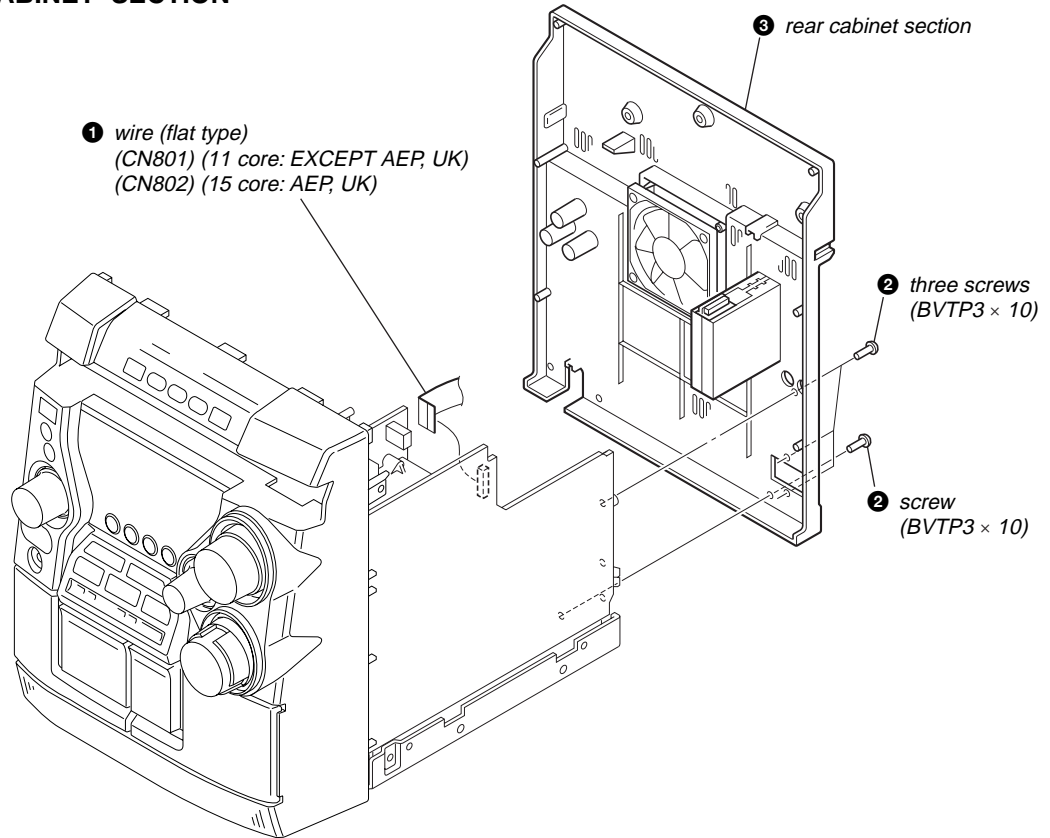

### 3-9. PT BOARD, MAIN BOARD

• Abbreviation

AUS : Australian model

CND : Canadian model


E51 : Chilean and Peruvian models

KR : Korean model


MX : Mexican model

SP : Singapore model


TW : Taiwan model

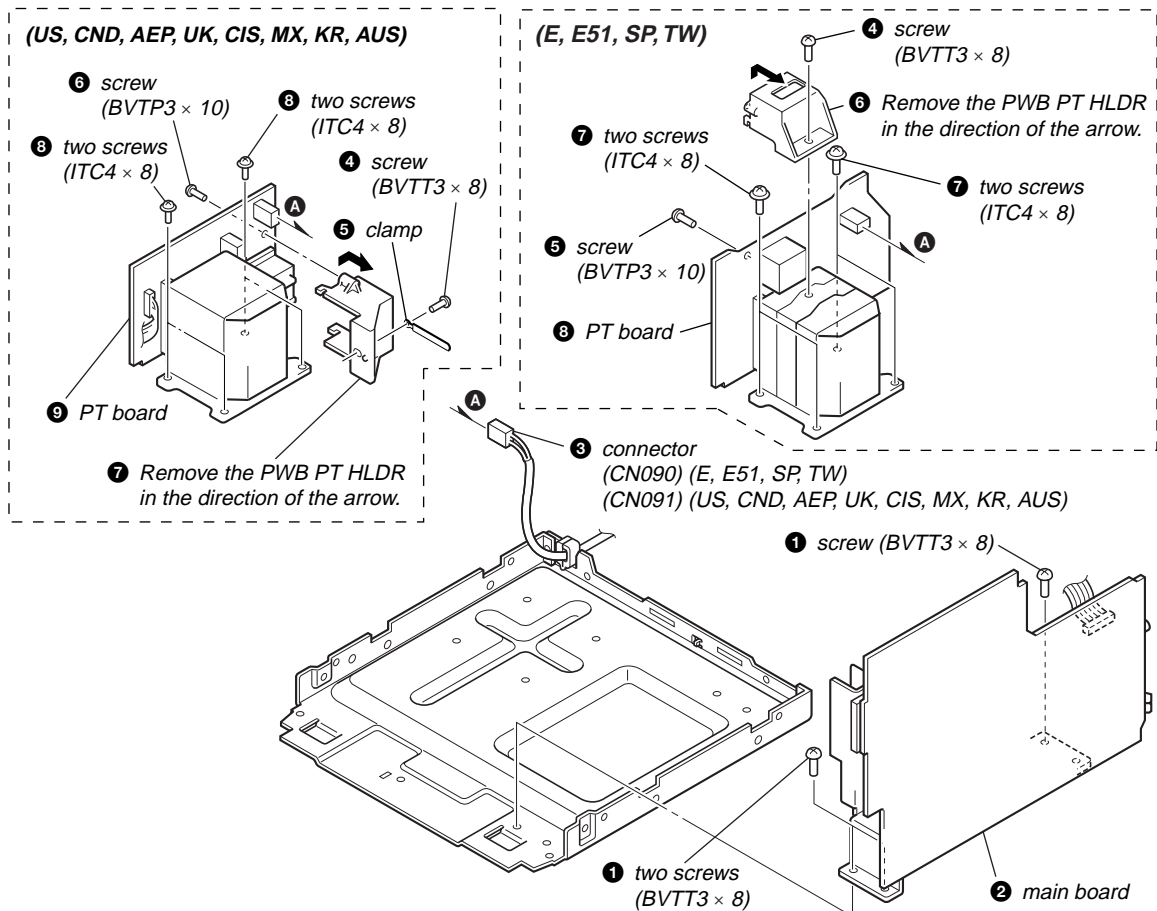


3-10. TABLE ASSY

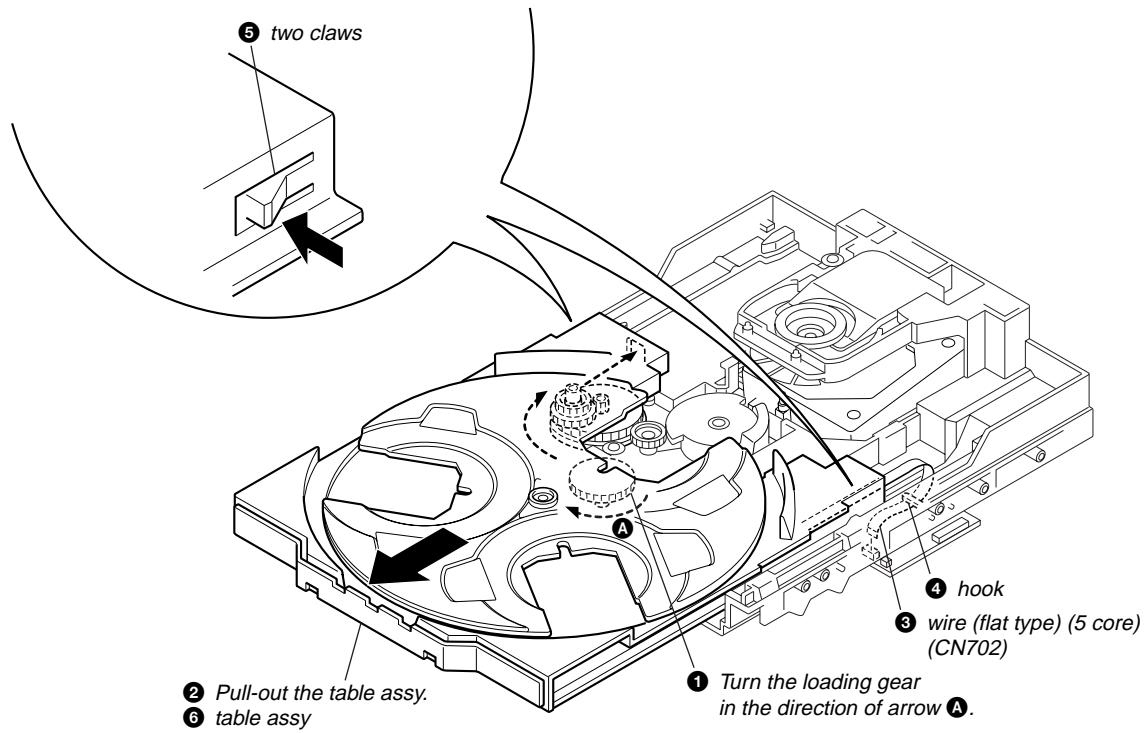


3-11. MOTOR (TB) BOARD

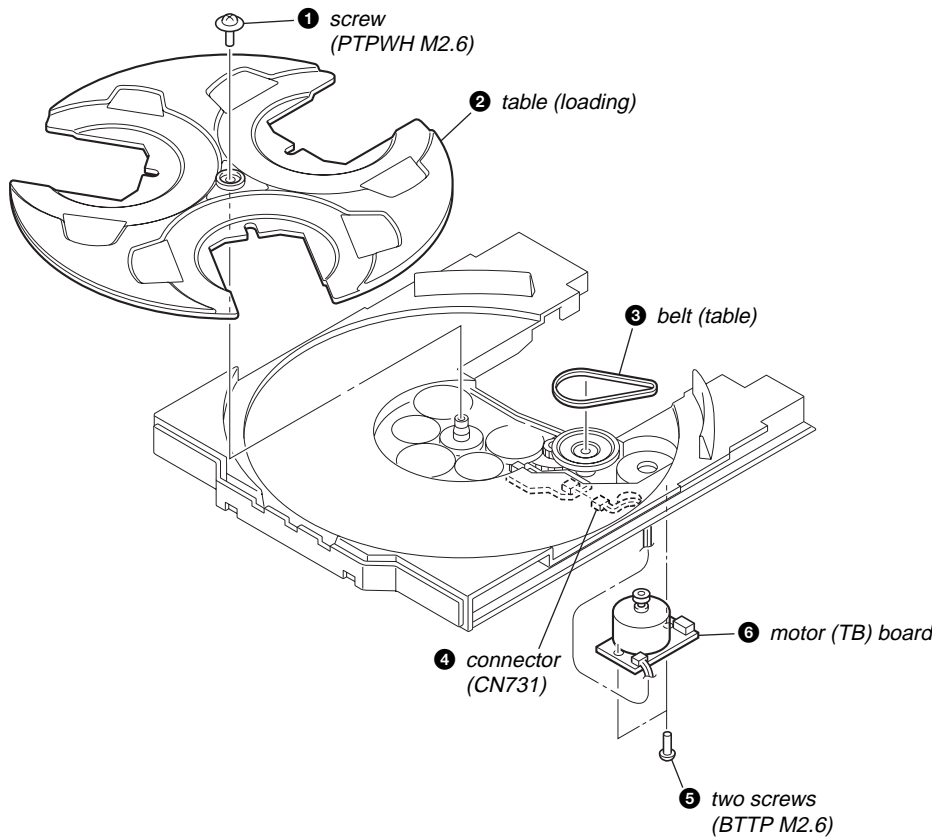


### 3-12. MOTOR (LD) BOARD

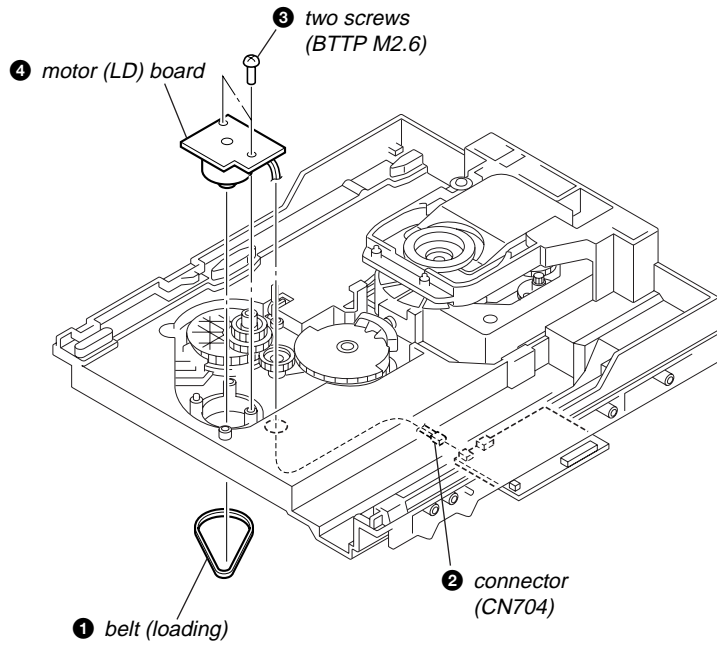


### 3-13. BASE UNIT (BU-K6BD71A, BU-K6BD72)

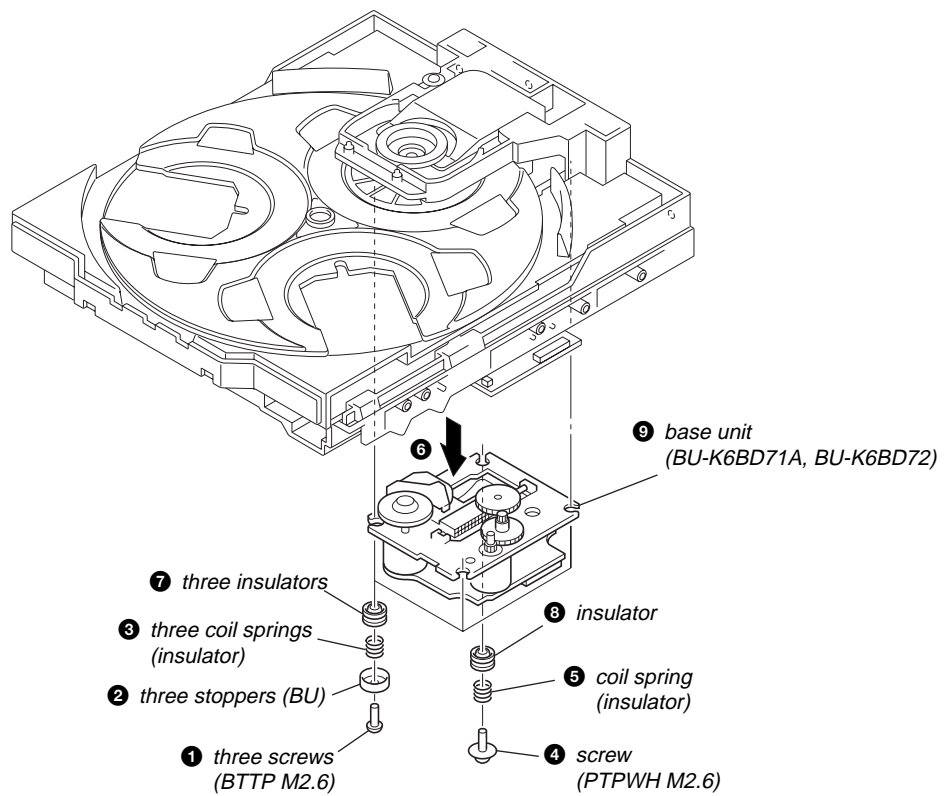

3-14. MOTOR GEAR ASSY (SLED) (M701), BD BOARD

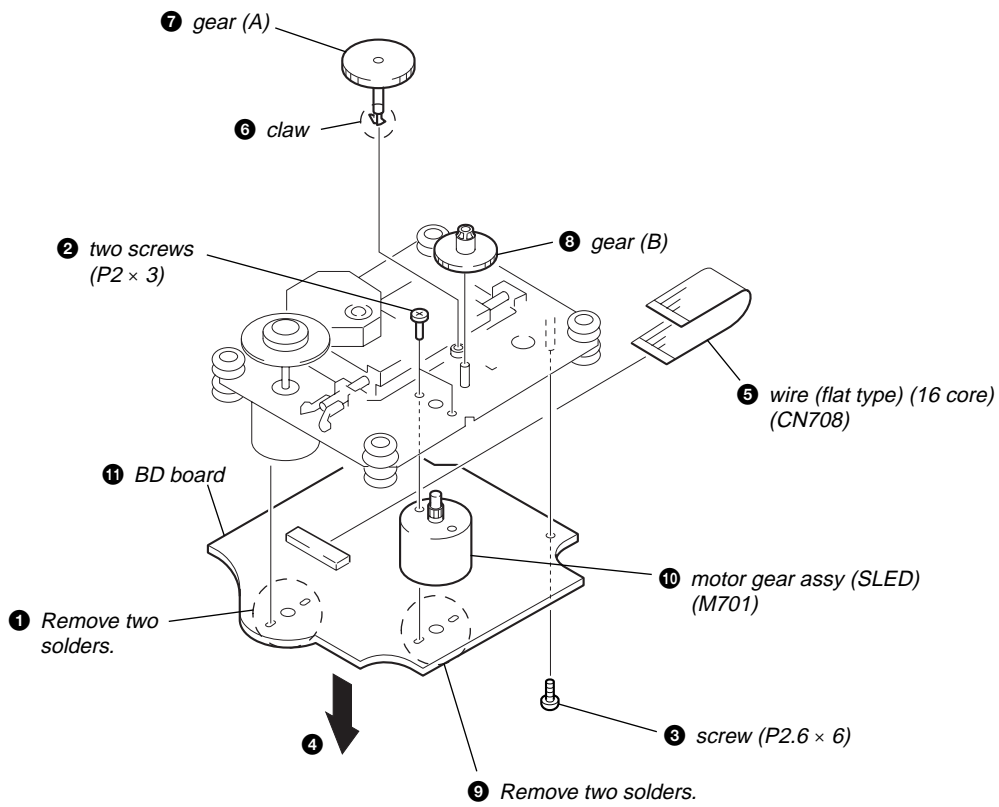

3-15. OPTICAL PICK-UP (KSS-213D)

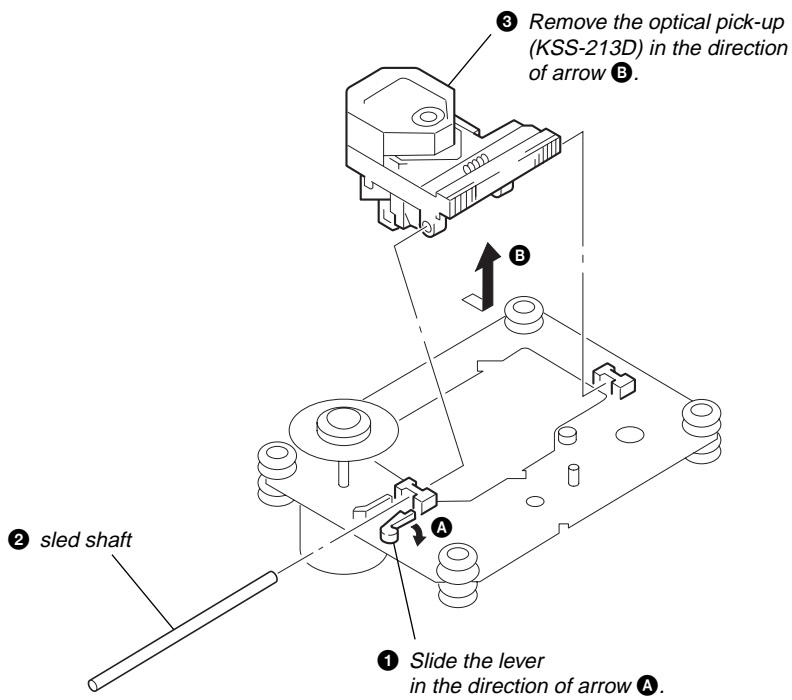



## SECTION 4 TEST MODE

### MC COLD RESET

- The cold reset clears all data including preset data stored in the RAM to initial conditions. Execute this mode when returning the set to the customer.

#### Procedure:

1. In the standby status, while pressing the **[■]** button, press the **[POWER]** button.
2. The set is reset, then becomes standby status.

### GC TEST MODE

#### Procedure:

1. Press the **[POWER]** button to turn the power on.
2. While pressing the **[■]** button, press the **[POWER]** button for 5 seconds.
3. It change displays in order of model type, version and suffix at 2 seconds interval, then the display is back to normal status.

### AMP TEST MODE

#### Procedure:

1. In the status where AC plug is disconnected, while pressing the **[VIDEO/AUX]** button, connect the AC plug to turn the power on. Then enter the AMP test mode and display "AMP TEST".
2. If turn the **[VOLUME]** knob clockwise, it displays "VOLUME MAX", and if turn the knob counterclockwise, it displays "VOLUME 0".
3. If the **[TREBLE]** and **[BASS]** knobs are turned clockwise or counterclockwise, it change displays in order of "EQ MAX", "EQ MIN" and "EQ FLAT".
4. To release from this mode, disconnect the AC plug and turn the power off.

### DISC TRAY LOCK

#### Procedure:

1. Press the **[POWER]** button to turn the power on.
2. While pressing the **[■]** button, press the **[▲ OPEN/CLOSE]** button for 5 seconds.
3. The message "LOCKED" is displayed and the tray is locked. (Even if exiting from this mode, the tray is still locked)
4. To release this lock, while pressing the **[■]** button, press the **[▲ OPEN/CLOSE]** button for 5 again.
5. The message "UNLOCKED" is displayed and the tray is unlocked.

### CD REPEAT 5 LIMIT CANCEL MODE

- Number of repeat for CD playback is 5 times when the repeat mode is "REPEAT". This mode enables CD to repeat playback for limitless times.

#### Procedure:

1. Press the **[POWER]** button to turn the power on.
2. In the repeat on status, while pressing the **[■]** button, press the **[CD]** button to enter the CD repeat 5 limit cancel mode and repeat mark blinks on the fluorescent indicator tube.
3. To release this mode, press the **[POWER]** button to turn the power off.

### CHANGE-OVER OF AM TUNER STEP BETWEEN 9 kHz AND 10 kHz

#### (Except AEP, UK and CIS models)

- A step of AM channels can be changed over between 9 kHz and 10 kHz.

#### Procedure:

1. Press the **[POWER]** button to turn the power on.
2. While pressing the **[TUNER]** button, press the **[POWER]** button to the display on fluorescent indicator tube changes to "AM 530 kHz" (10 kHz step) or "AM 531 kHz" (9 kHz step), and thus the channel step is changed over.

### FUNCTION CHANGE MODE

- Select either TV, VIDEO or AUX (MD) of the external function input.

#### Procedure:

1. Press the **[POWER]** button to turn the power on.
2. While pressing the **[VIDEO/AUX]** button, press the **[POWER]** button.
3. Each time this operation is operated, it change displays in order of "TV", "VIDEO" and "AUX".

## CD TEST MODE

- This mode can run the CD sled motor freely. Use this mode, for instance, when cleaning the pickup.

### Procedure:

1. In the status where AC plug is disconnected, while pressing the **[CD]** button, connect the AC plug to turn the power on.
2. When enter this mode, it displays "CD TEST" and few seconds later, all segments turn on of the fluorescent indicator tube.
3. To release from this mode, disconnect the AC plug and turn the power off.

In this mode, it operates as following table.

Button	Operation	Purpose of use
▶▶	Move the pick-up to outside track	Sled circuit check
◀◀	Move the pick-up to inside track	Tracking circuit check Mechanism operation check Optical pick-up check
▶	Playback a CD If it cannot focus on, it continuous focus search	Servo block check
■	When playback a CD: stop playback When stop a CD: display "READING" (blink) continuous laser diode on continuous focus search (not made focus on)	APC circuit check Laser current measure Focus search waveform check Tracking balance check
	Pause, Tracking servo off (ignore CLV error)	


## SECTION 5 ELECTRICAL ADJUSTMENTS

### CD SECTION

**Note:**


1. CD Block is basically designed to operate without adjustment. Therefore, check each item in order given.
2. Use YEDS-18 (3-702-101-01) unless otherwise indicated.
3. Use an oscilloscope with more than 10MΩ impedance.
4. Clean the object lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.

### S-CURVE CHECK

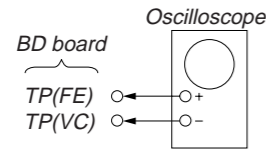


**Procedure :**

1. Connect an oscilloscope to TP (FE) and TP (VC).
2. Turn the power on.
3. Load a disc (YEDS-18) and actuate the focus search. (In consequence of open and close the disc tray, actuate the focus search)
4. Confirm that the oscilloscope waveform (S-curve) is symmetrical between A and B. And confirm peak to peak level within  $3 \pm 0.5$  Vp-p.

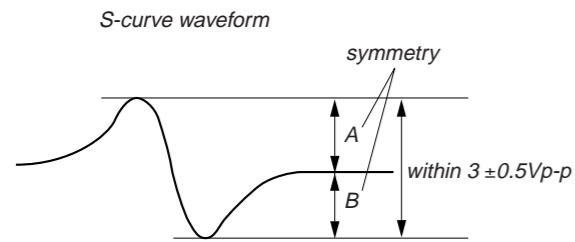

- Note:**
- Try to measure several times to make sure than the ratio of A : B or B : A is more than 10 : 7.
  - Take sweep time as long as possible and light up the brightness to obtain best waveform.


### RF LEVEL CHECK

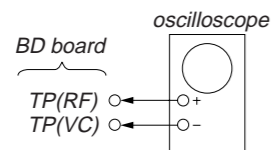

**Procedure :**


1. Connect an oscilloscope to TP (RF) and TP (VC).
2. Turn the power on.
3. Load a disc (YEDS-18) and playback.
4. Confirm that oscilloscope waveform is clear and check if RF signal level is correct or not.

**Note:** Clear RF signal waveform means that the shape “◇” can be clearly distinguished at the center of the waveform.

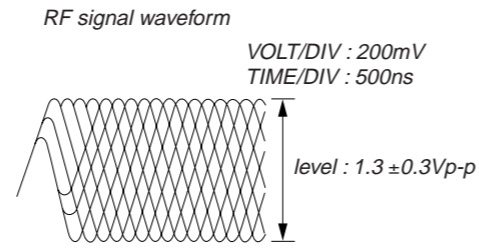


**Connecting Location: BD board**

– BD Board (Conductor side) –  
(AEP, UK, CIS, Chilean, Peruvian, Mexican models)

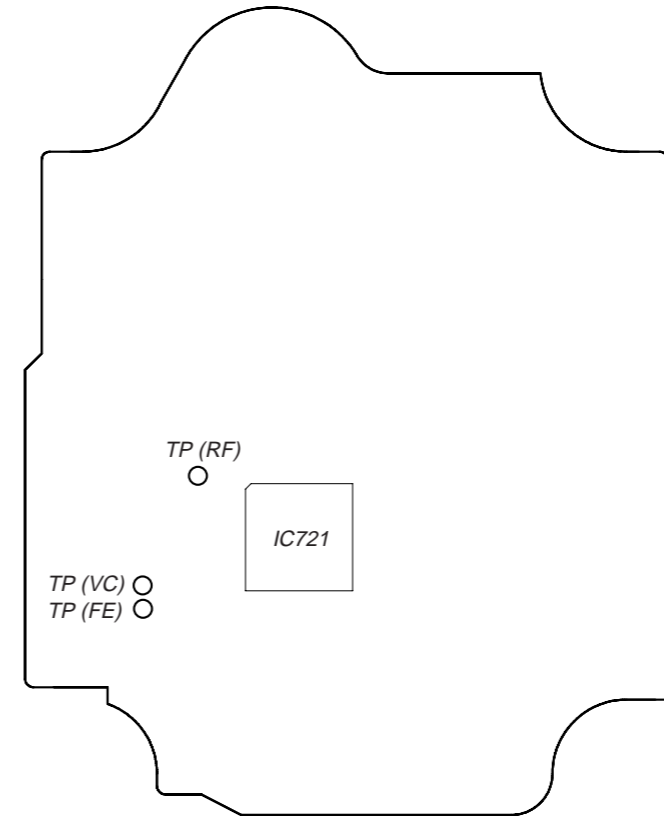


– BD Board (Conductor side) –  
(US, Canadian, E, Singapore, Taiwan, Korean, Australian models)

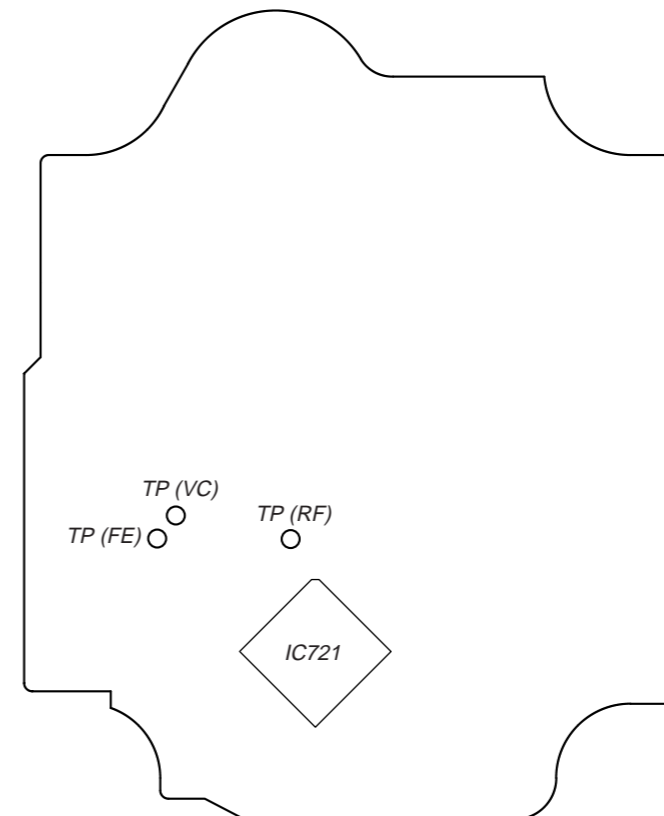


SECTION 6  
DIAGRAMS


6-1. BLOCK DIAGRAM – CD Section –

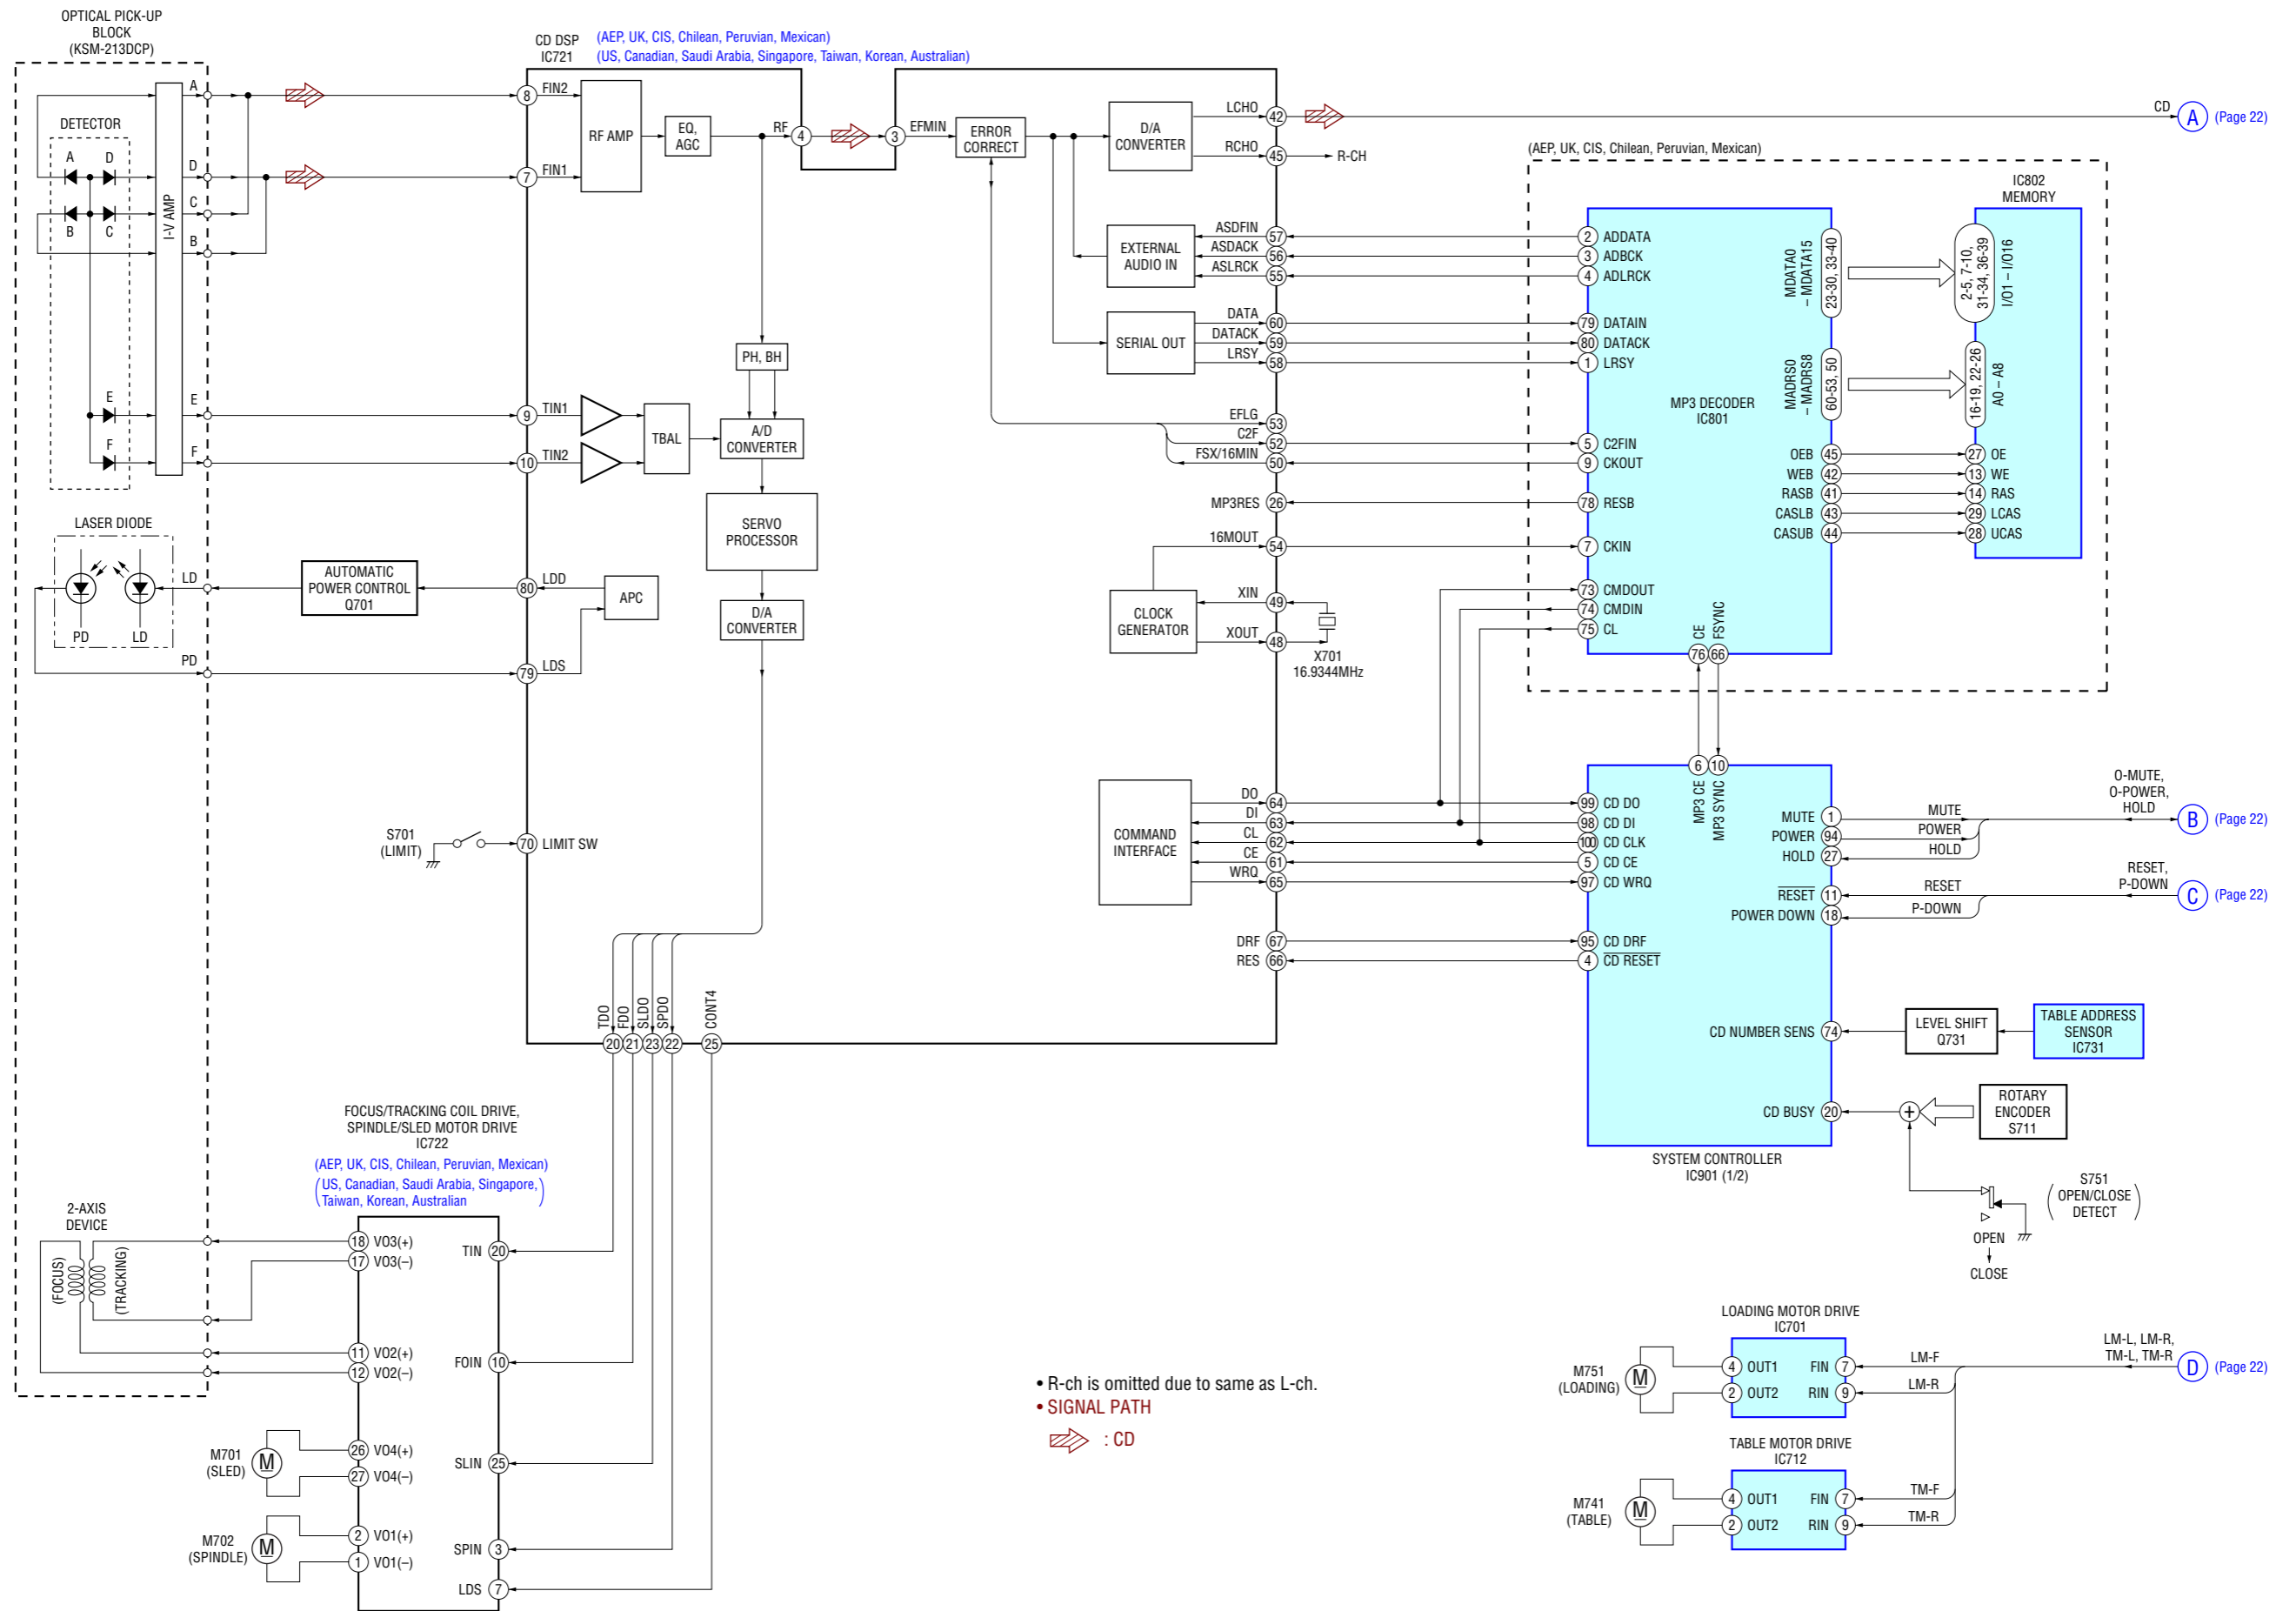

6-2. BLOCK DIAGRAM – TUNER/TAPE/PANEL Section –

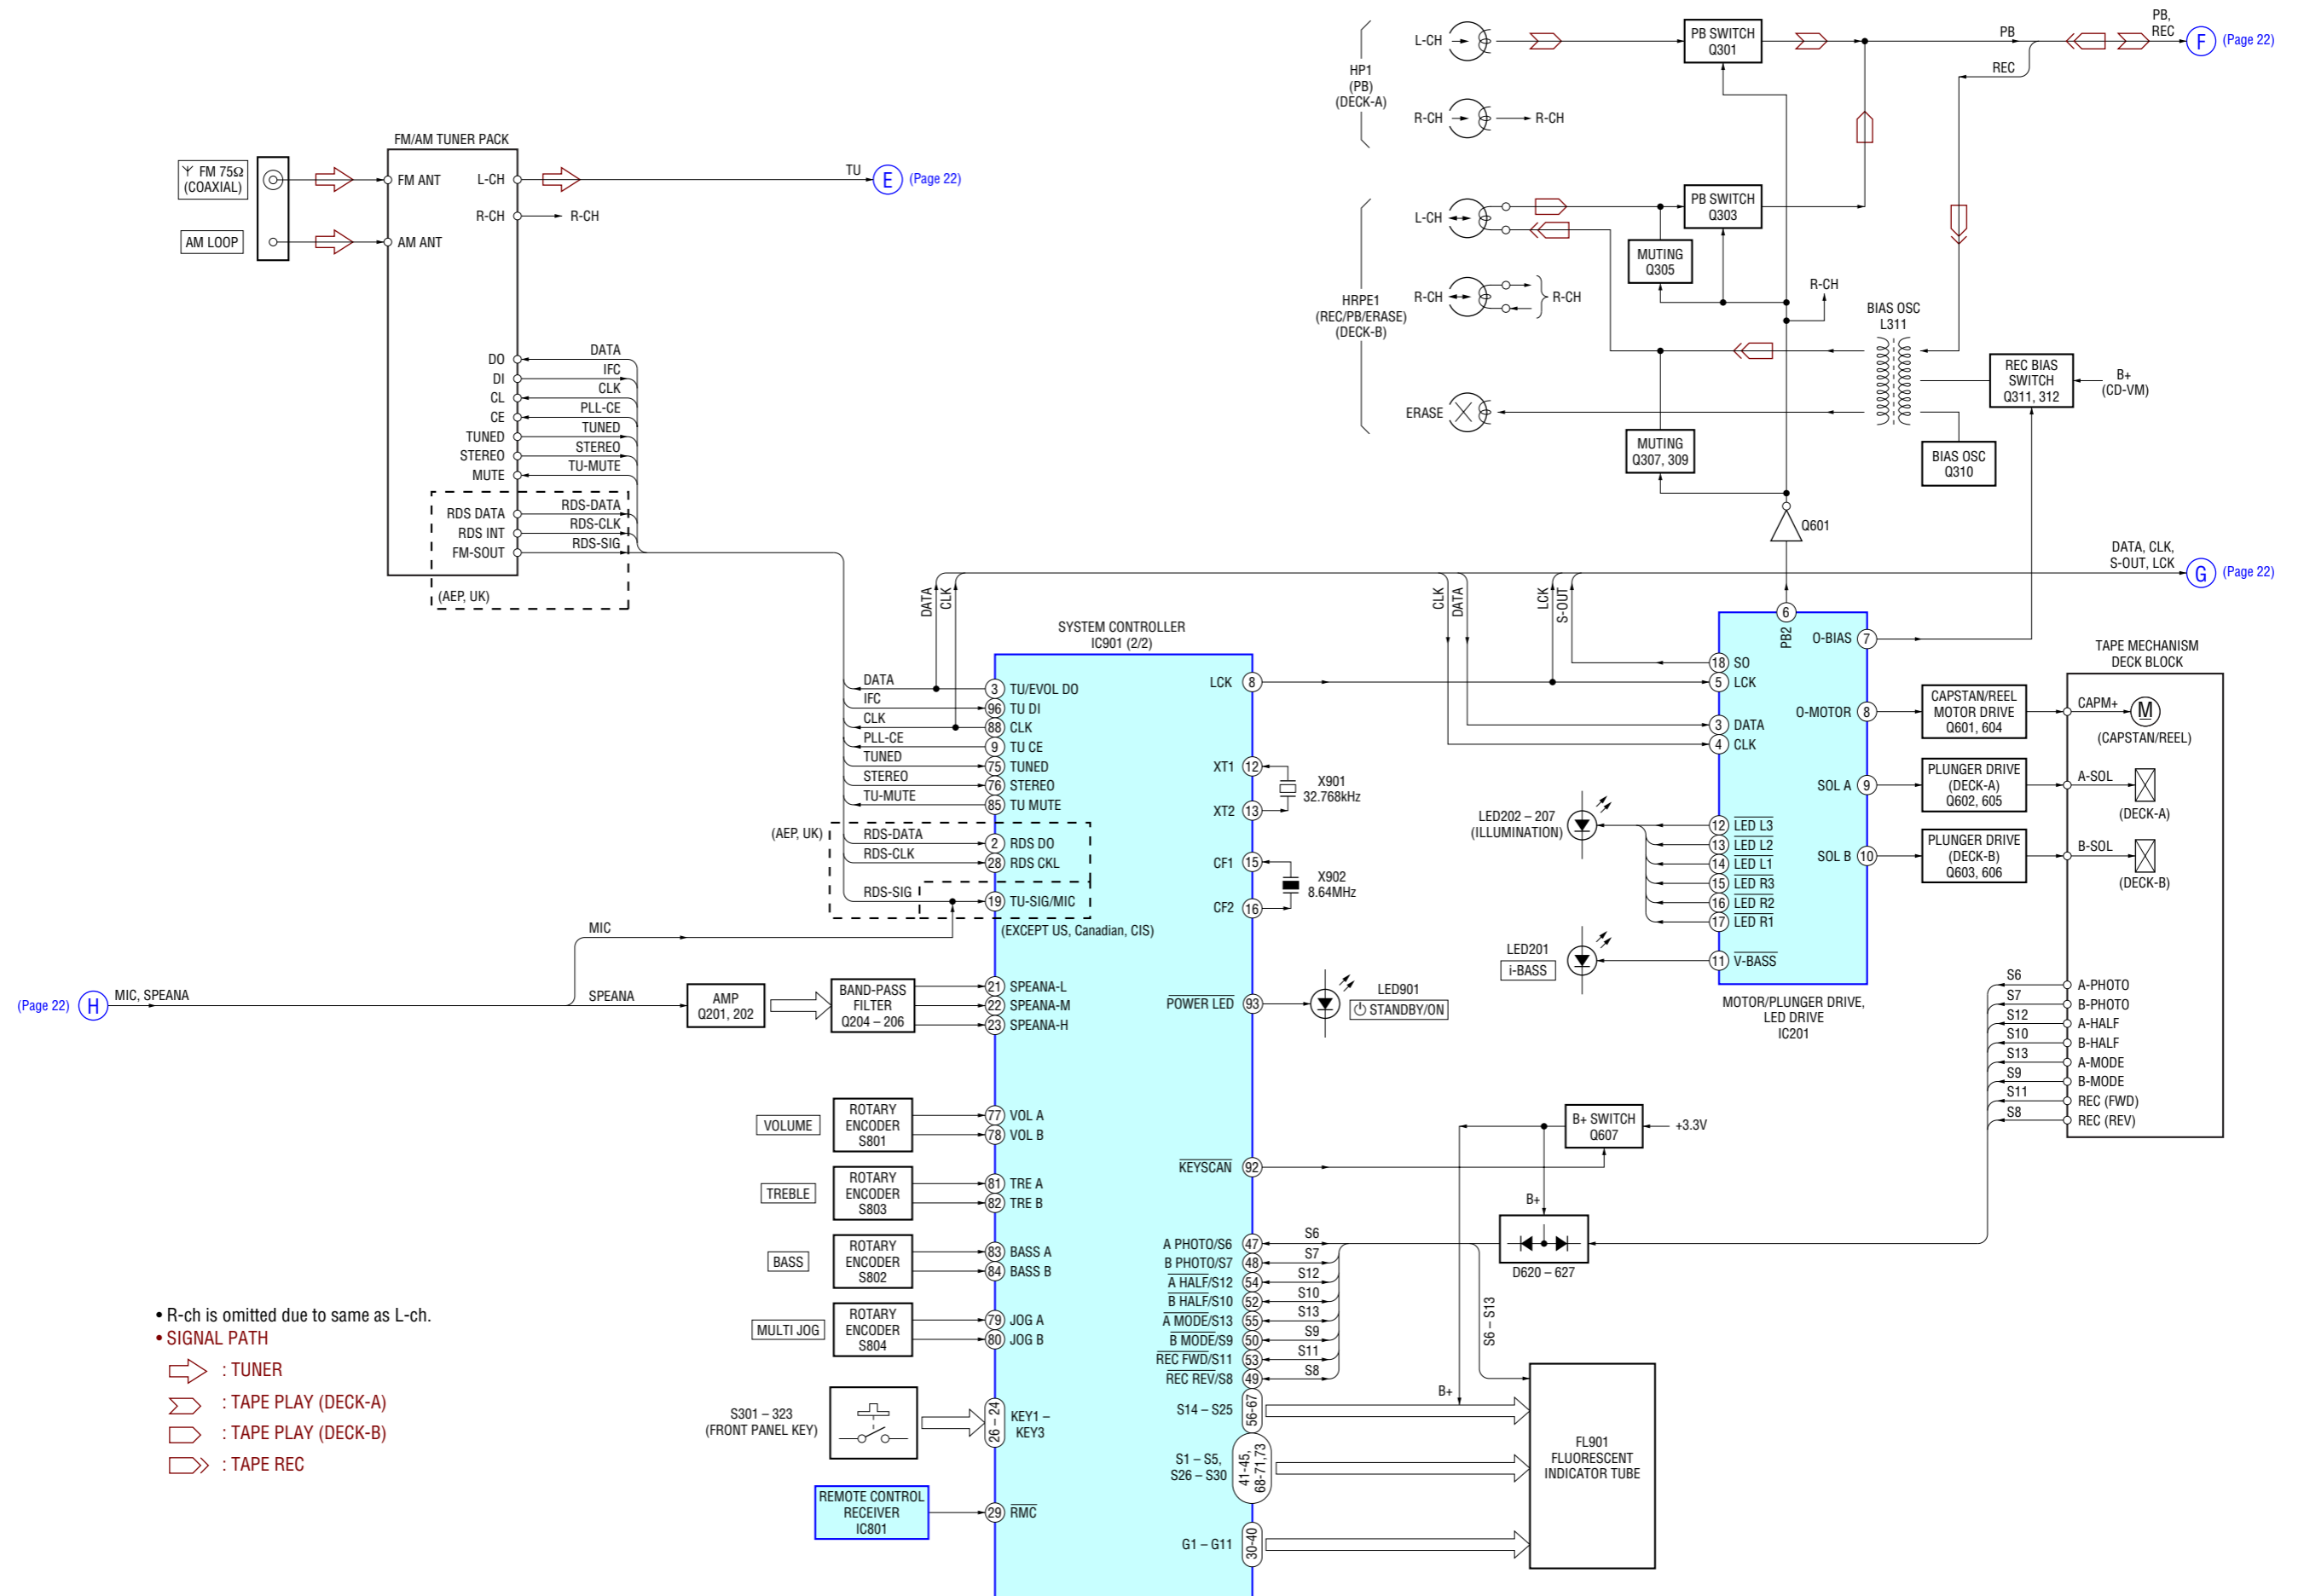

6-3. BLOCK DIAGRAM – AMP/POWER SUPPLY Section –

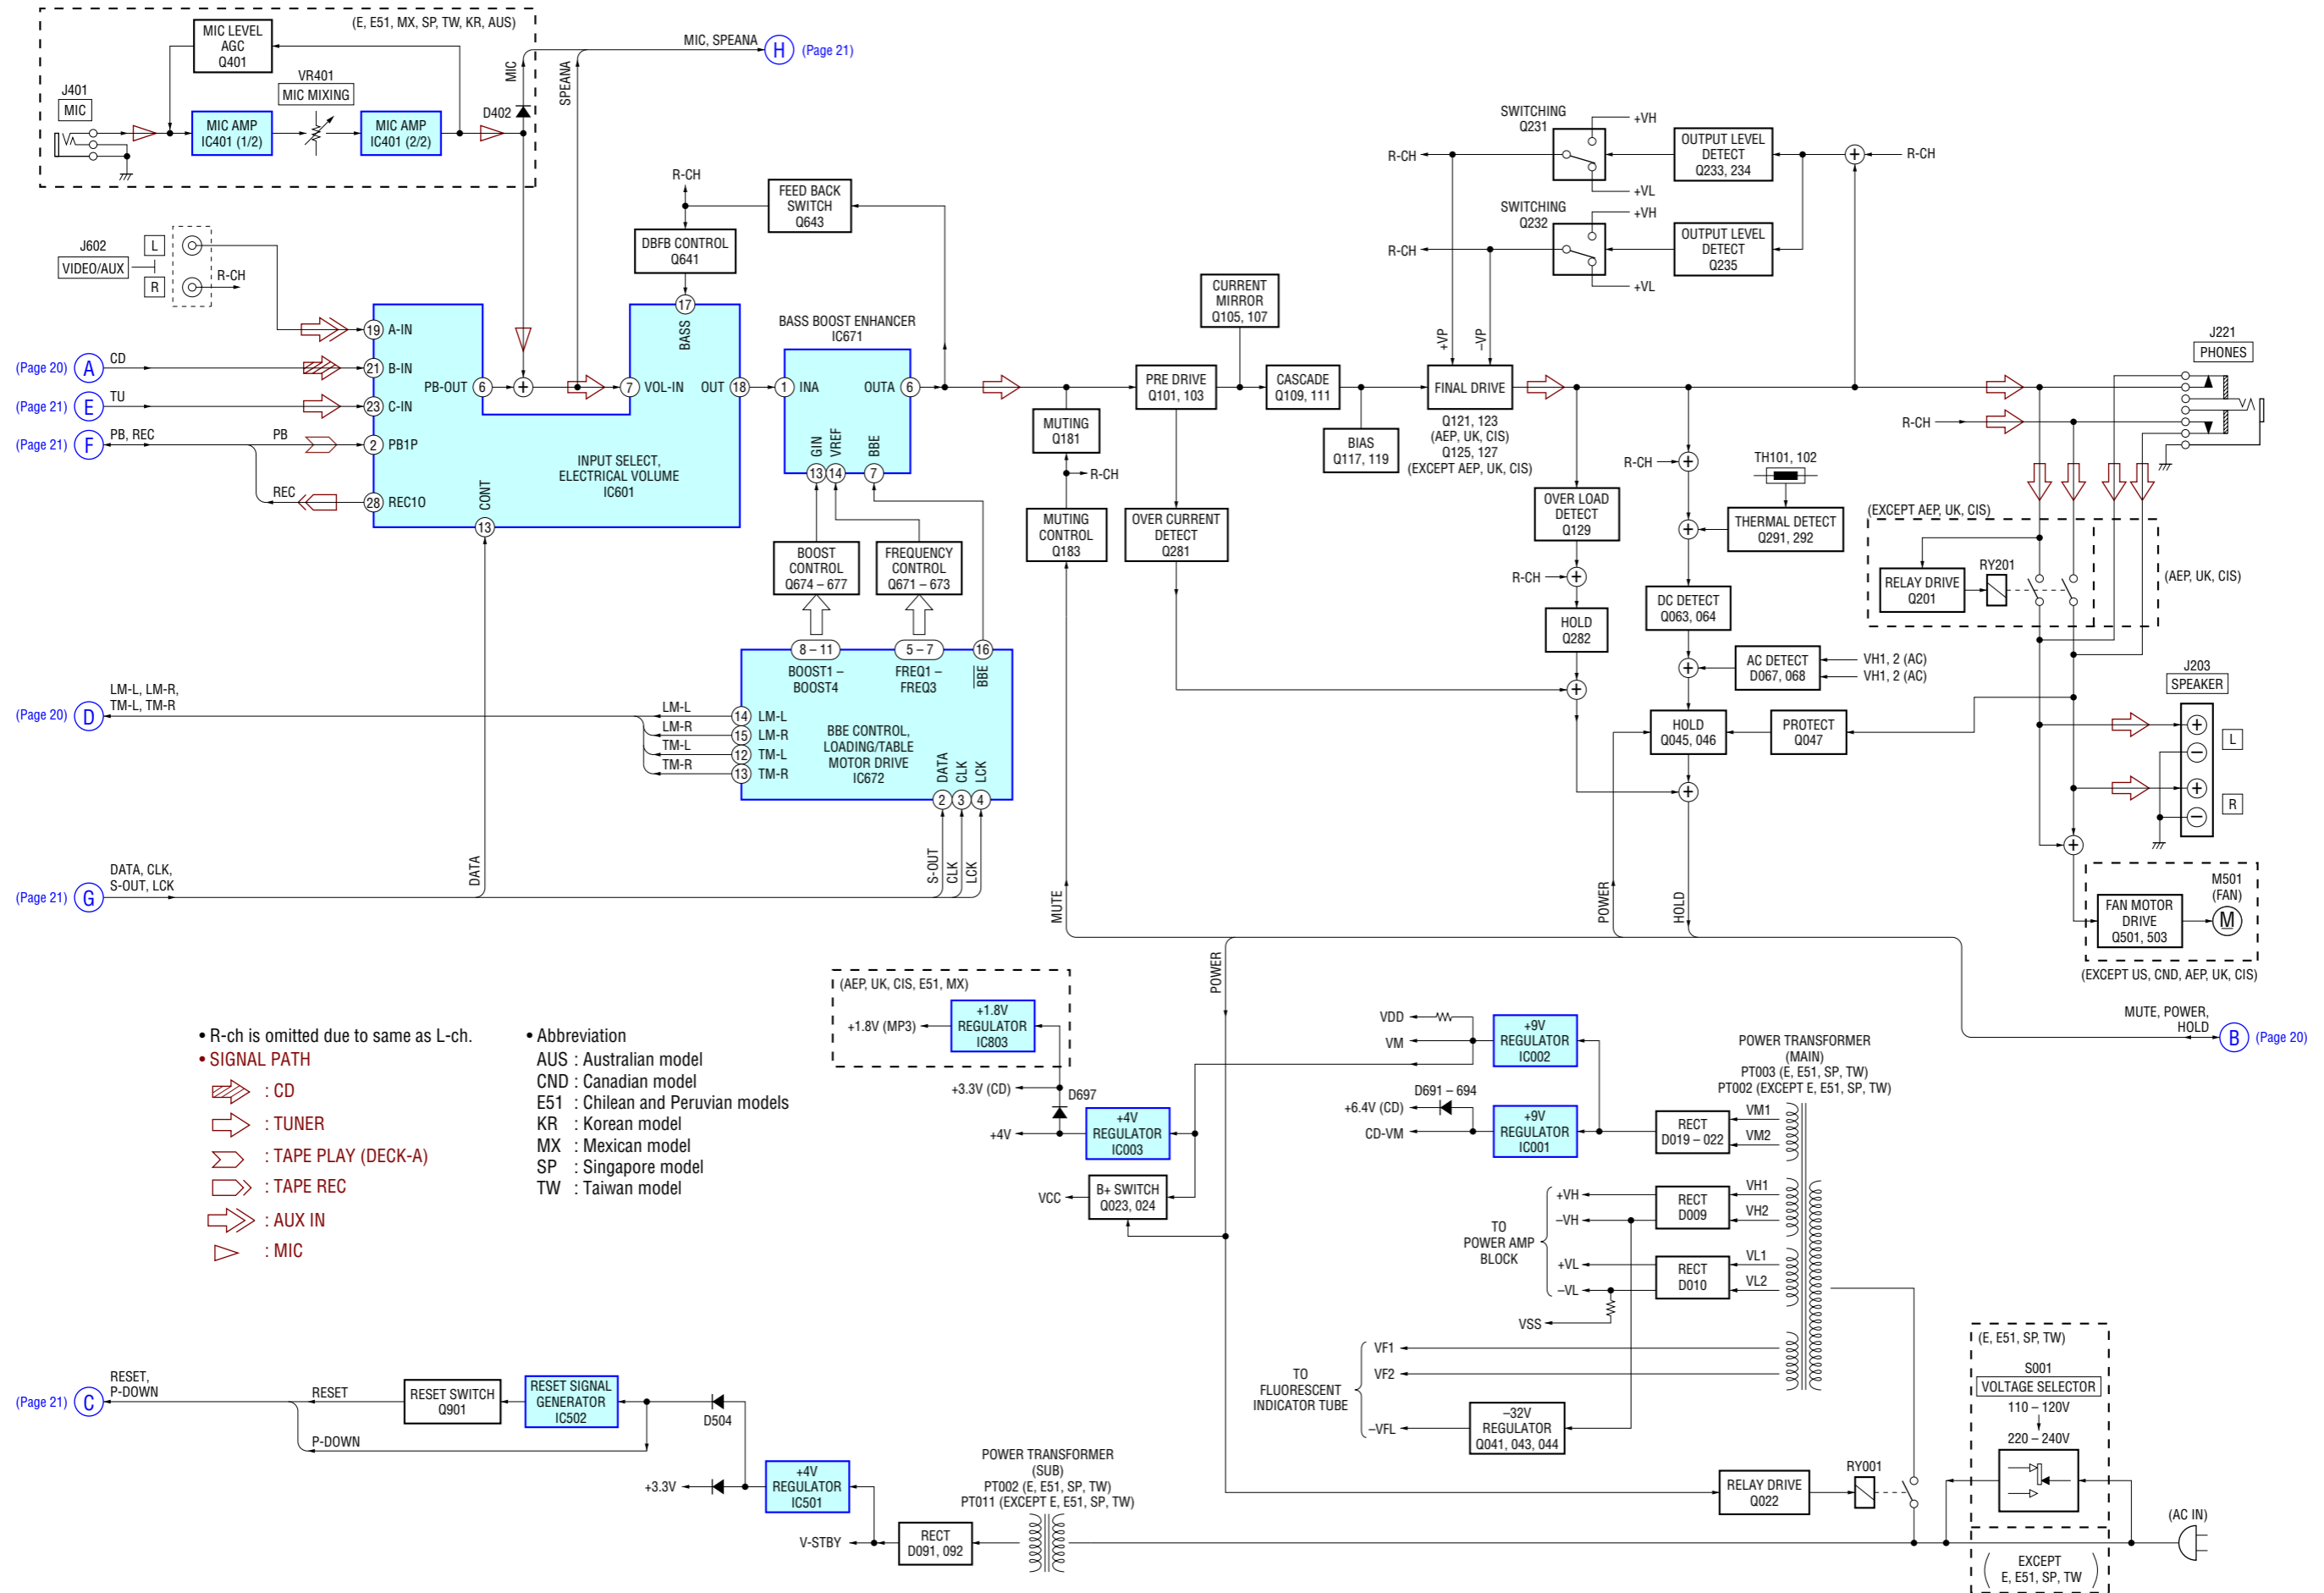

- R-ch is omitted due to same as L-ch.
- SIGNAL PATH
- ➡ : CD
- ➡ : TUNER
- ➡ : TAPE PLAY (DECK-A)
- ➡ : TAPE REC
- ➡ : AUX IN
- ➡ : MIC

- Abbreviation
- AUS : Australian model
- CND : Canadian model
- E51 : Chilean and Peruvian models
- KR : Korean model
- MX : Mexican model
- SP : Singapore model
- TW : Taiwan model

(Page 21) C

(Page 20) A

(Page 21) E

(Page 21) F

(Page 20) D

(Page 21) G

(Page 20) B



6-4. NOTE FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

Note on Printed Wiring Board:

- : parts extracted from the component side.
- : parts extracted from the conductor side.
- : parts mounted on the conductor side.
- : Pattern from the side which enables seeing. (The other layers' patterns are not indicated.)

Caution:  
 Pattern face side: Parts on the pattern face side seen from the pattern face are indicated.  
 (Conductor Side)  
 Parts face side: Parts on the parts face side seen from the parts face are indicated.  
 (Component Side)

Indication of transistor.

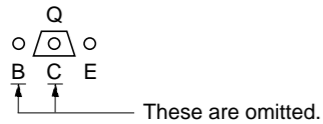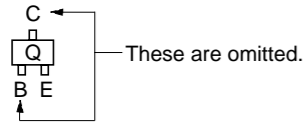

Note on Schematic Diagram:

- All capacitors are in  $\mu\text{F}$  unless otherwise noted. pF:  $\mu\mu\text{F}$  50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in  $\Omega$  and  $1/4\text{W}$  or less unless otherwise specified.
- △ : internal component.
- ⊞ : nonflammable resistor.
- ⊞ : fusible resistor.
- : panel designation.

Note:


The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.


Note:


Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- : B+ Line.
- : B- Line.
- Voltages and waveforms are dc with respect to ground under no-signal conditions.
  - BD Section —  
no mark : CD PLAY
  - Other Sections —  
no mark : FM
  - \* : Impossible to measure
- Voltages are taken with a VOM (Input impedance 10 M $\Omega$ ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
  - ⇨ : TUNER (FM/AM)
  - ⇨ : TAPE PLAY (DECK A)
  - ⇨ : TAPE PLAY (DECK B)
  - ⇨ : REC
  - ⇨ : CD PLAY
  - ⇨ : AUX IN
  - ⇨ : MIC INPUT
- Abbreviation
  - AUS : Australian model
  - CND : Canadian model
  - E51 : Chilean and Peluvian models
  - KR : Korean model
  - MX : Mexican model
  - SP : Singapore model
  - TW : Taiwan model

Circuit Boards Location

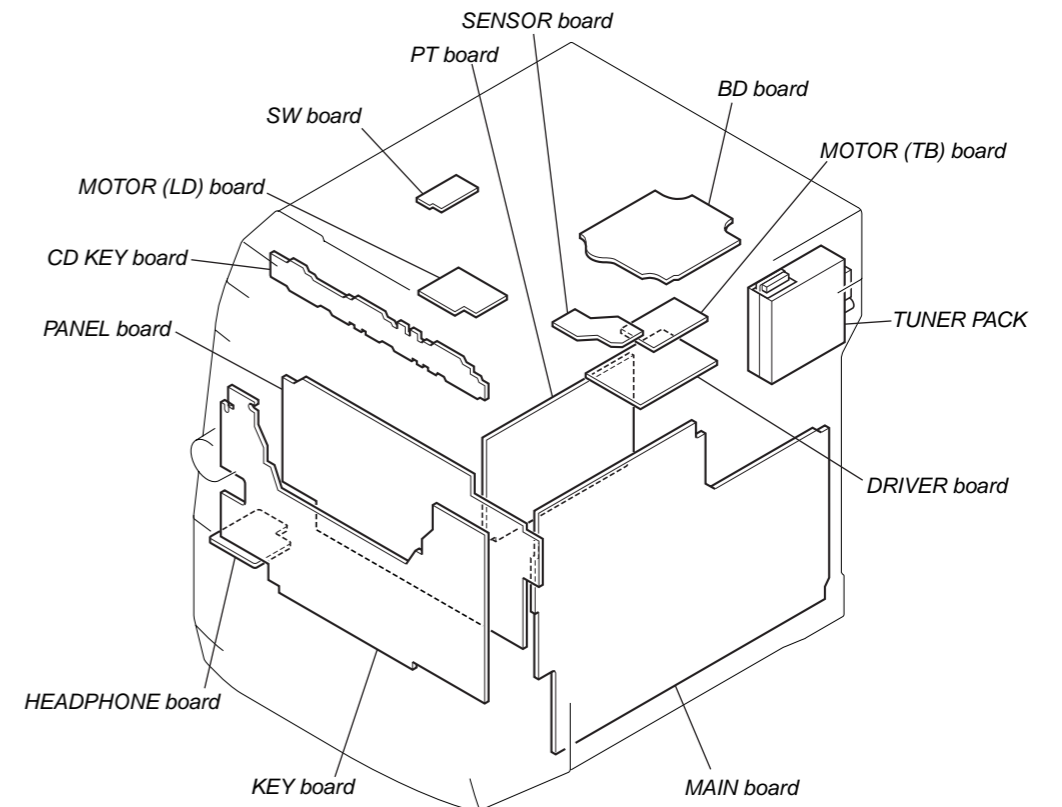


6-5. PRINTED WIRING BOARD – BD Section – (AEP, UK, CIS, E51, MX) • See page 23 for Circuit Boards Location.  :Uses unleaded solder.

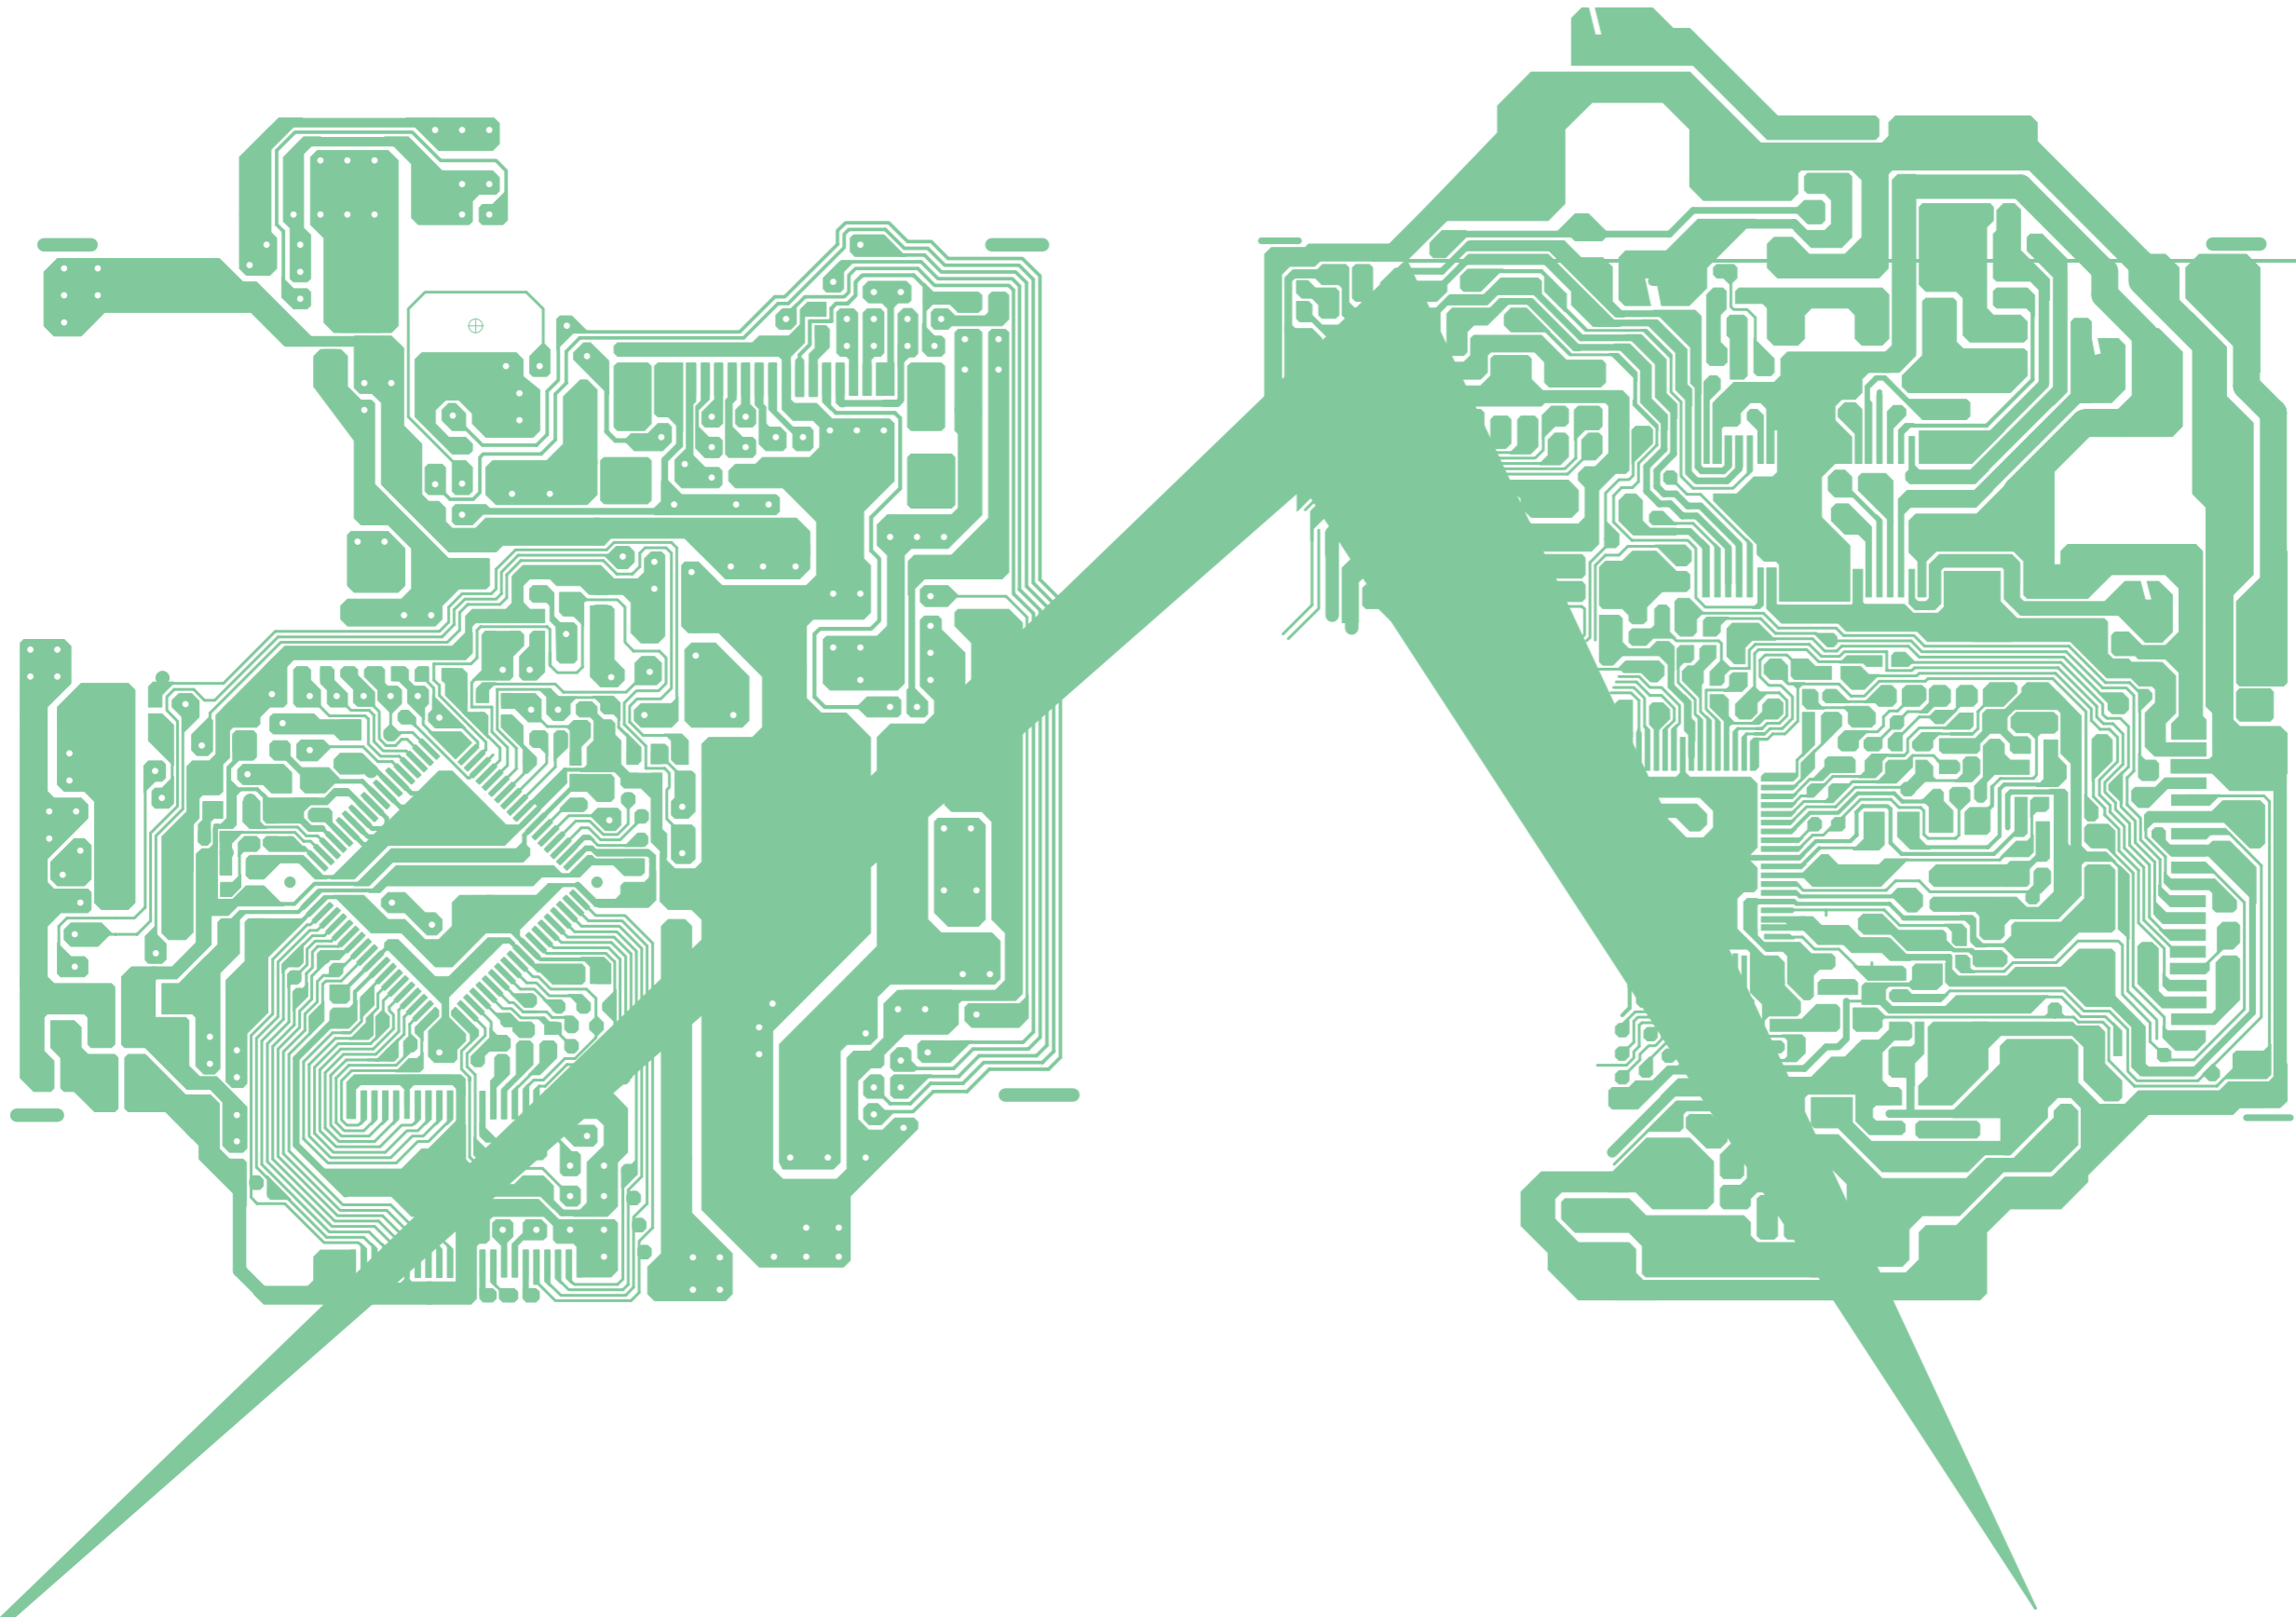




6-6. SCHEMATIC DIAGRAM – BD Section – (AEP, UK, CIS, E51, MX) • See page 44 for IC Block Diagrams. • See page 44 for Waveforms.

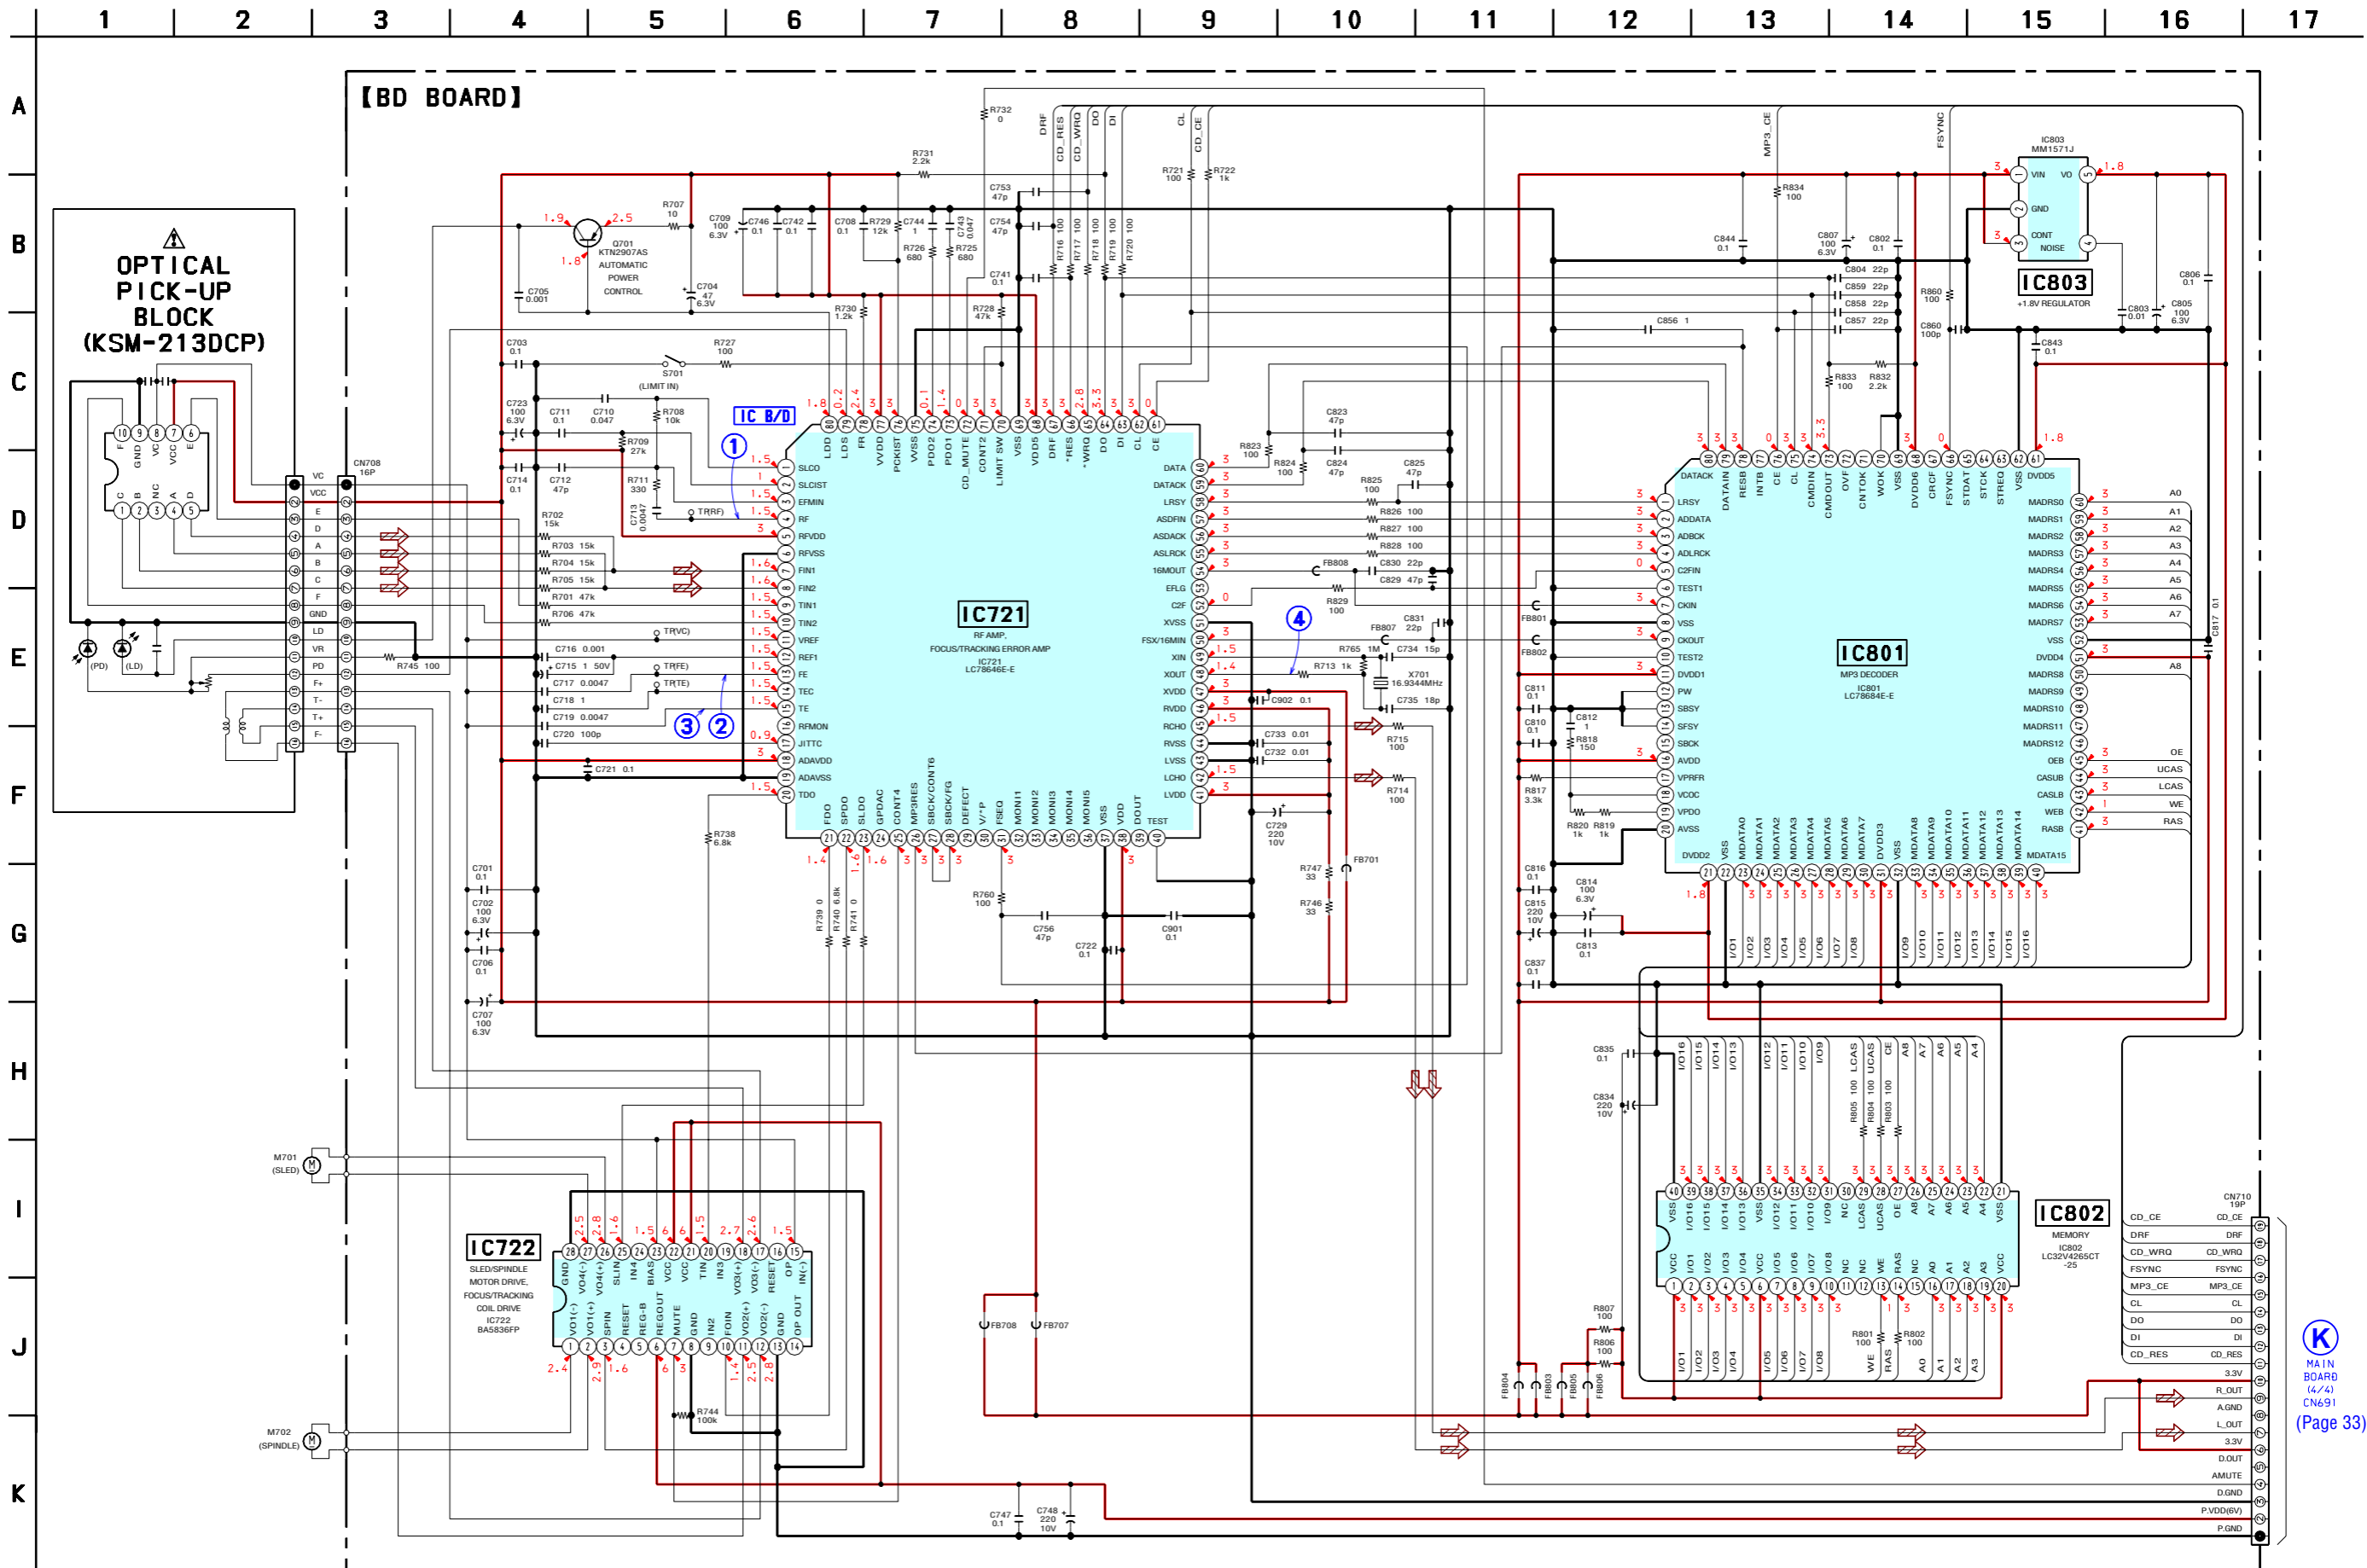


The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

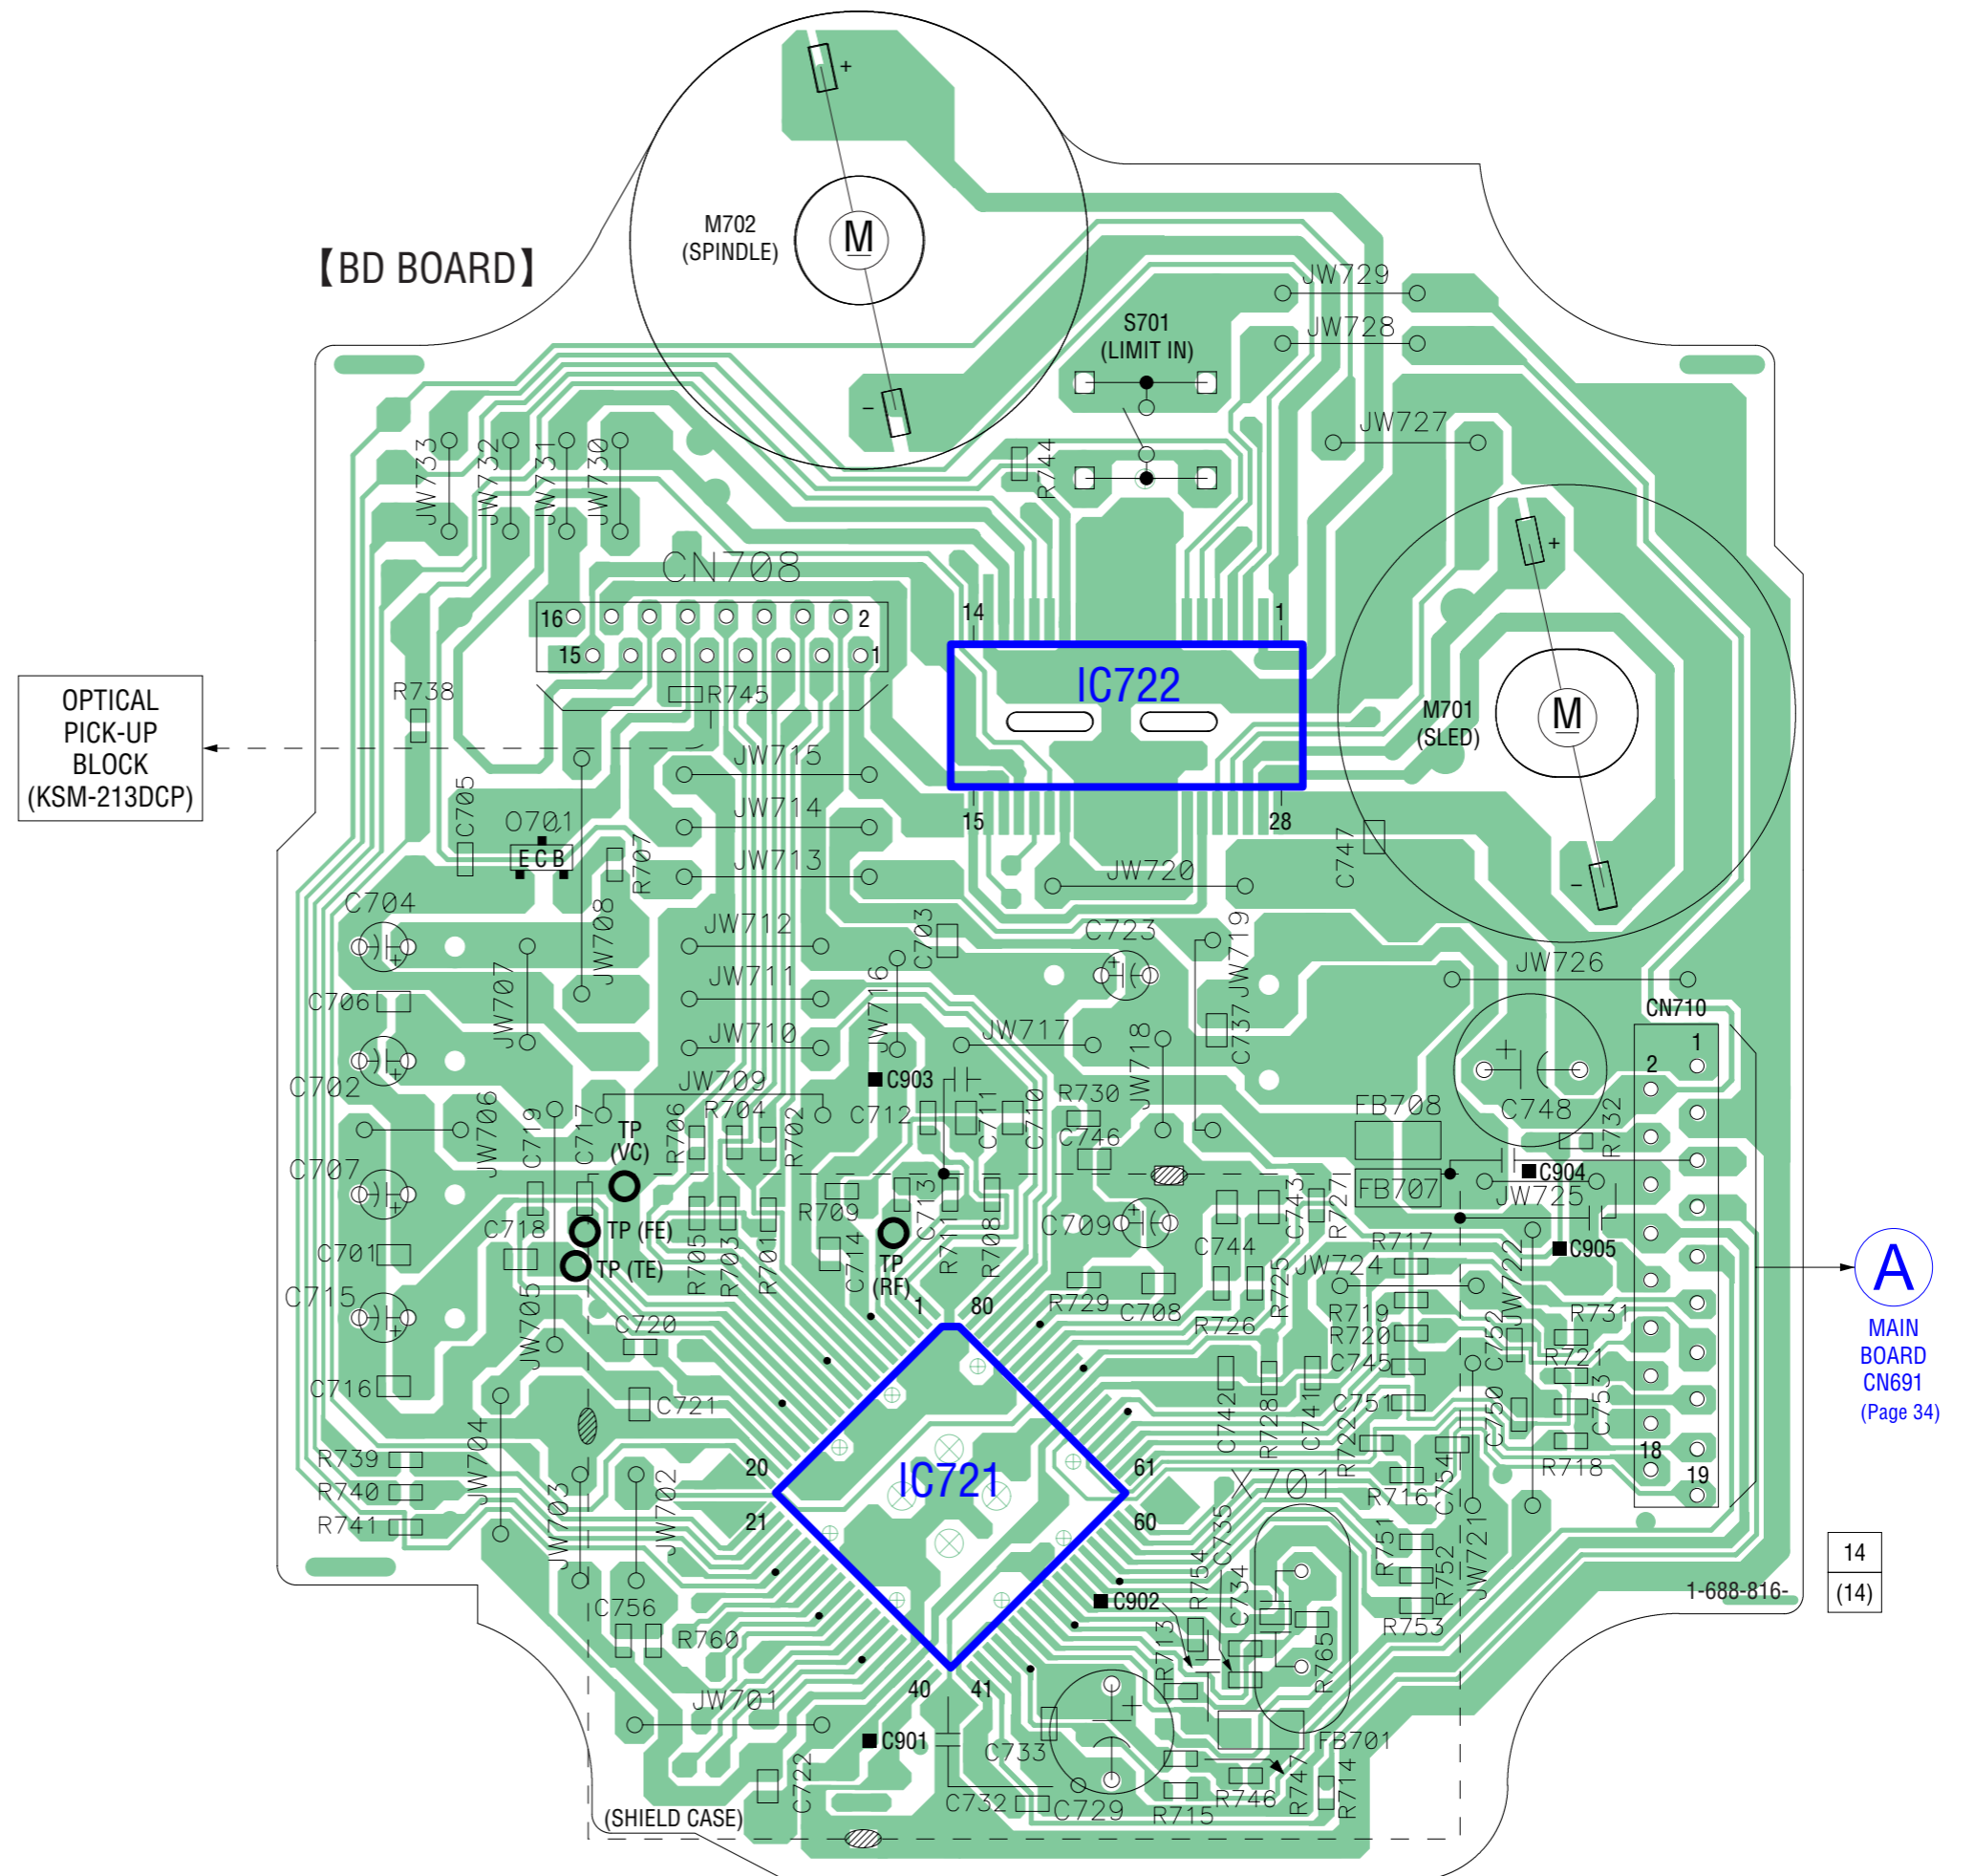

6-8. SCHEMATIC DIAGRAM – BD Section – (US, CND, E, SP, TW, KR, AUS) • See page 44 for IC Block Diagrams. • See page 44 for Waveforms.

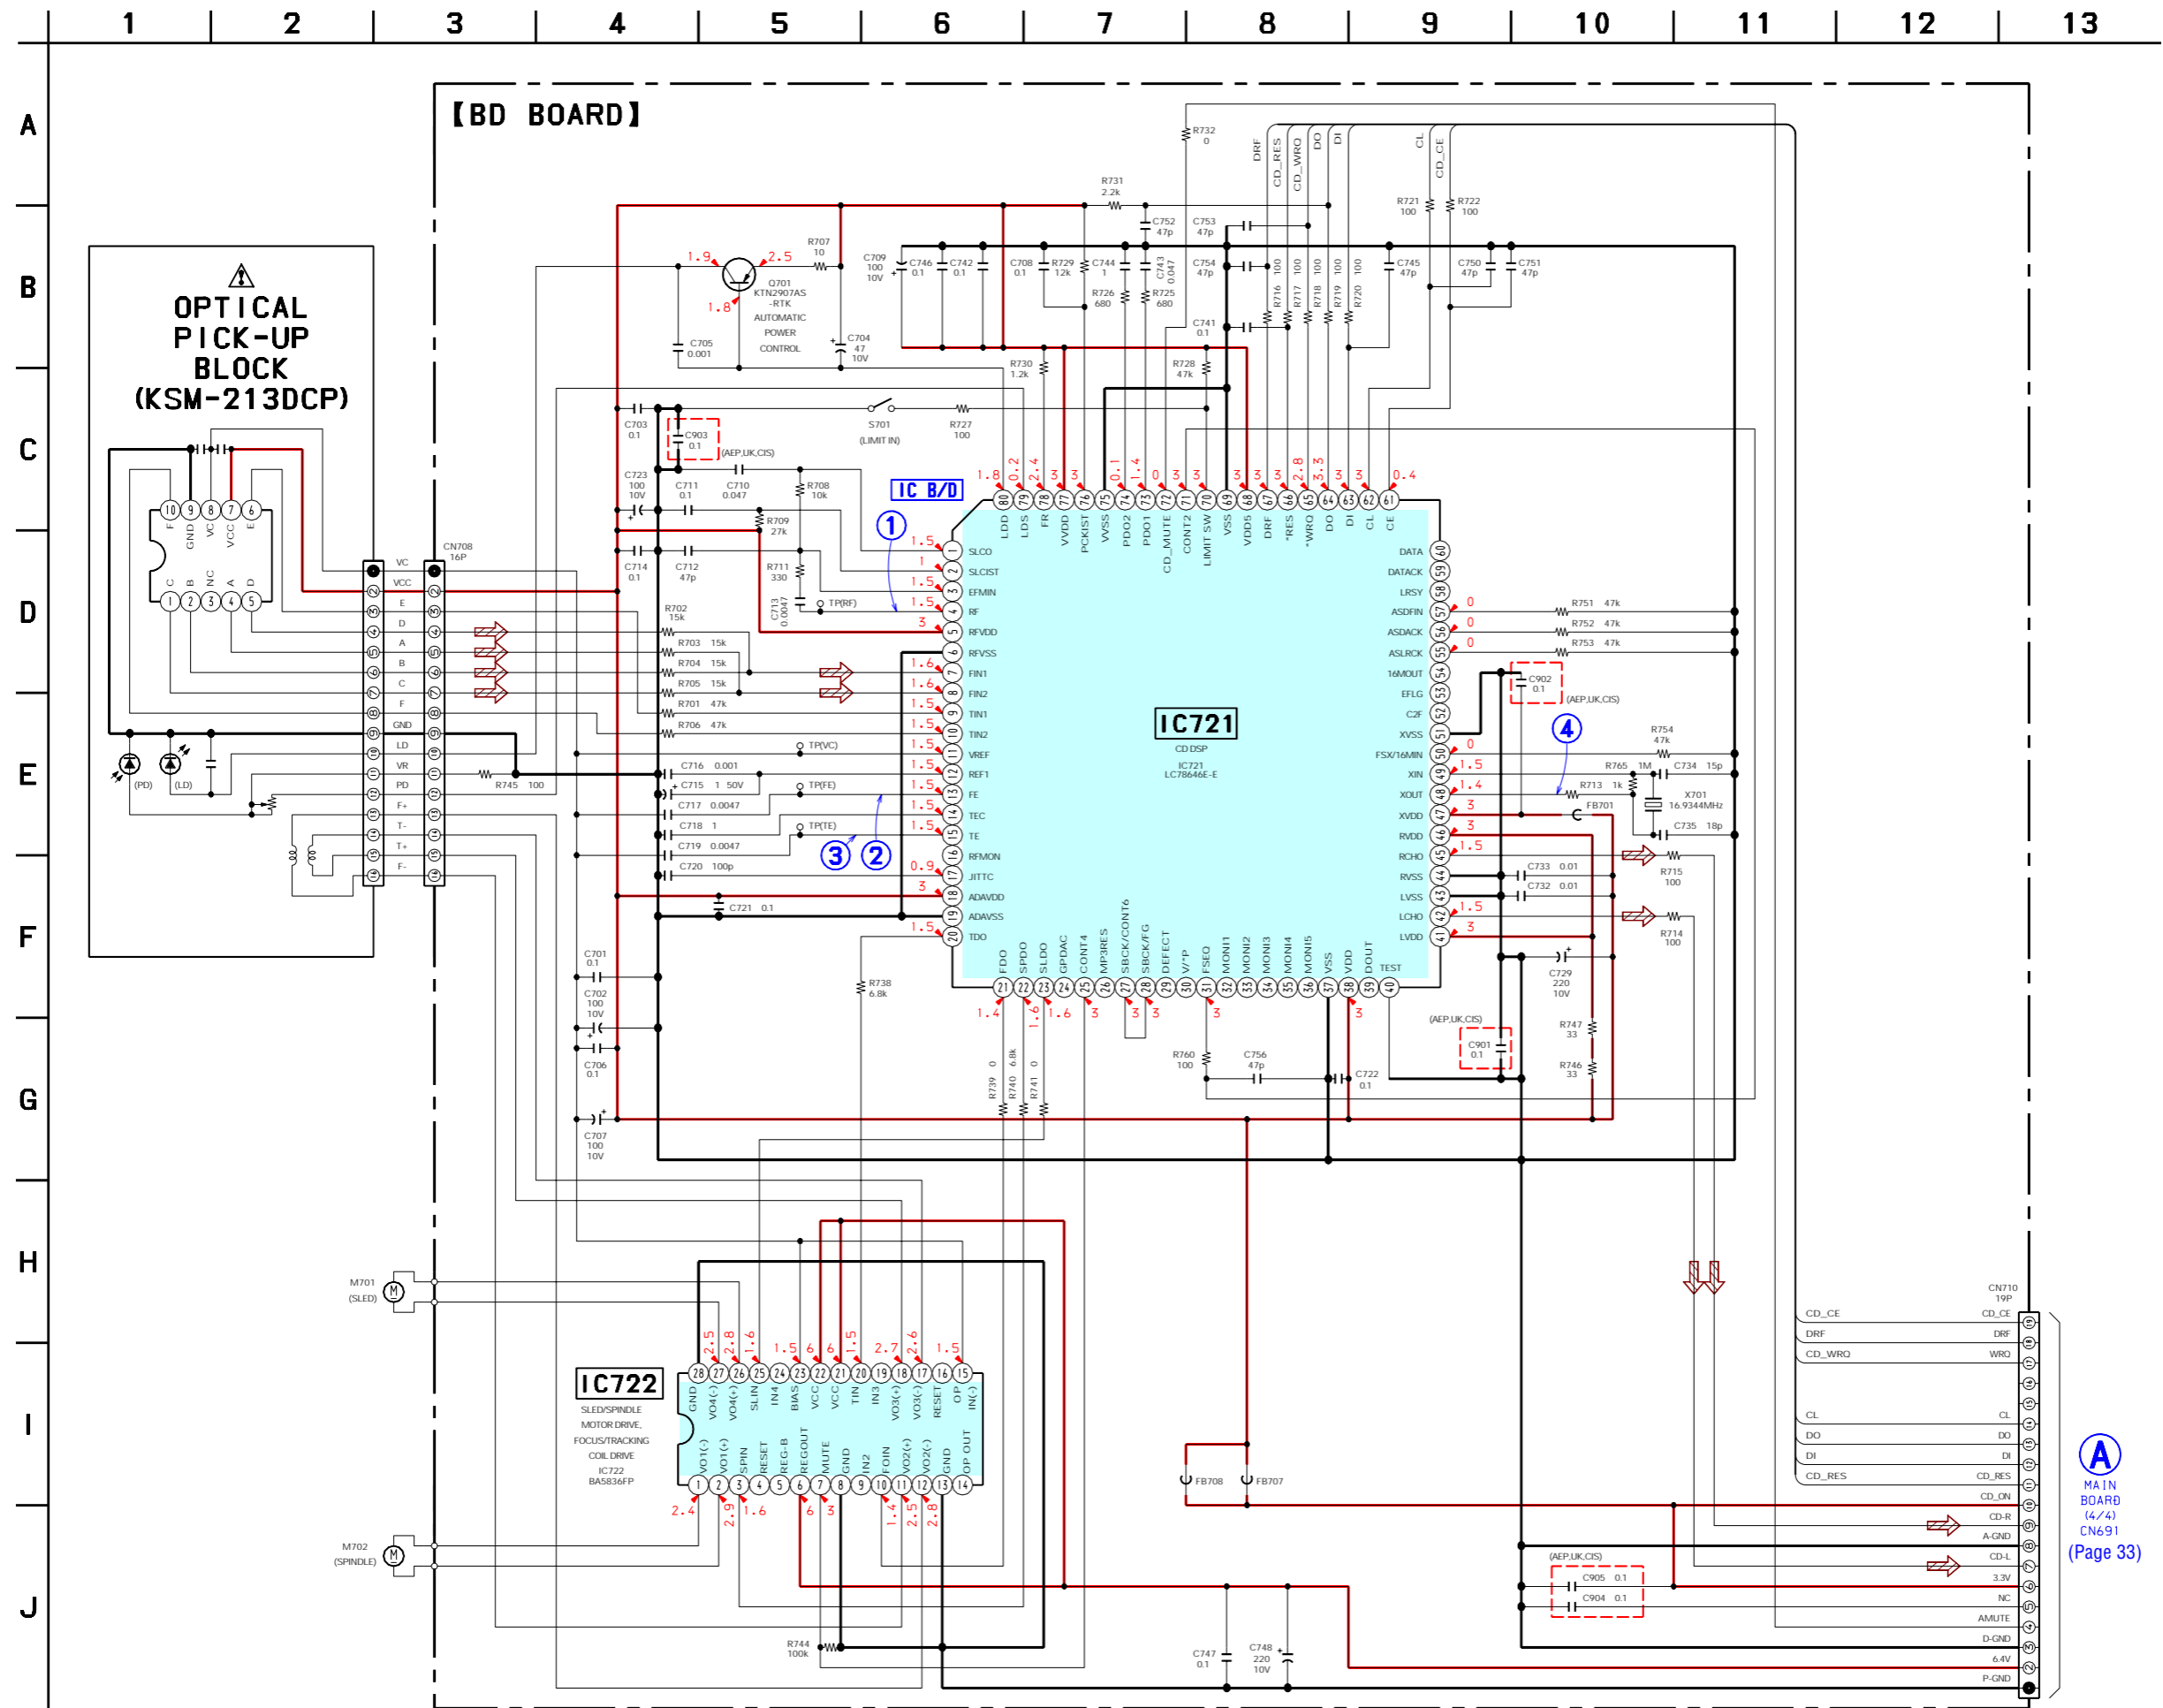


**A**  
MAIN BOARD  
(4/4)  
CN691  
(Page 33)


The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


6-9. PRINTED WIRING BOARDS – CHANGER Section – • See page 23 for Circuit Boards Location.  :Uses unleaded solder.

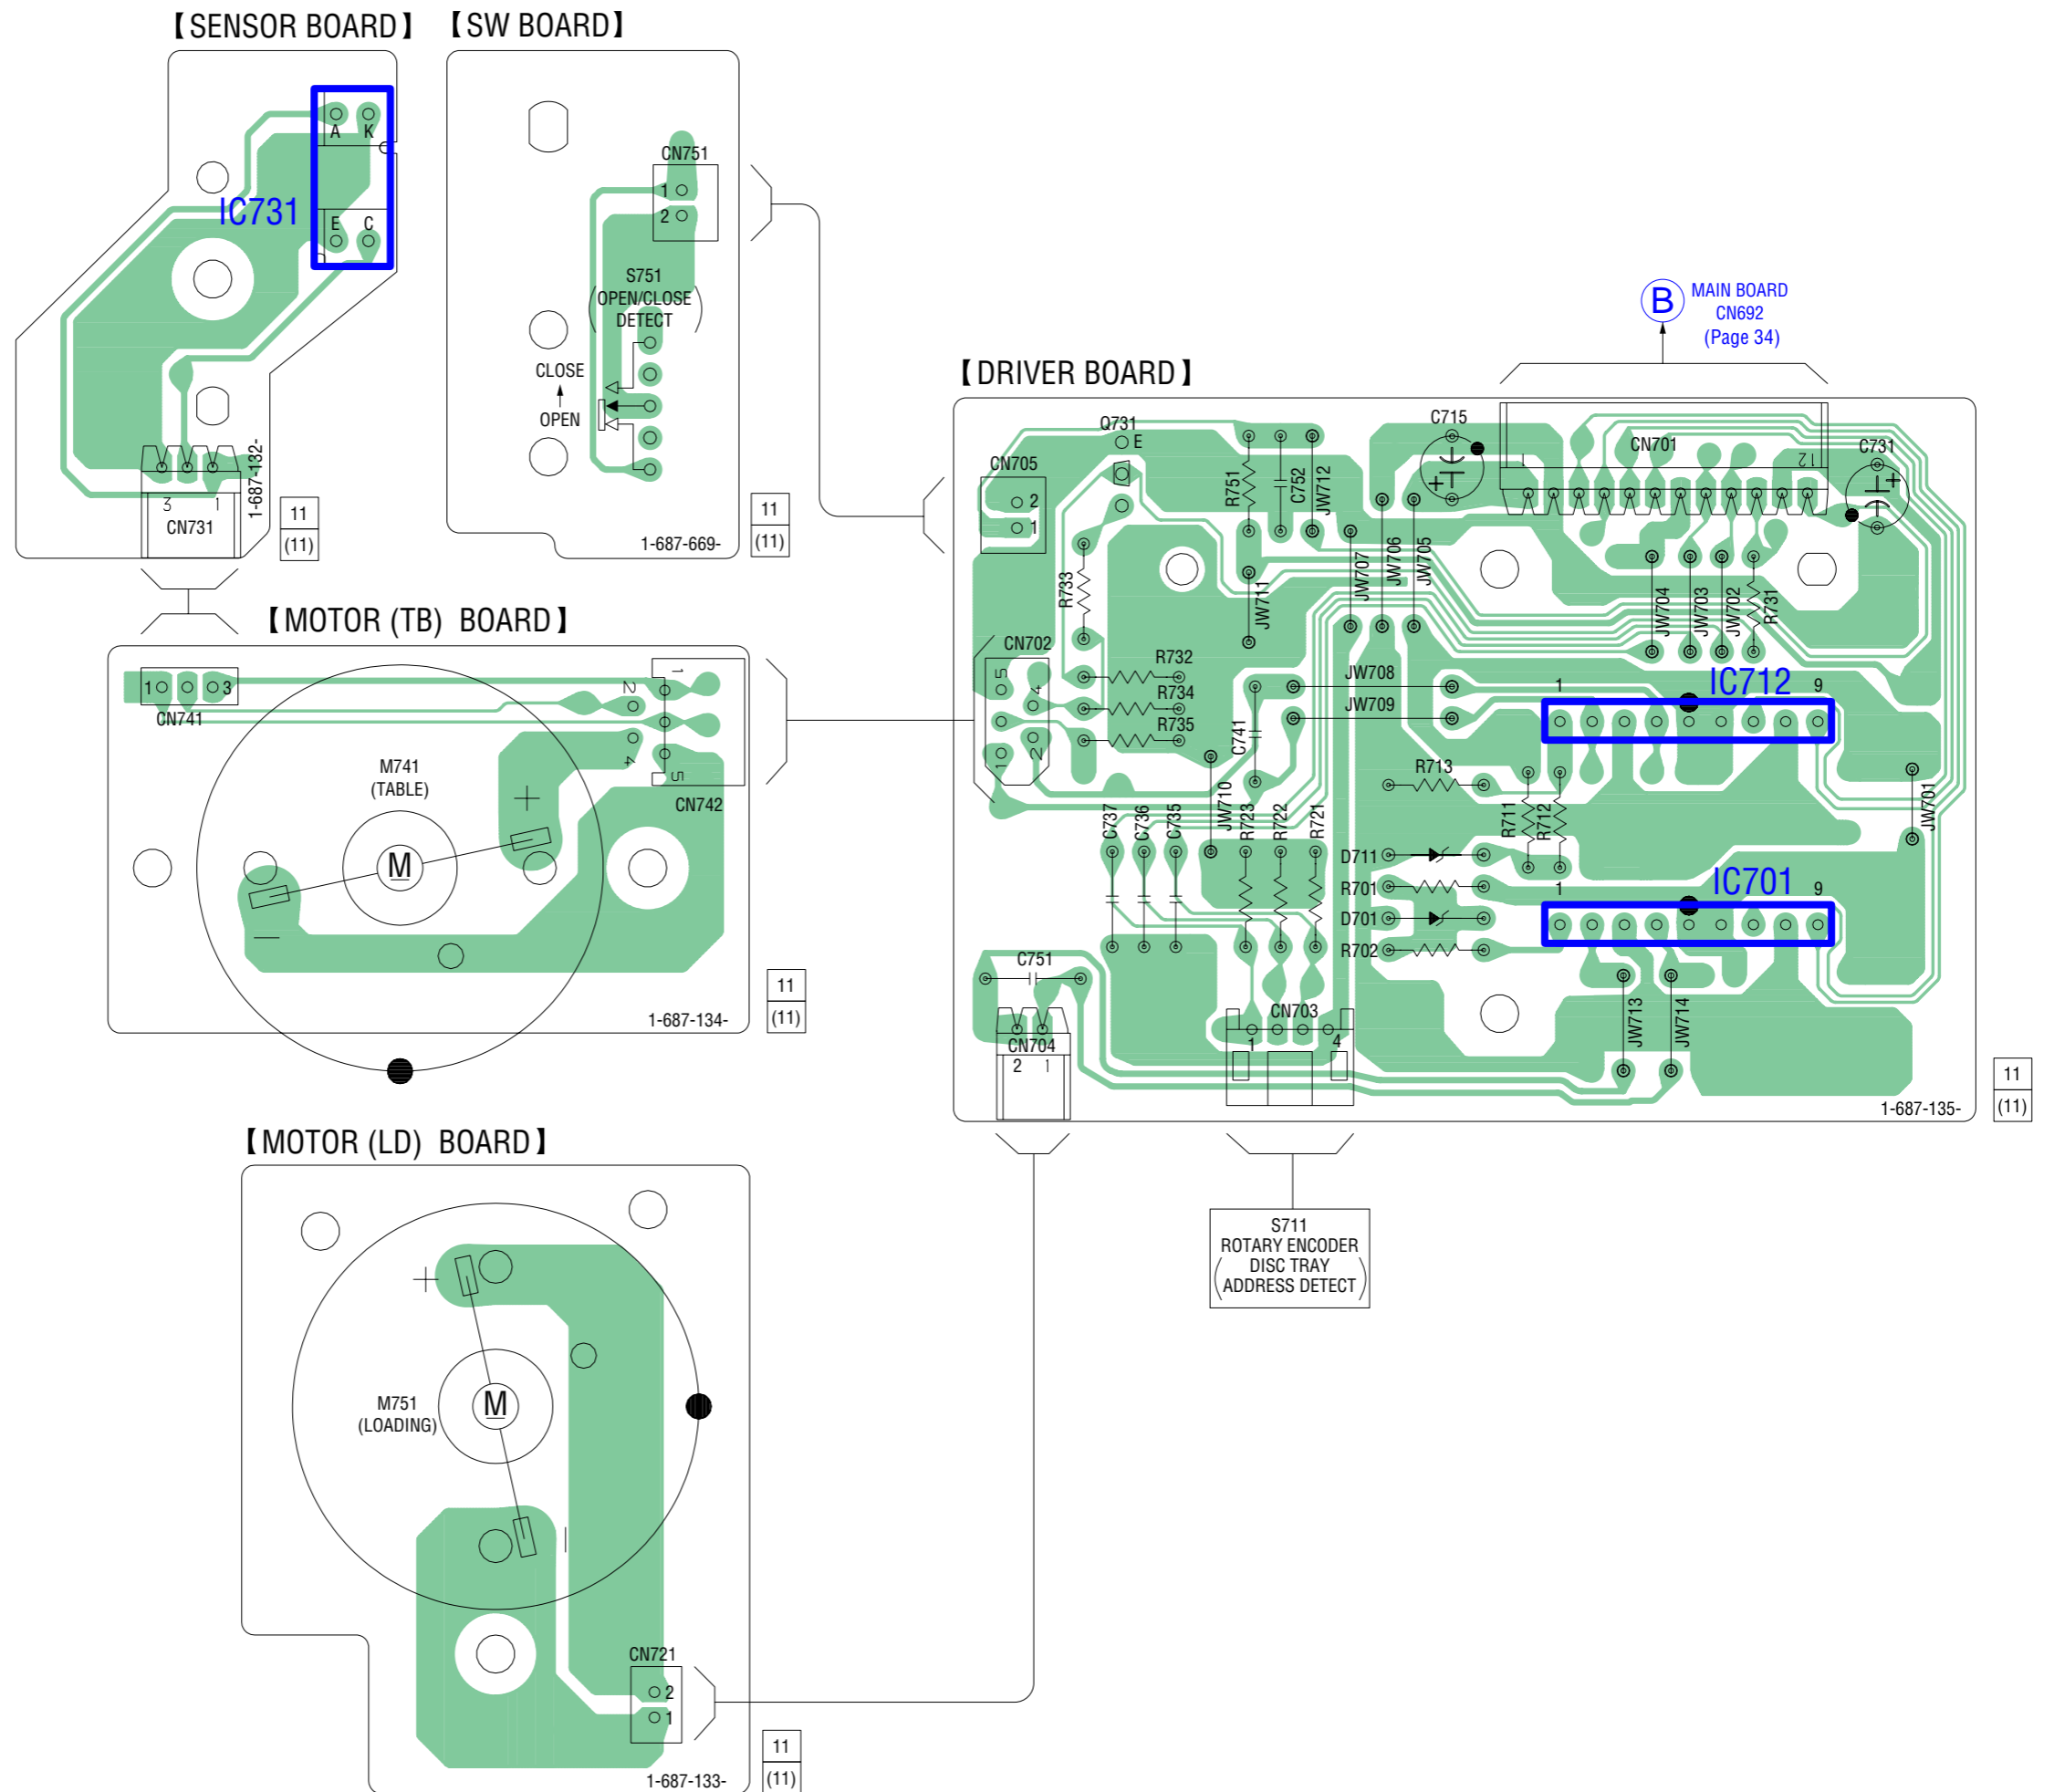

6-10. SCHEMATIC DIAGRAM – CHANGER Section – • See page 44 for IC Block Diagrams.

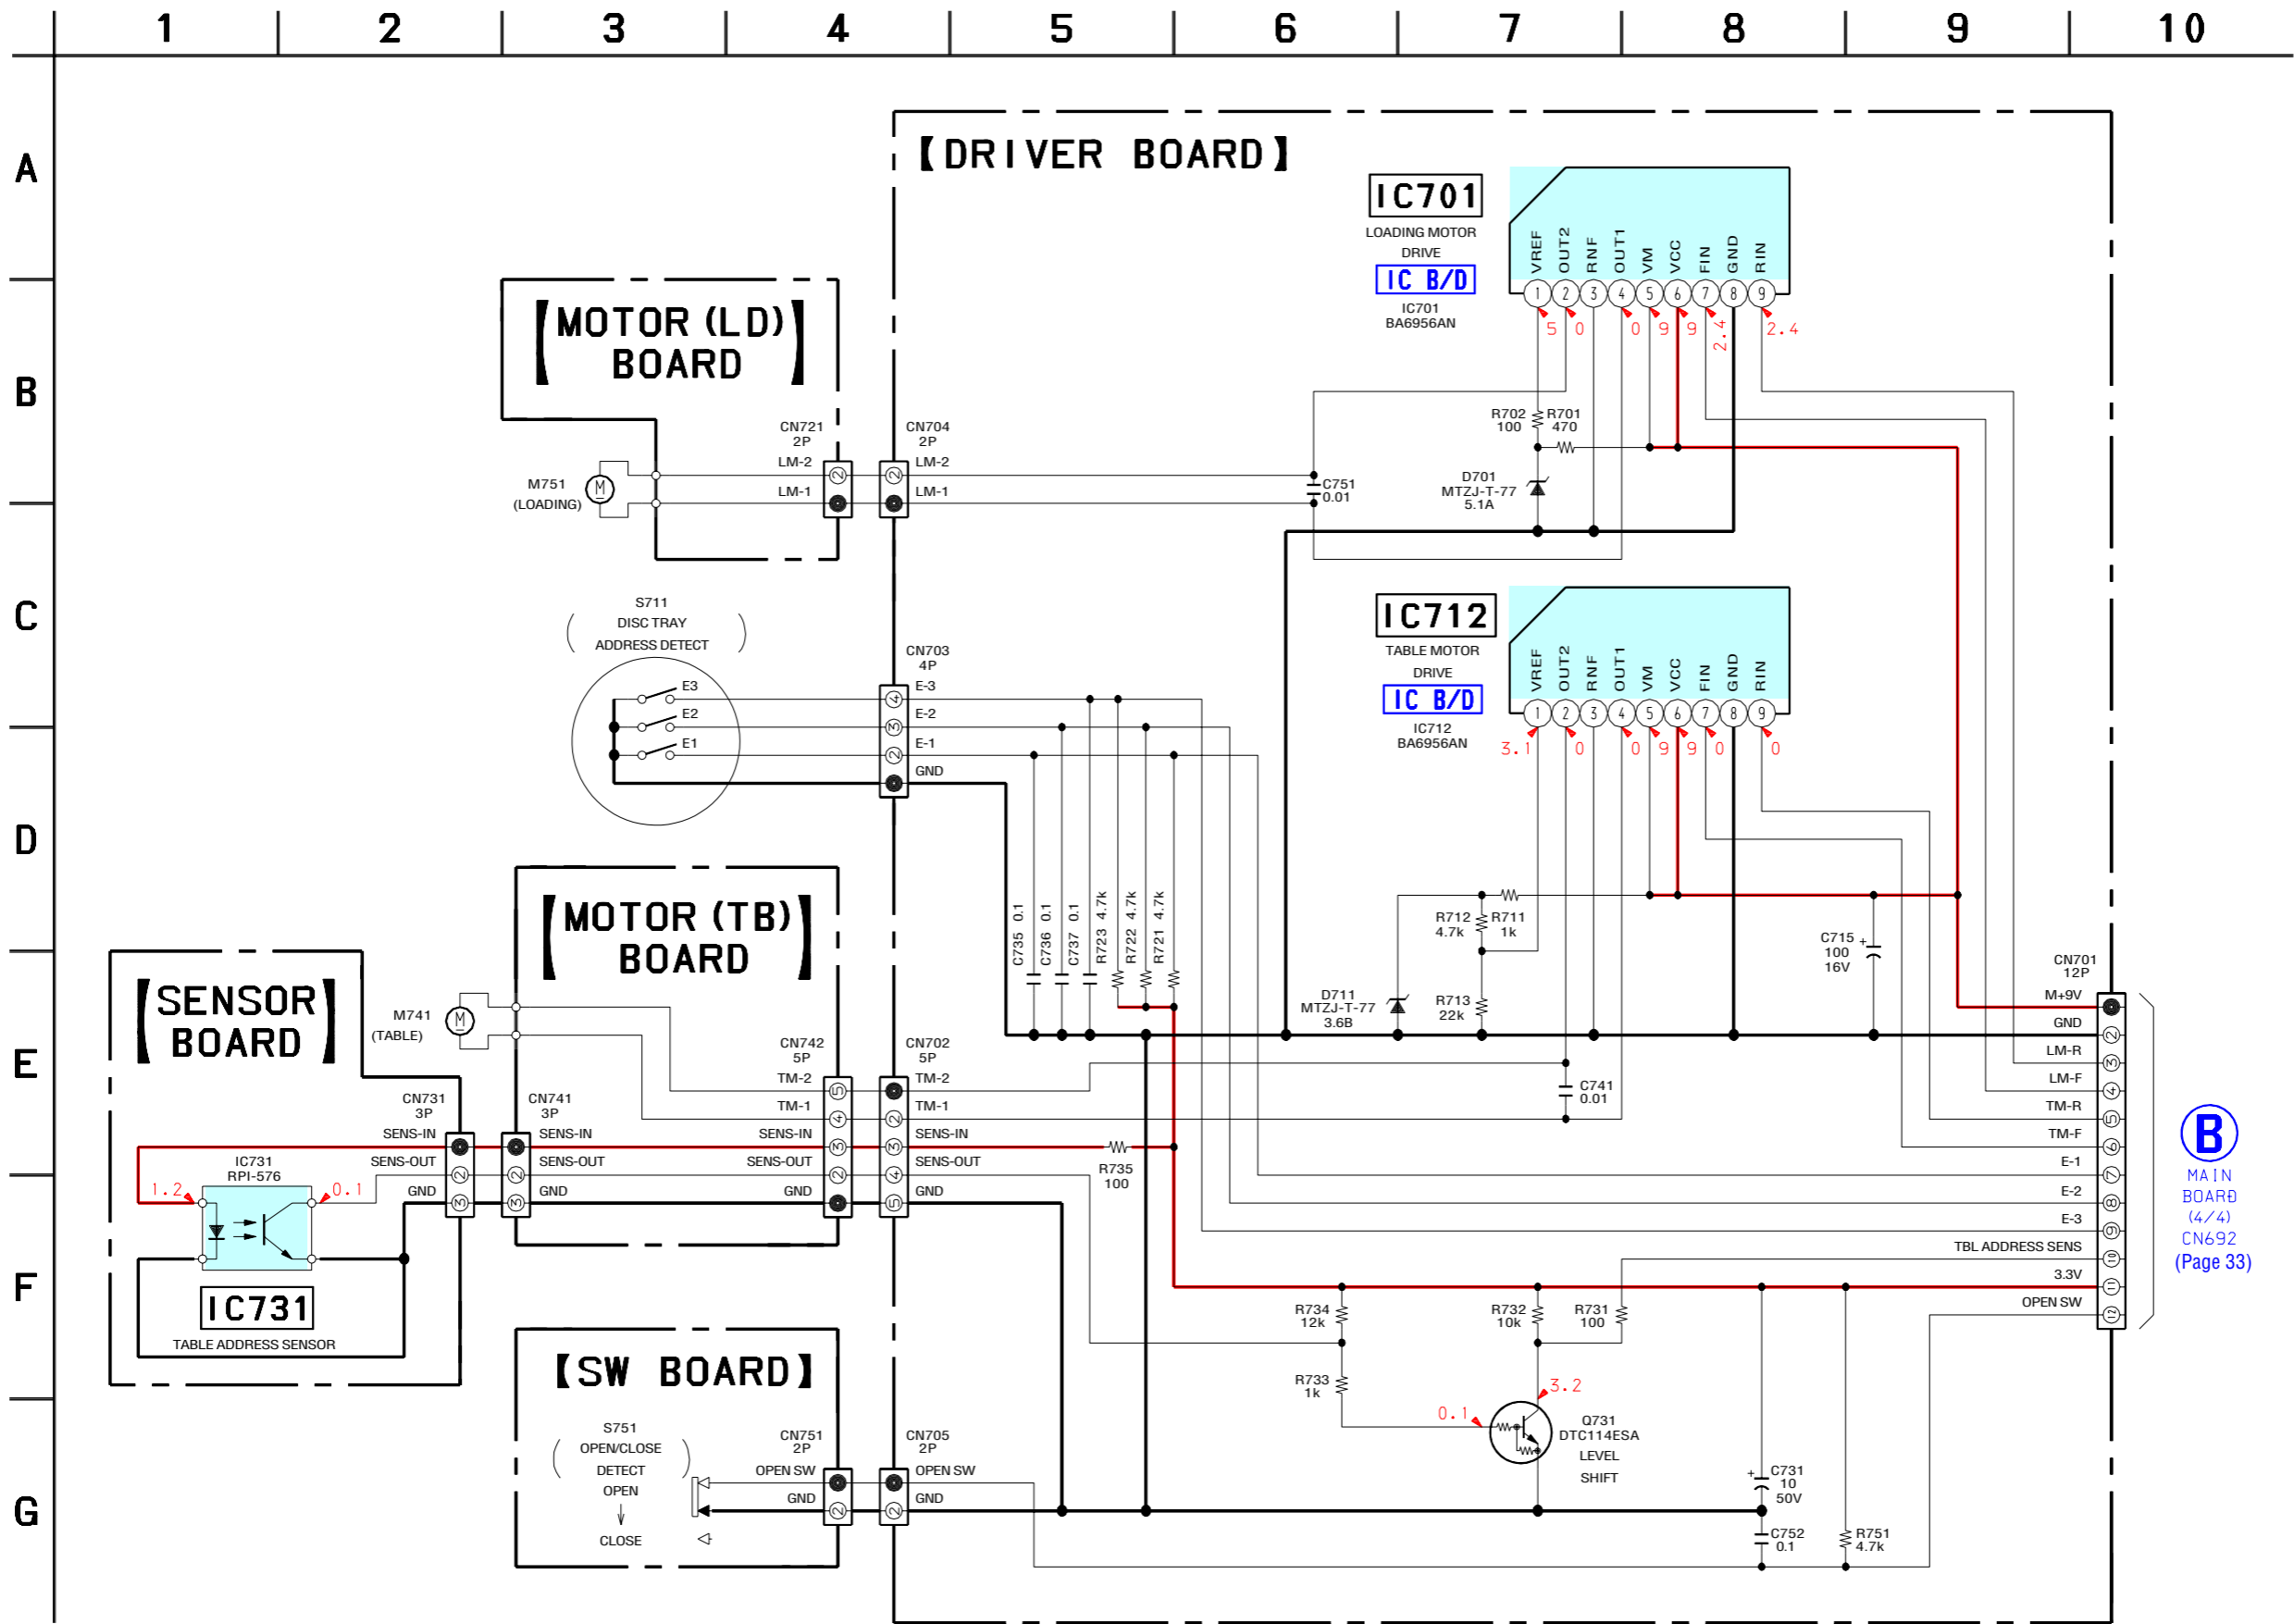


6-11. SCHEMATIC DIAGRAM – MAIN Section (1/4) –

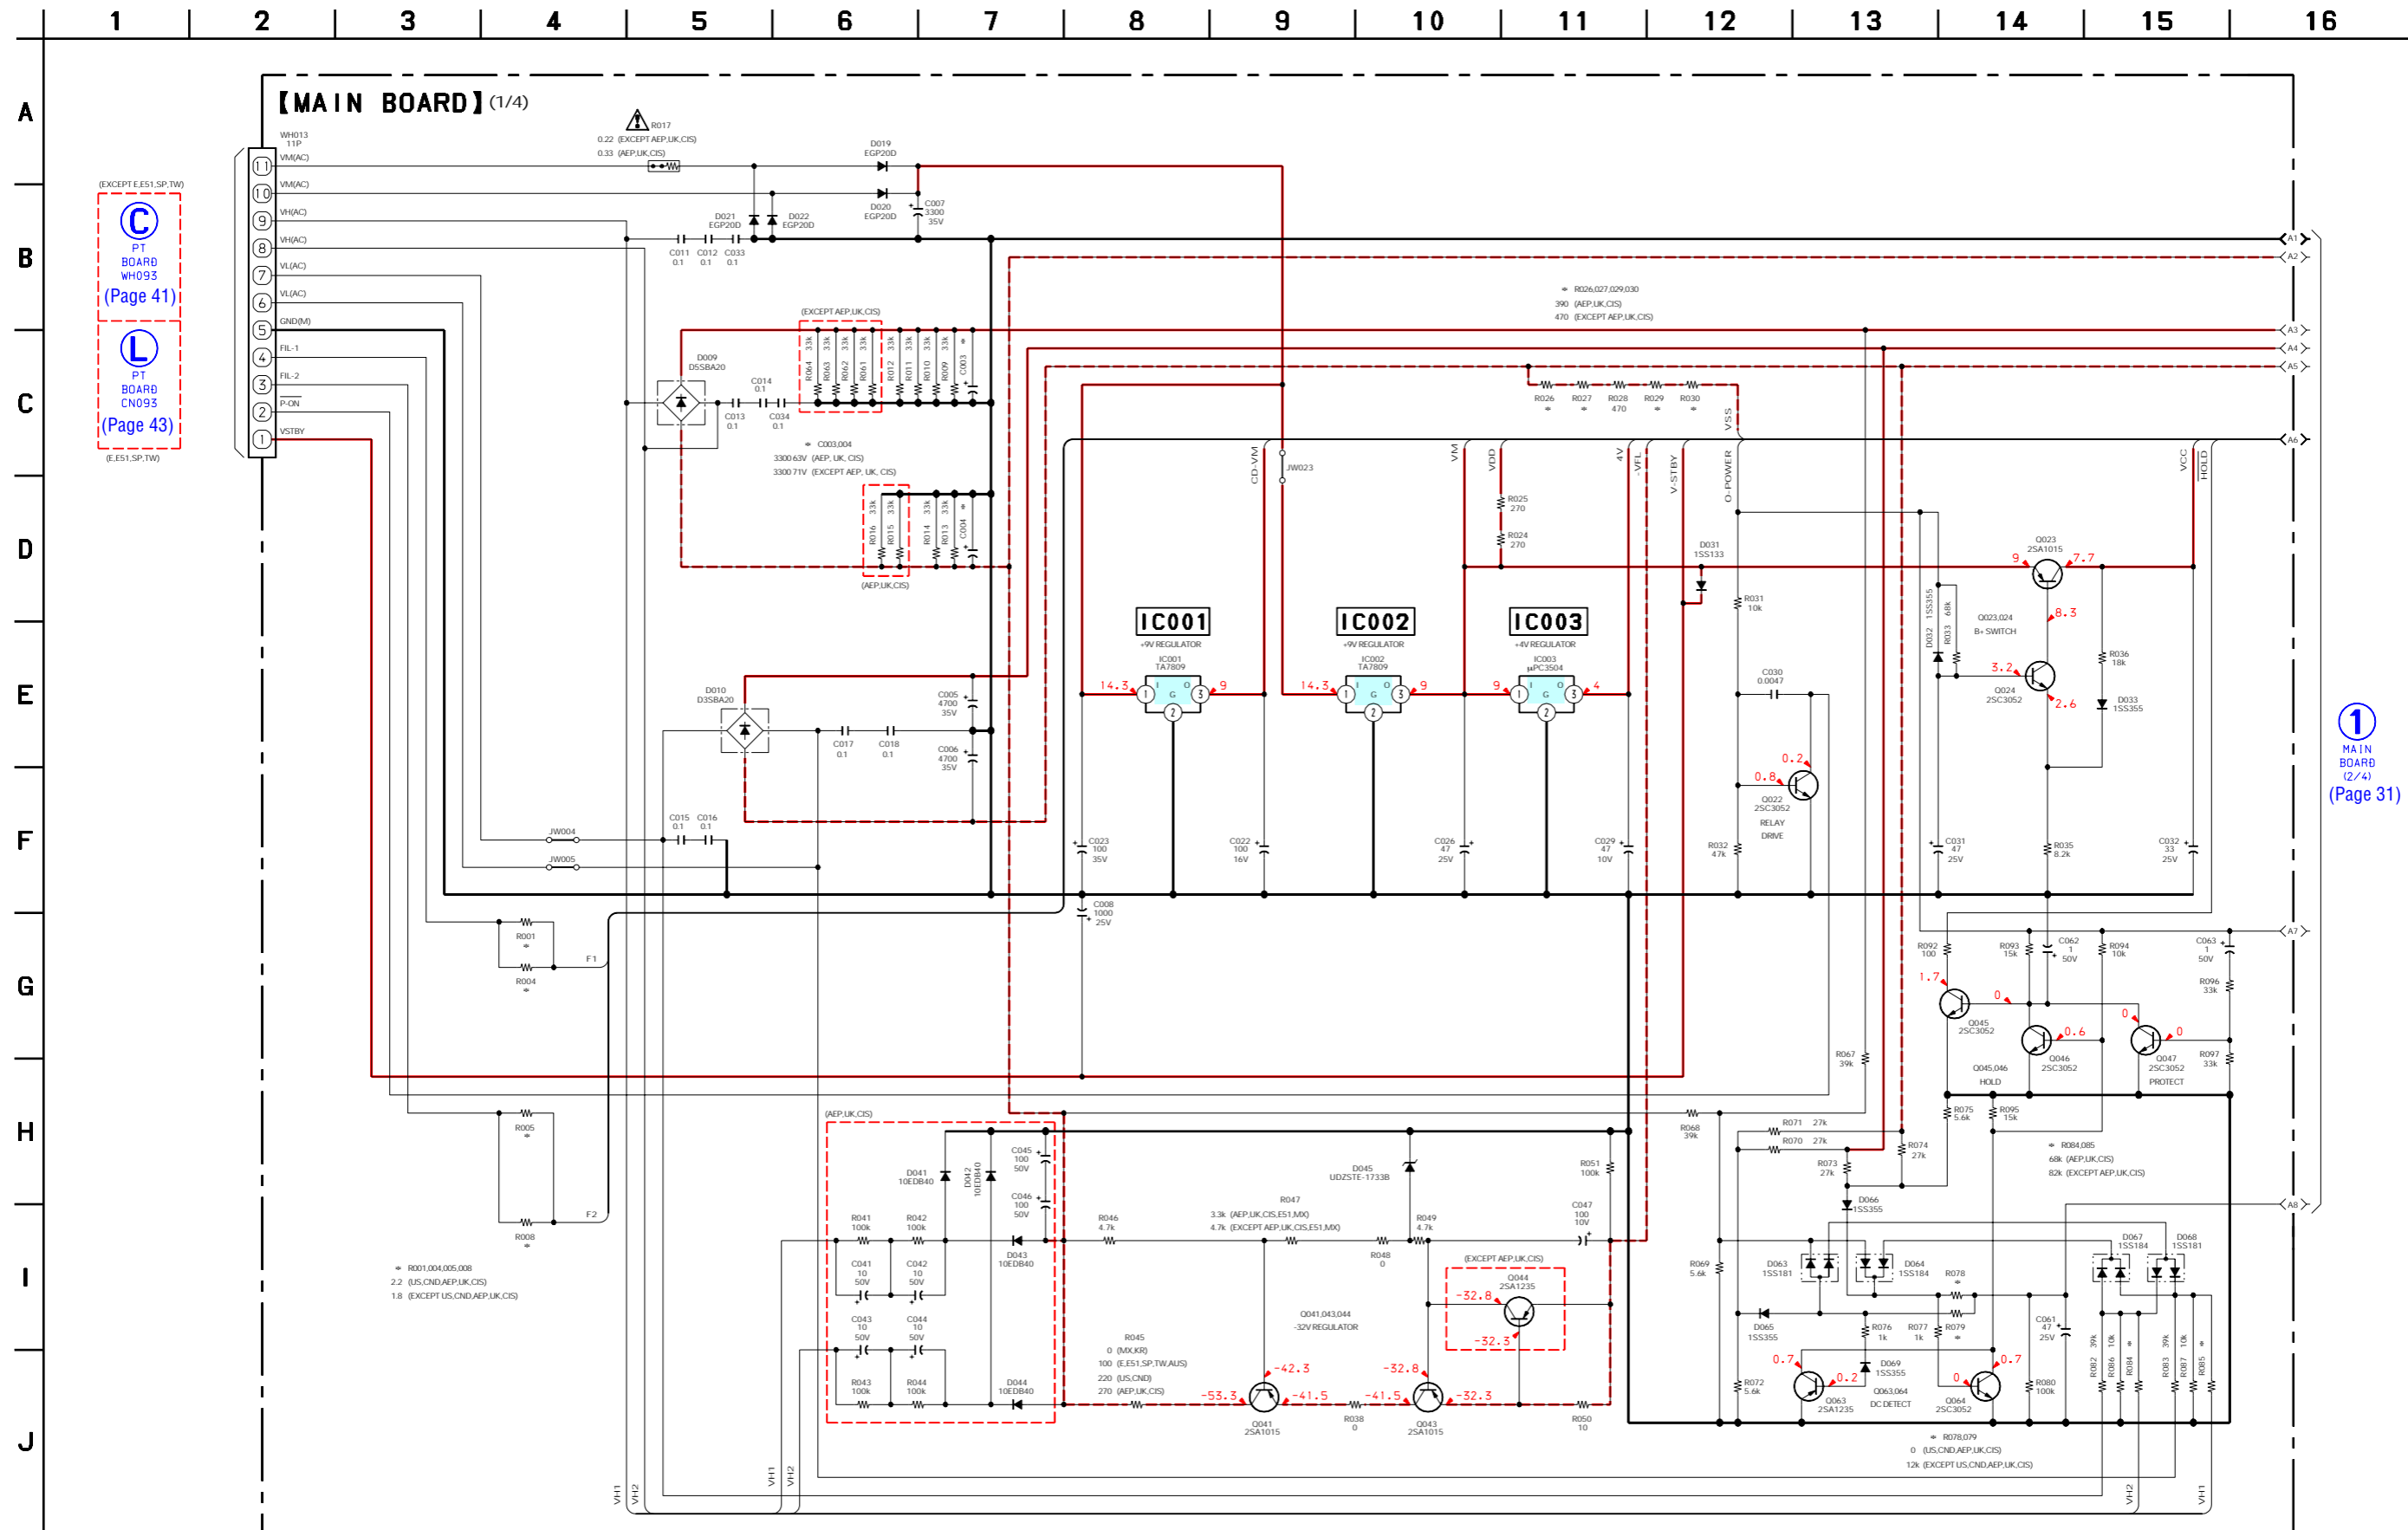

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

6-12. SCHEMATIC DIAGRAM – MAIN Section (2/4) –

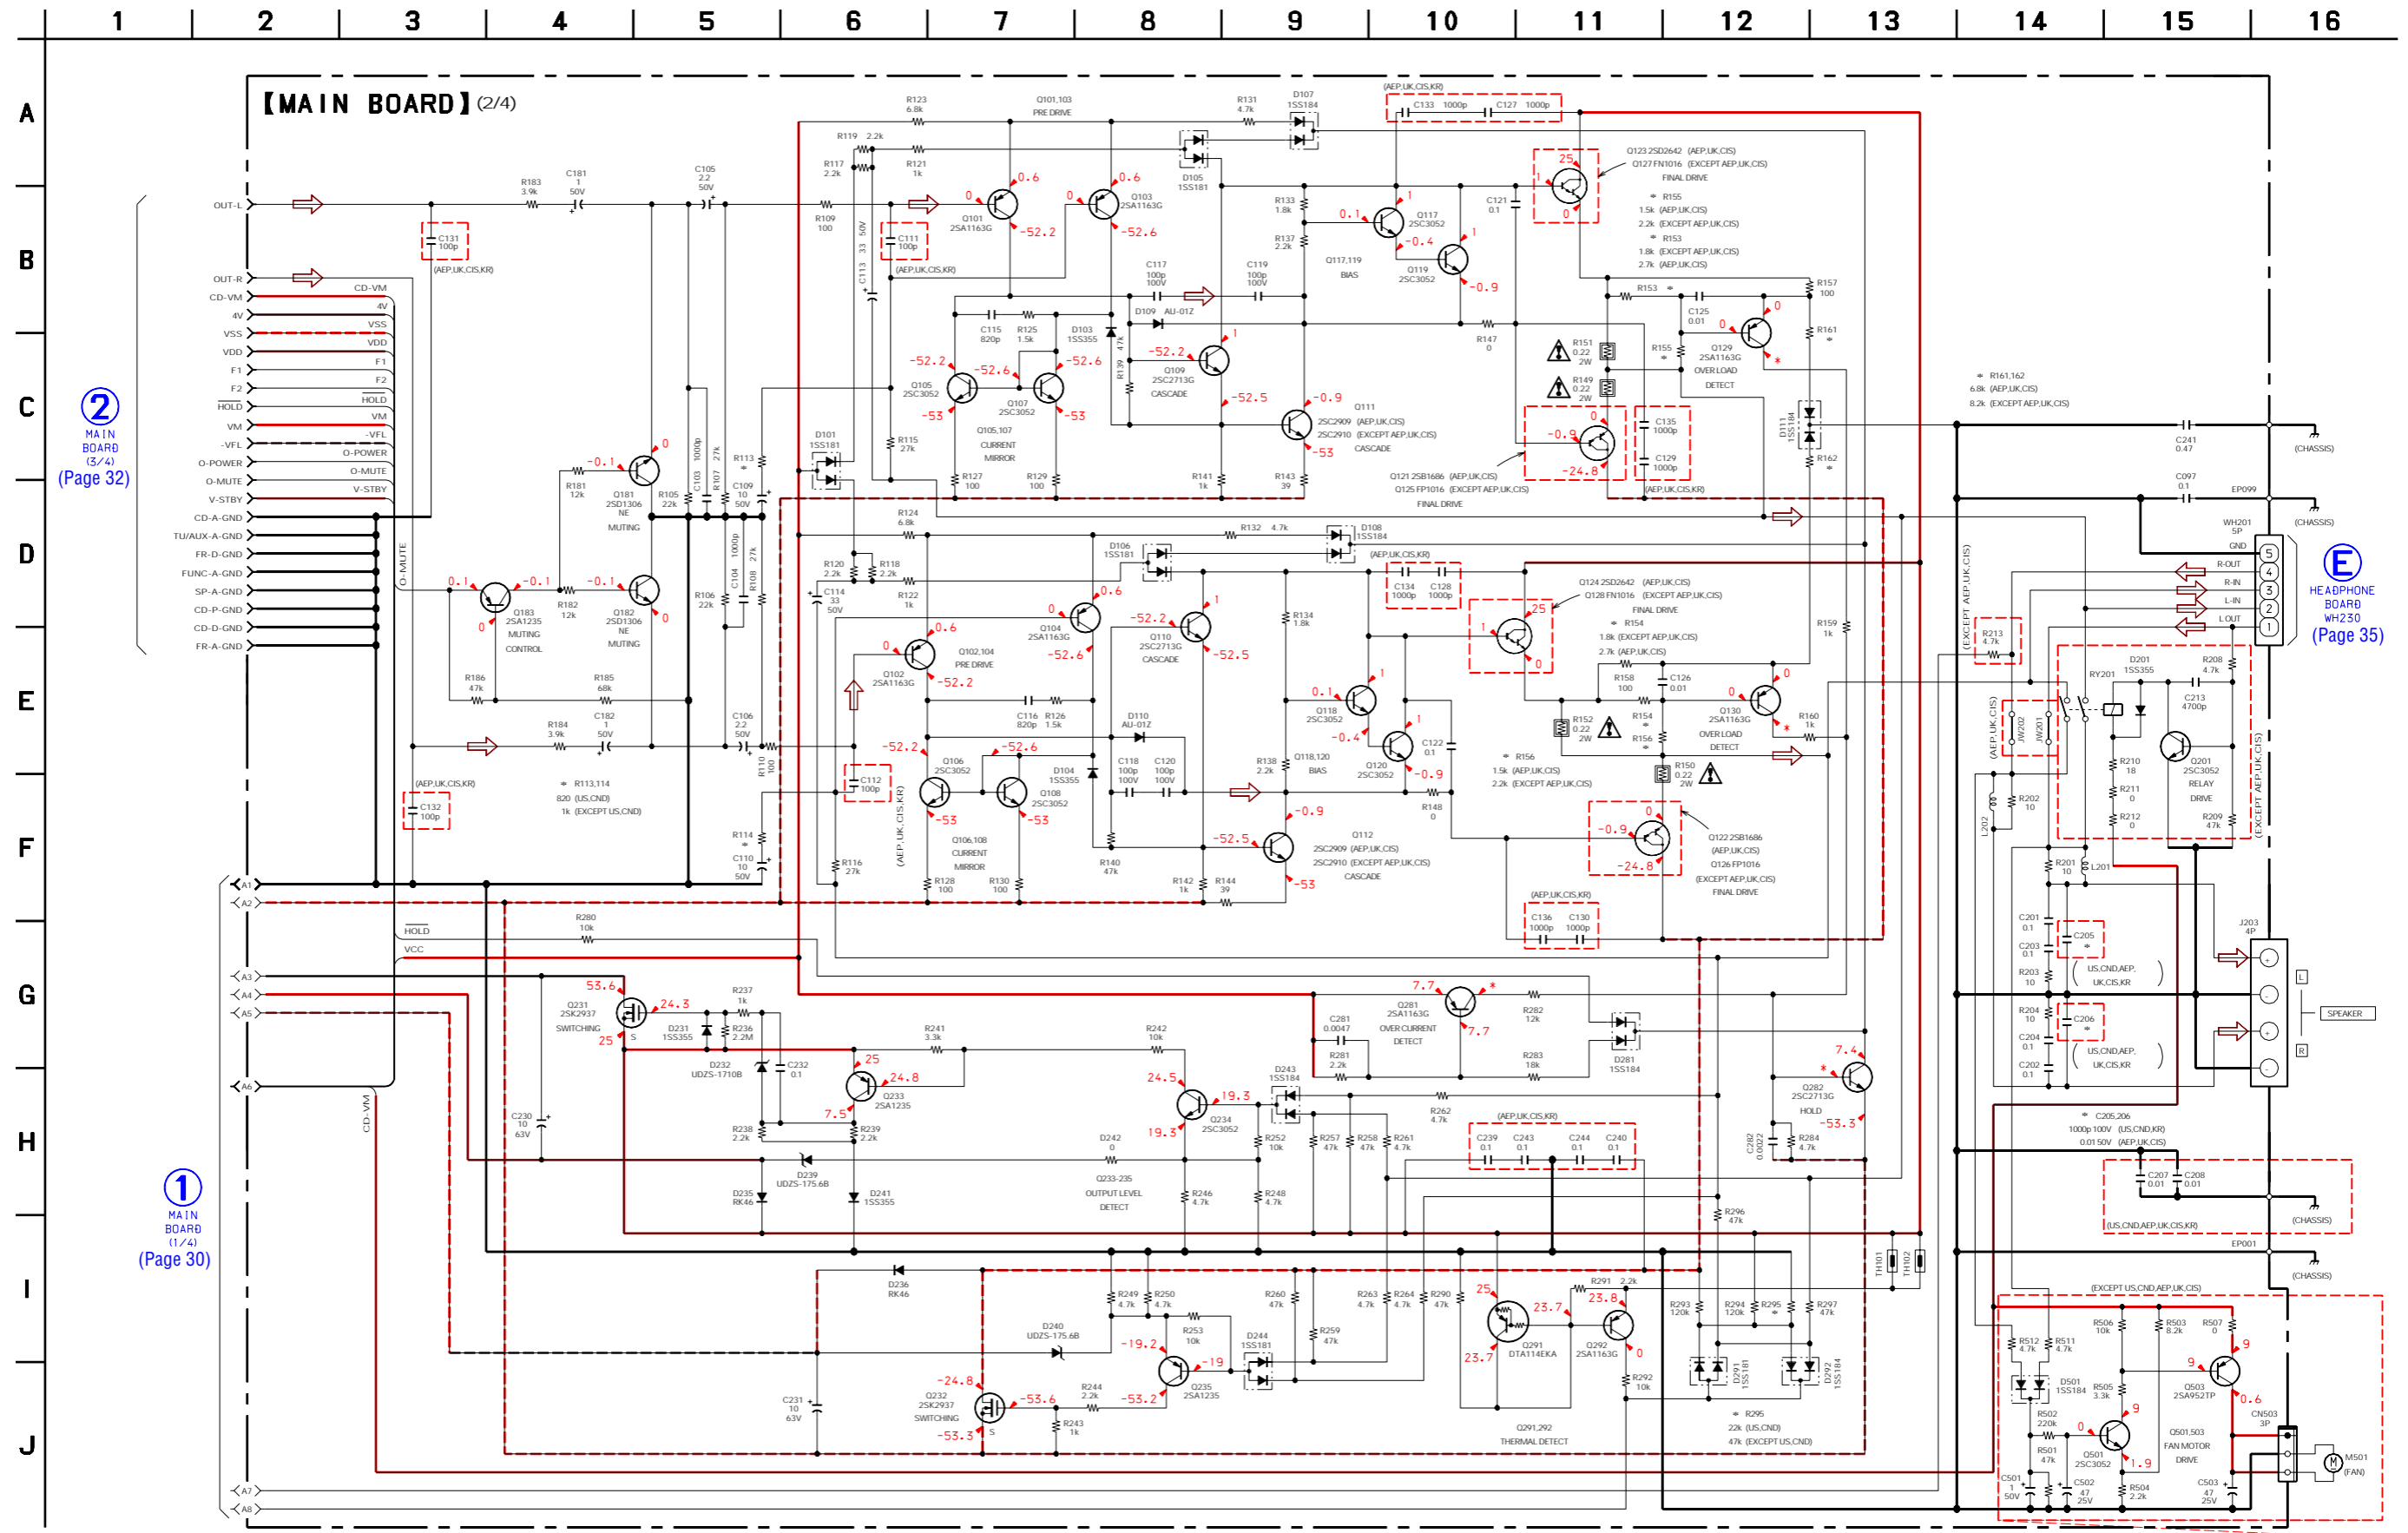


② MAIN BOARD (3/4) (Page 32)

⑤ HEADPHONE BOARD WH230 (Page 35)

① MAIN BOARD (1/4) (Page 30)

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

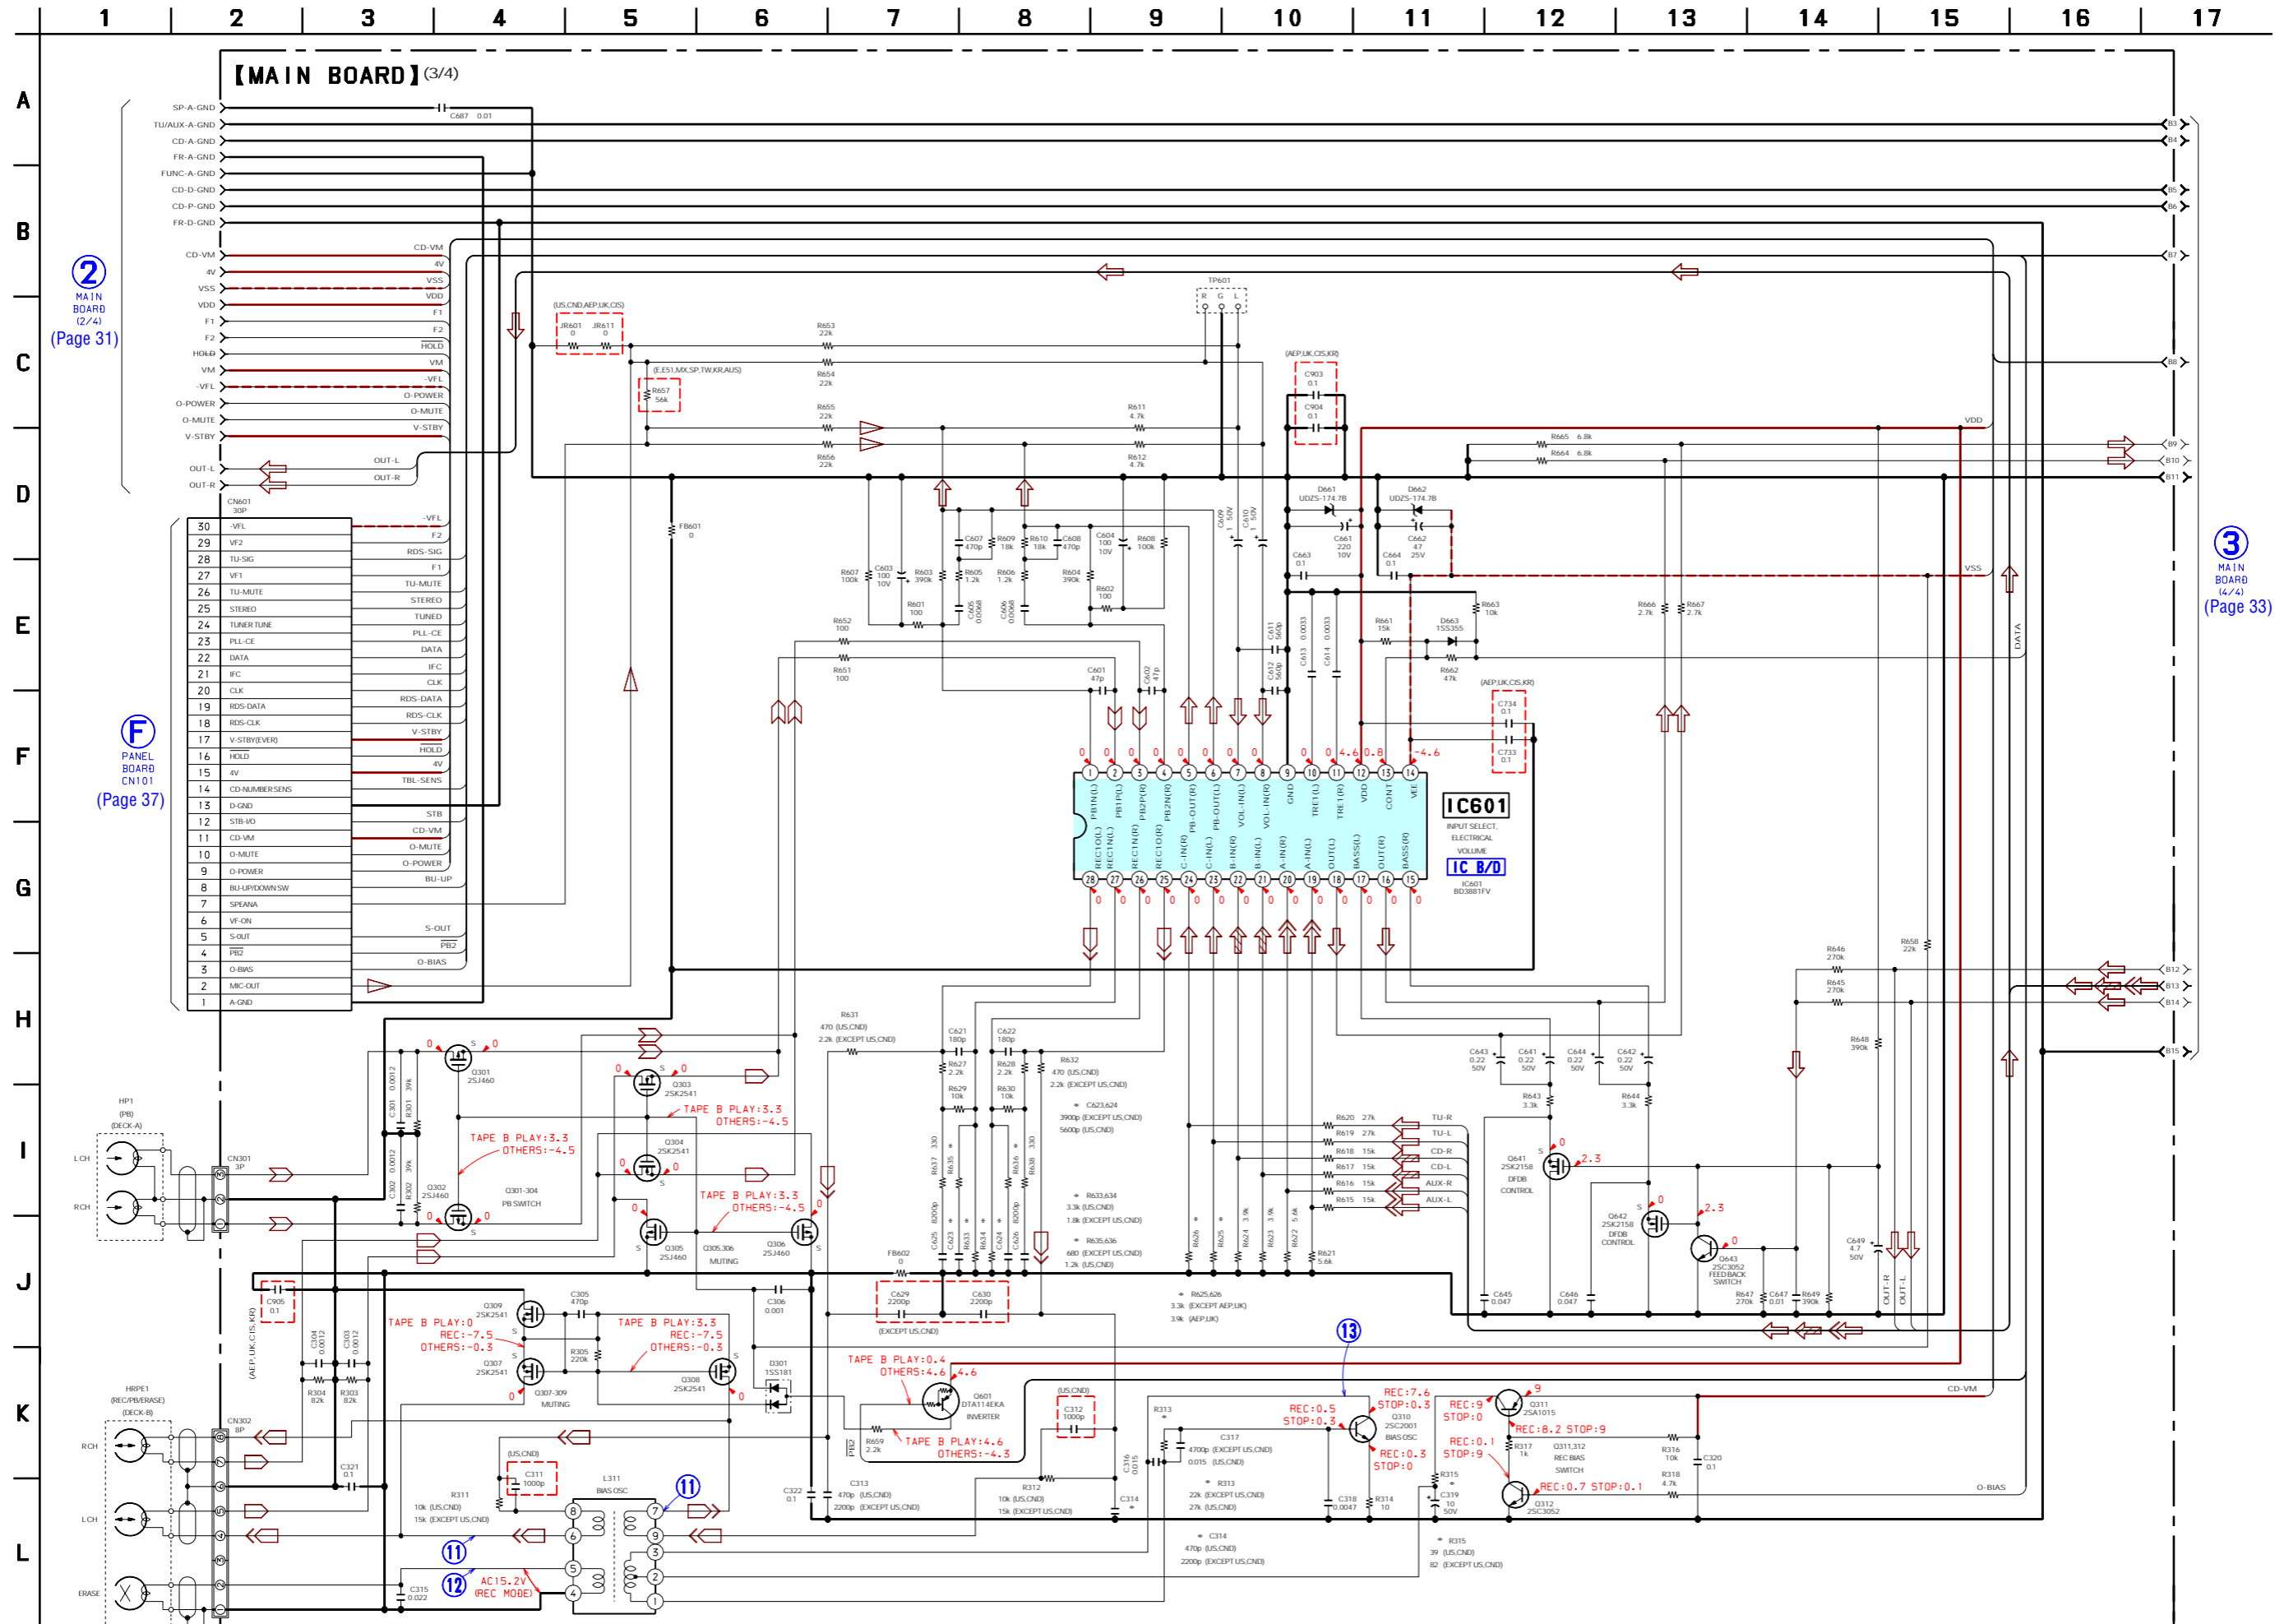

② MAIN BOARD (2/4) (Page 31)

⑥ PANEL BOARD CN101 (Page 37)

③ MAIN BOARD (4/4) (Page 33)



(4/4)

B3  
B4  
B5  
B6  
B7  
B8  
B9


3  
MAIN BOARD (3/4)

B10

B11

B12  
B13  
B14

B15

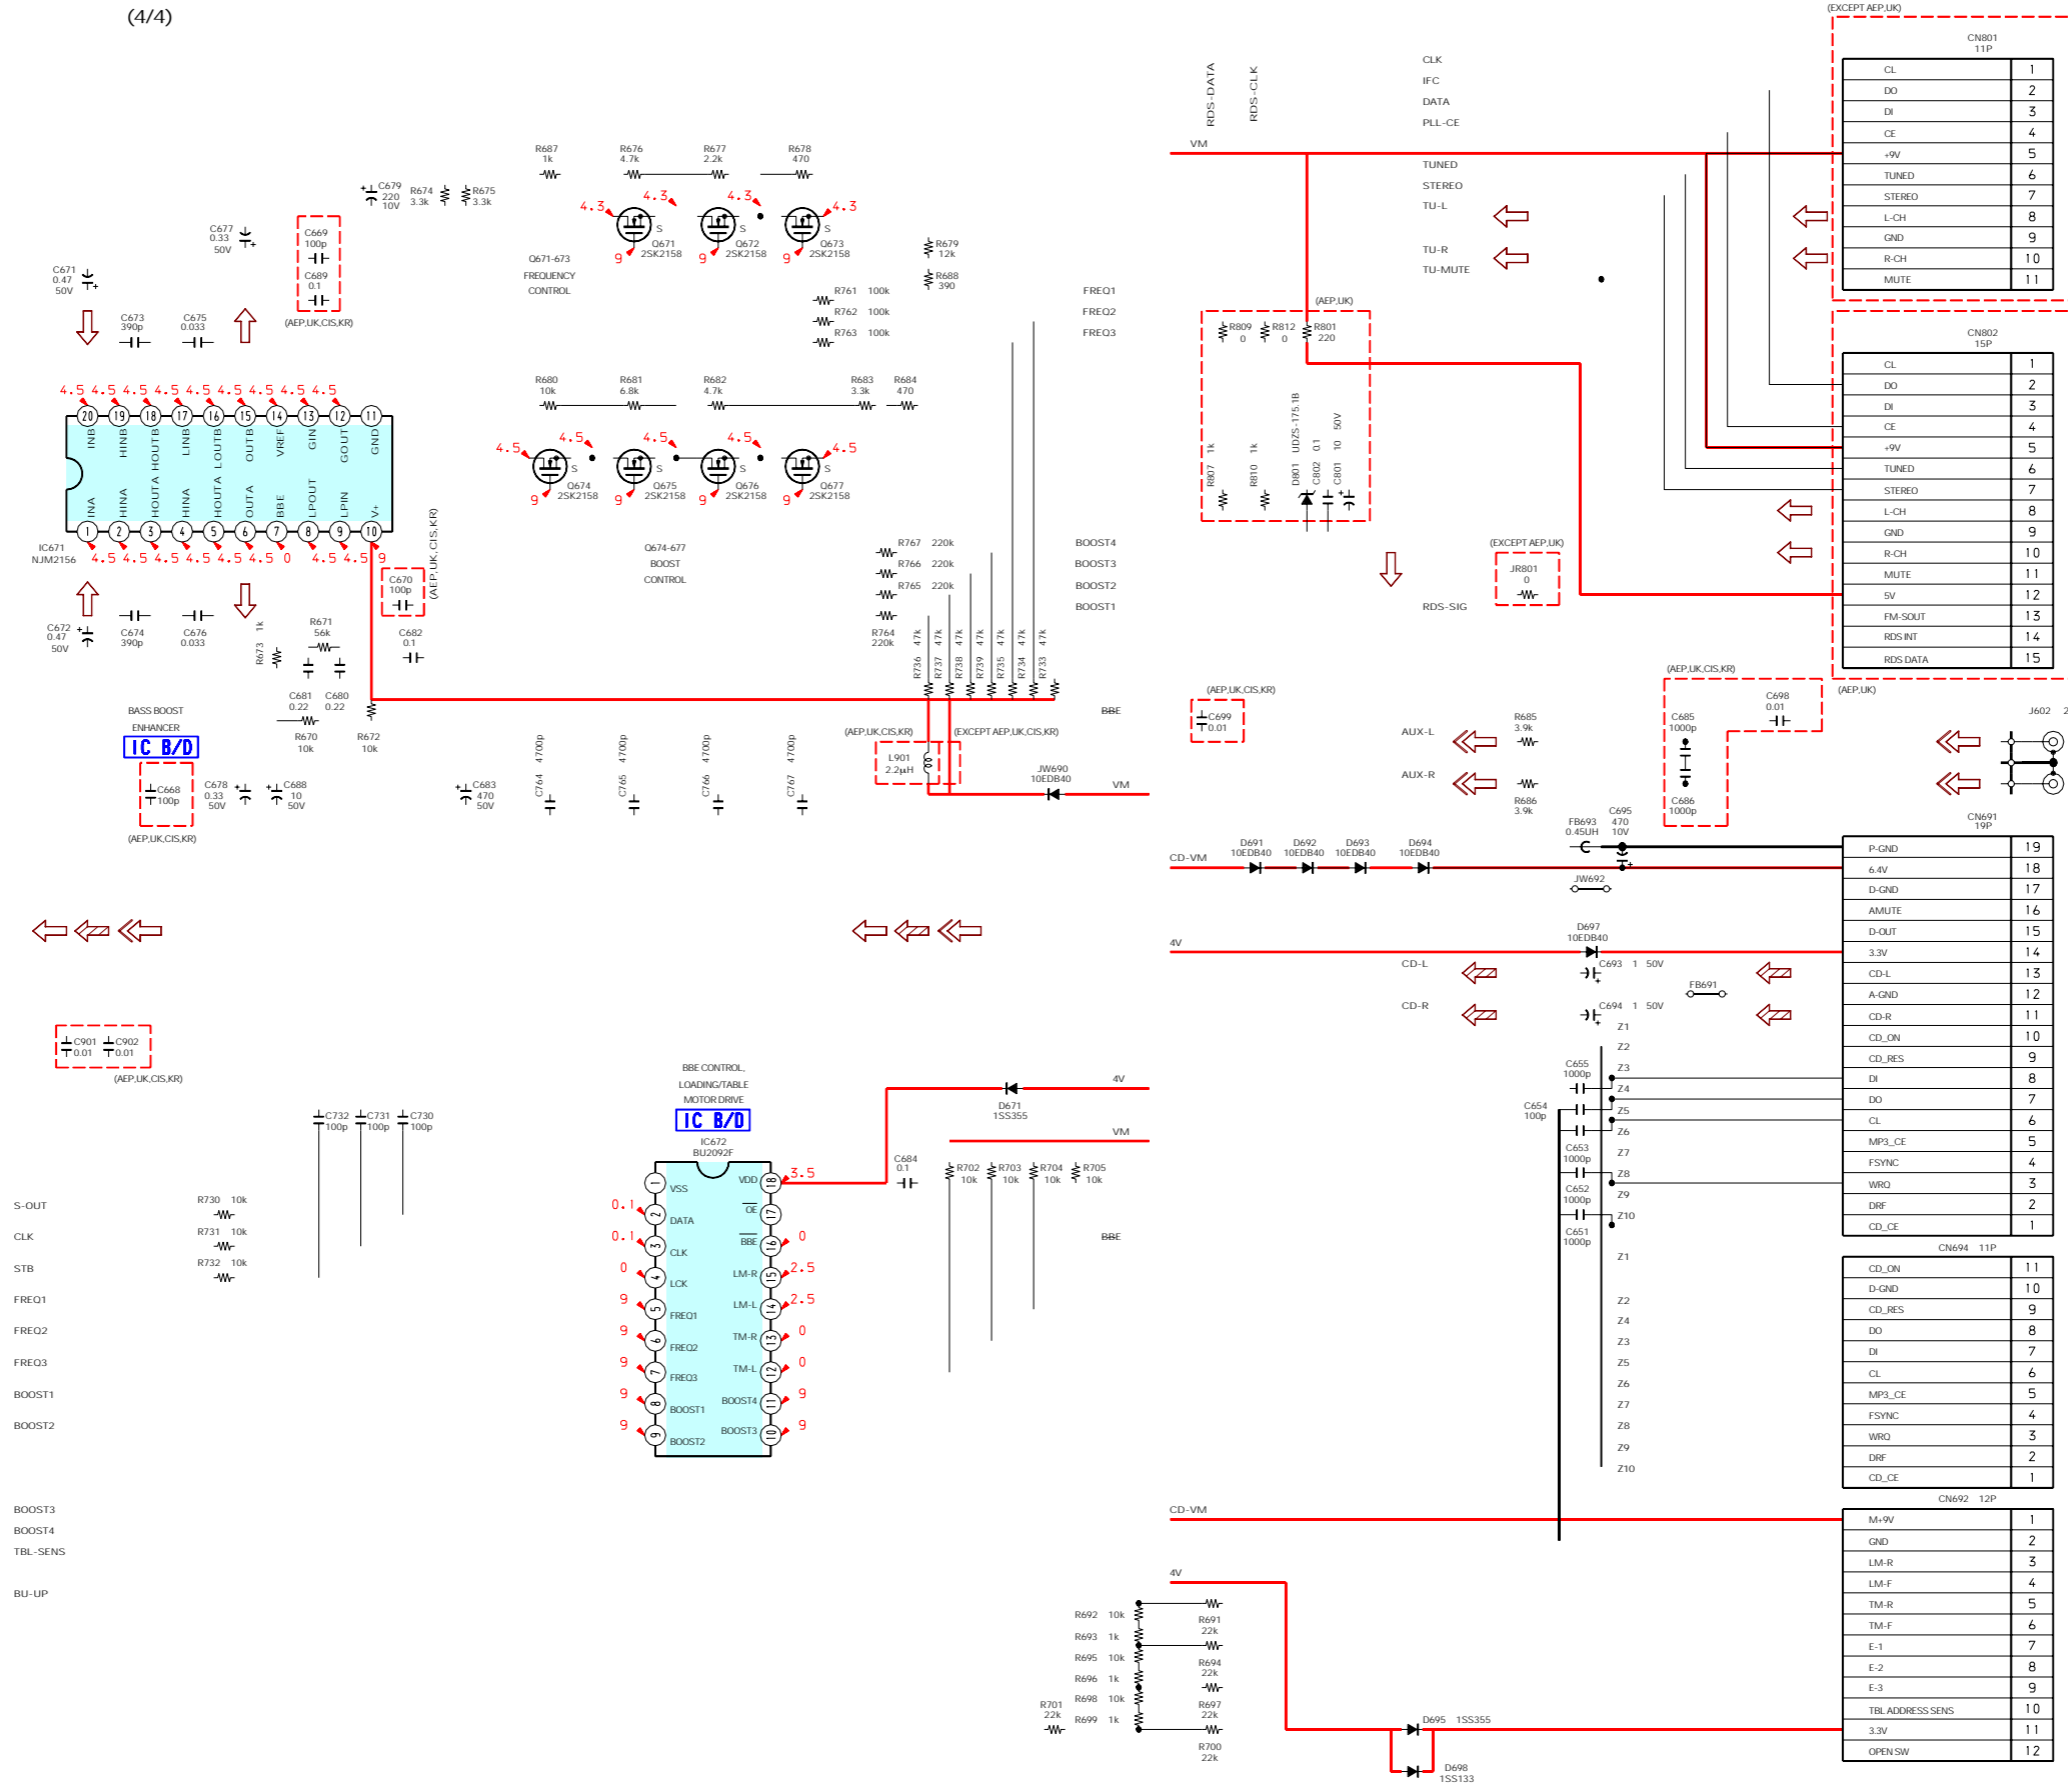

FM/AM TUNER PACK SUPPLIED WITH THE ASSEMBLED BLOCK


CL	1
DO	2
DI	3
CE	4
+9V	5
TUNED	6
STEREO	7
L-CH	8
R-CH	10
MUTE	11

CL	1
DO	2
DI	3
CE	4
+9V	5
TUNED	6
STEREO	7
L-CH	8
R-CH	10
MUTE	11
5V	12
FM-SOUT	13
RDS INT	14
RDS DATA	15

P-GND	19
6.4V	18
D-GND	17
AMUTE	16
D-OUT	15
3.3V	14
CD-L	13
A-GND	12
CD-R	11
CD_ON	10
CD_RES	9
Z2	8
DI	7
DO	6
CL	5
MP3_CE	4
FSYNC	3
WRO	2
DRF	1
CD_CE	1


CD_ON	11
D-GND	10
CD_RES	9
DO	8
DI	7
CL	6
MP3_CE	5
FSYNC	4
WRO	3
DRF	2
CD_CE	1

M+9V	1
GND	2
LM-R	3
LM-F	4
TM-R	5
TM-F	6
E-1	7
E-2	8
E-3	9
TBL ADDRESS SENS	10
3.3V	11
OPEN SW	12

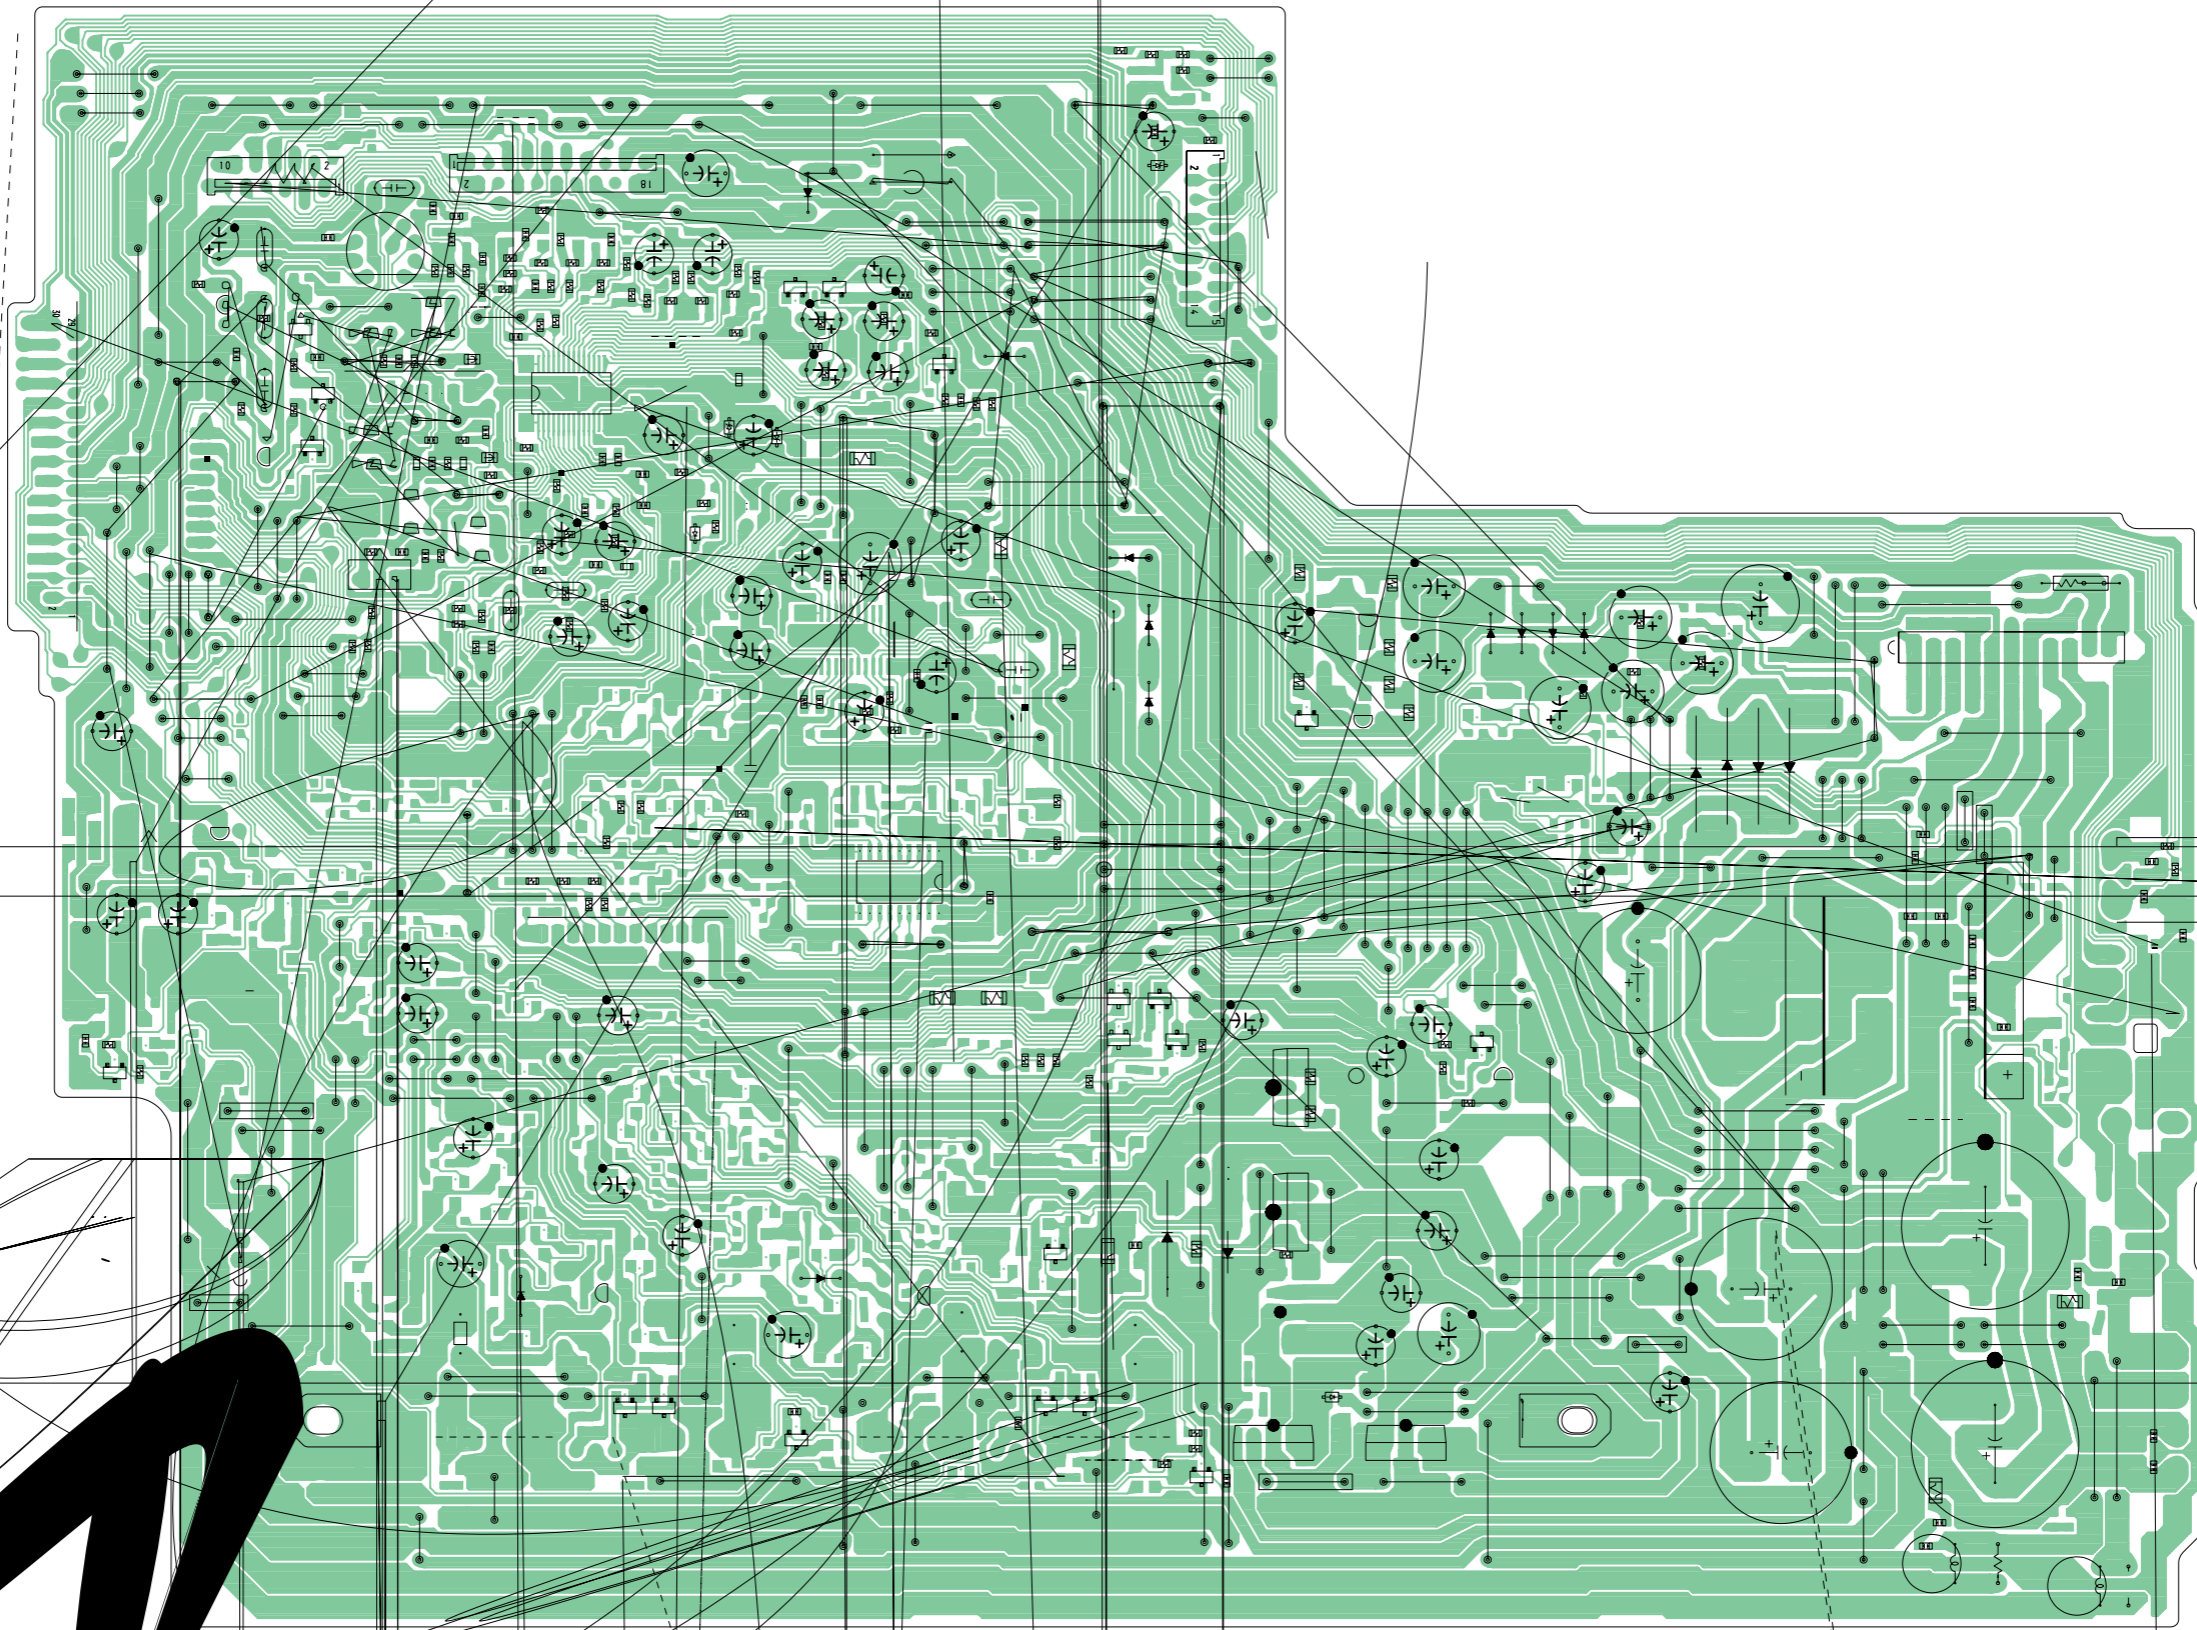


6-16. PRINTED WIRING BOARD – HP Section – • See page 23 for Circuit Boards Location.

 :Uses unleaded solder.

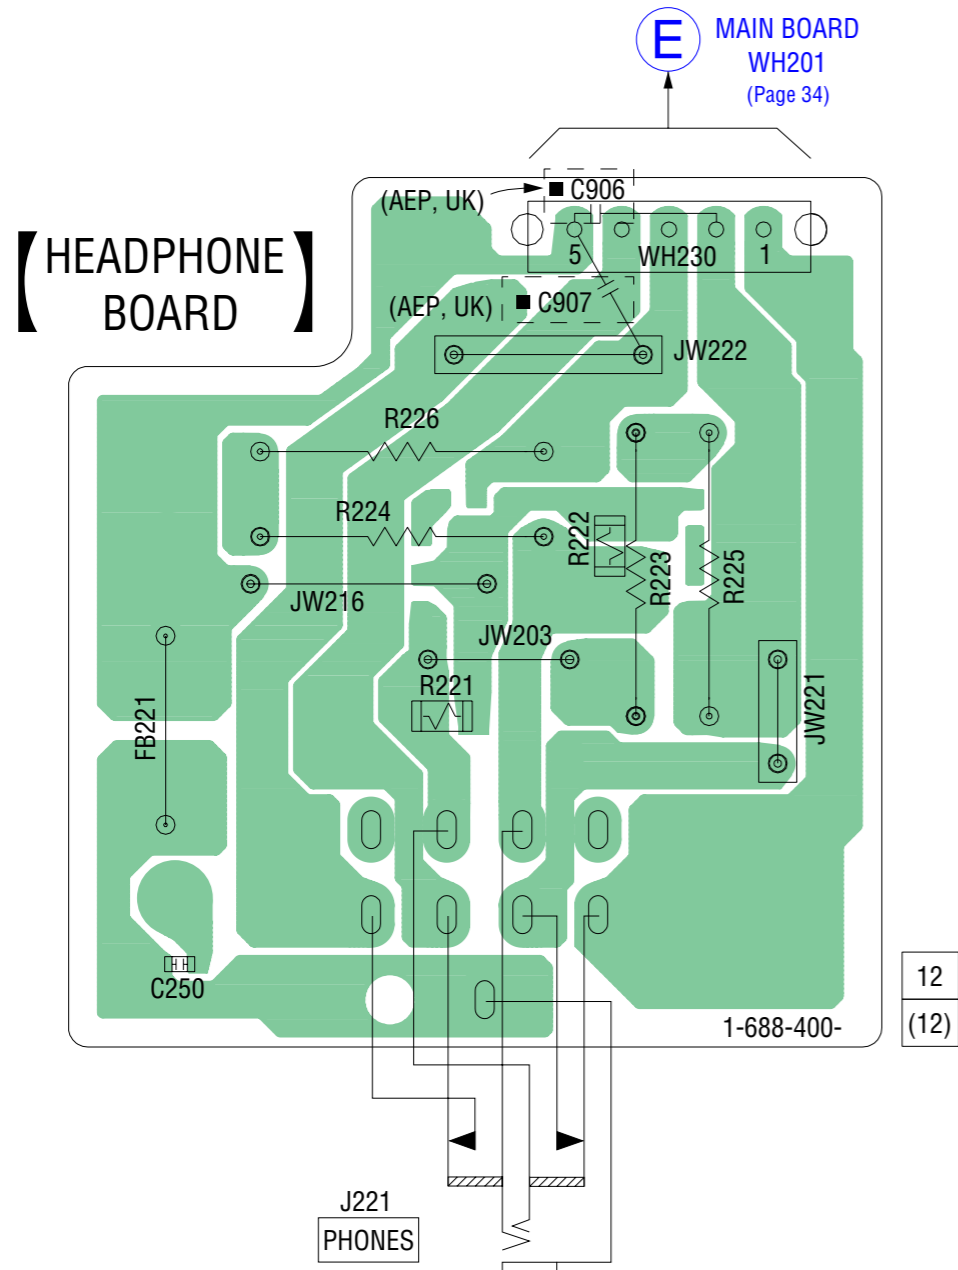


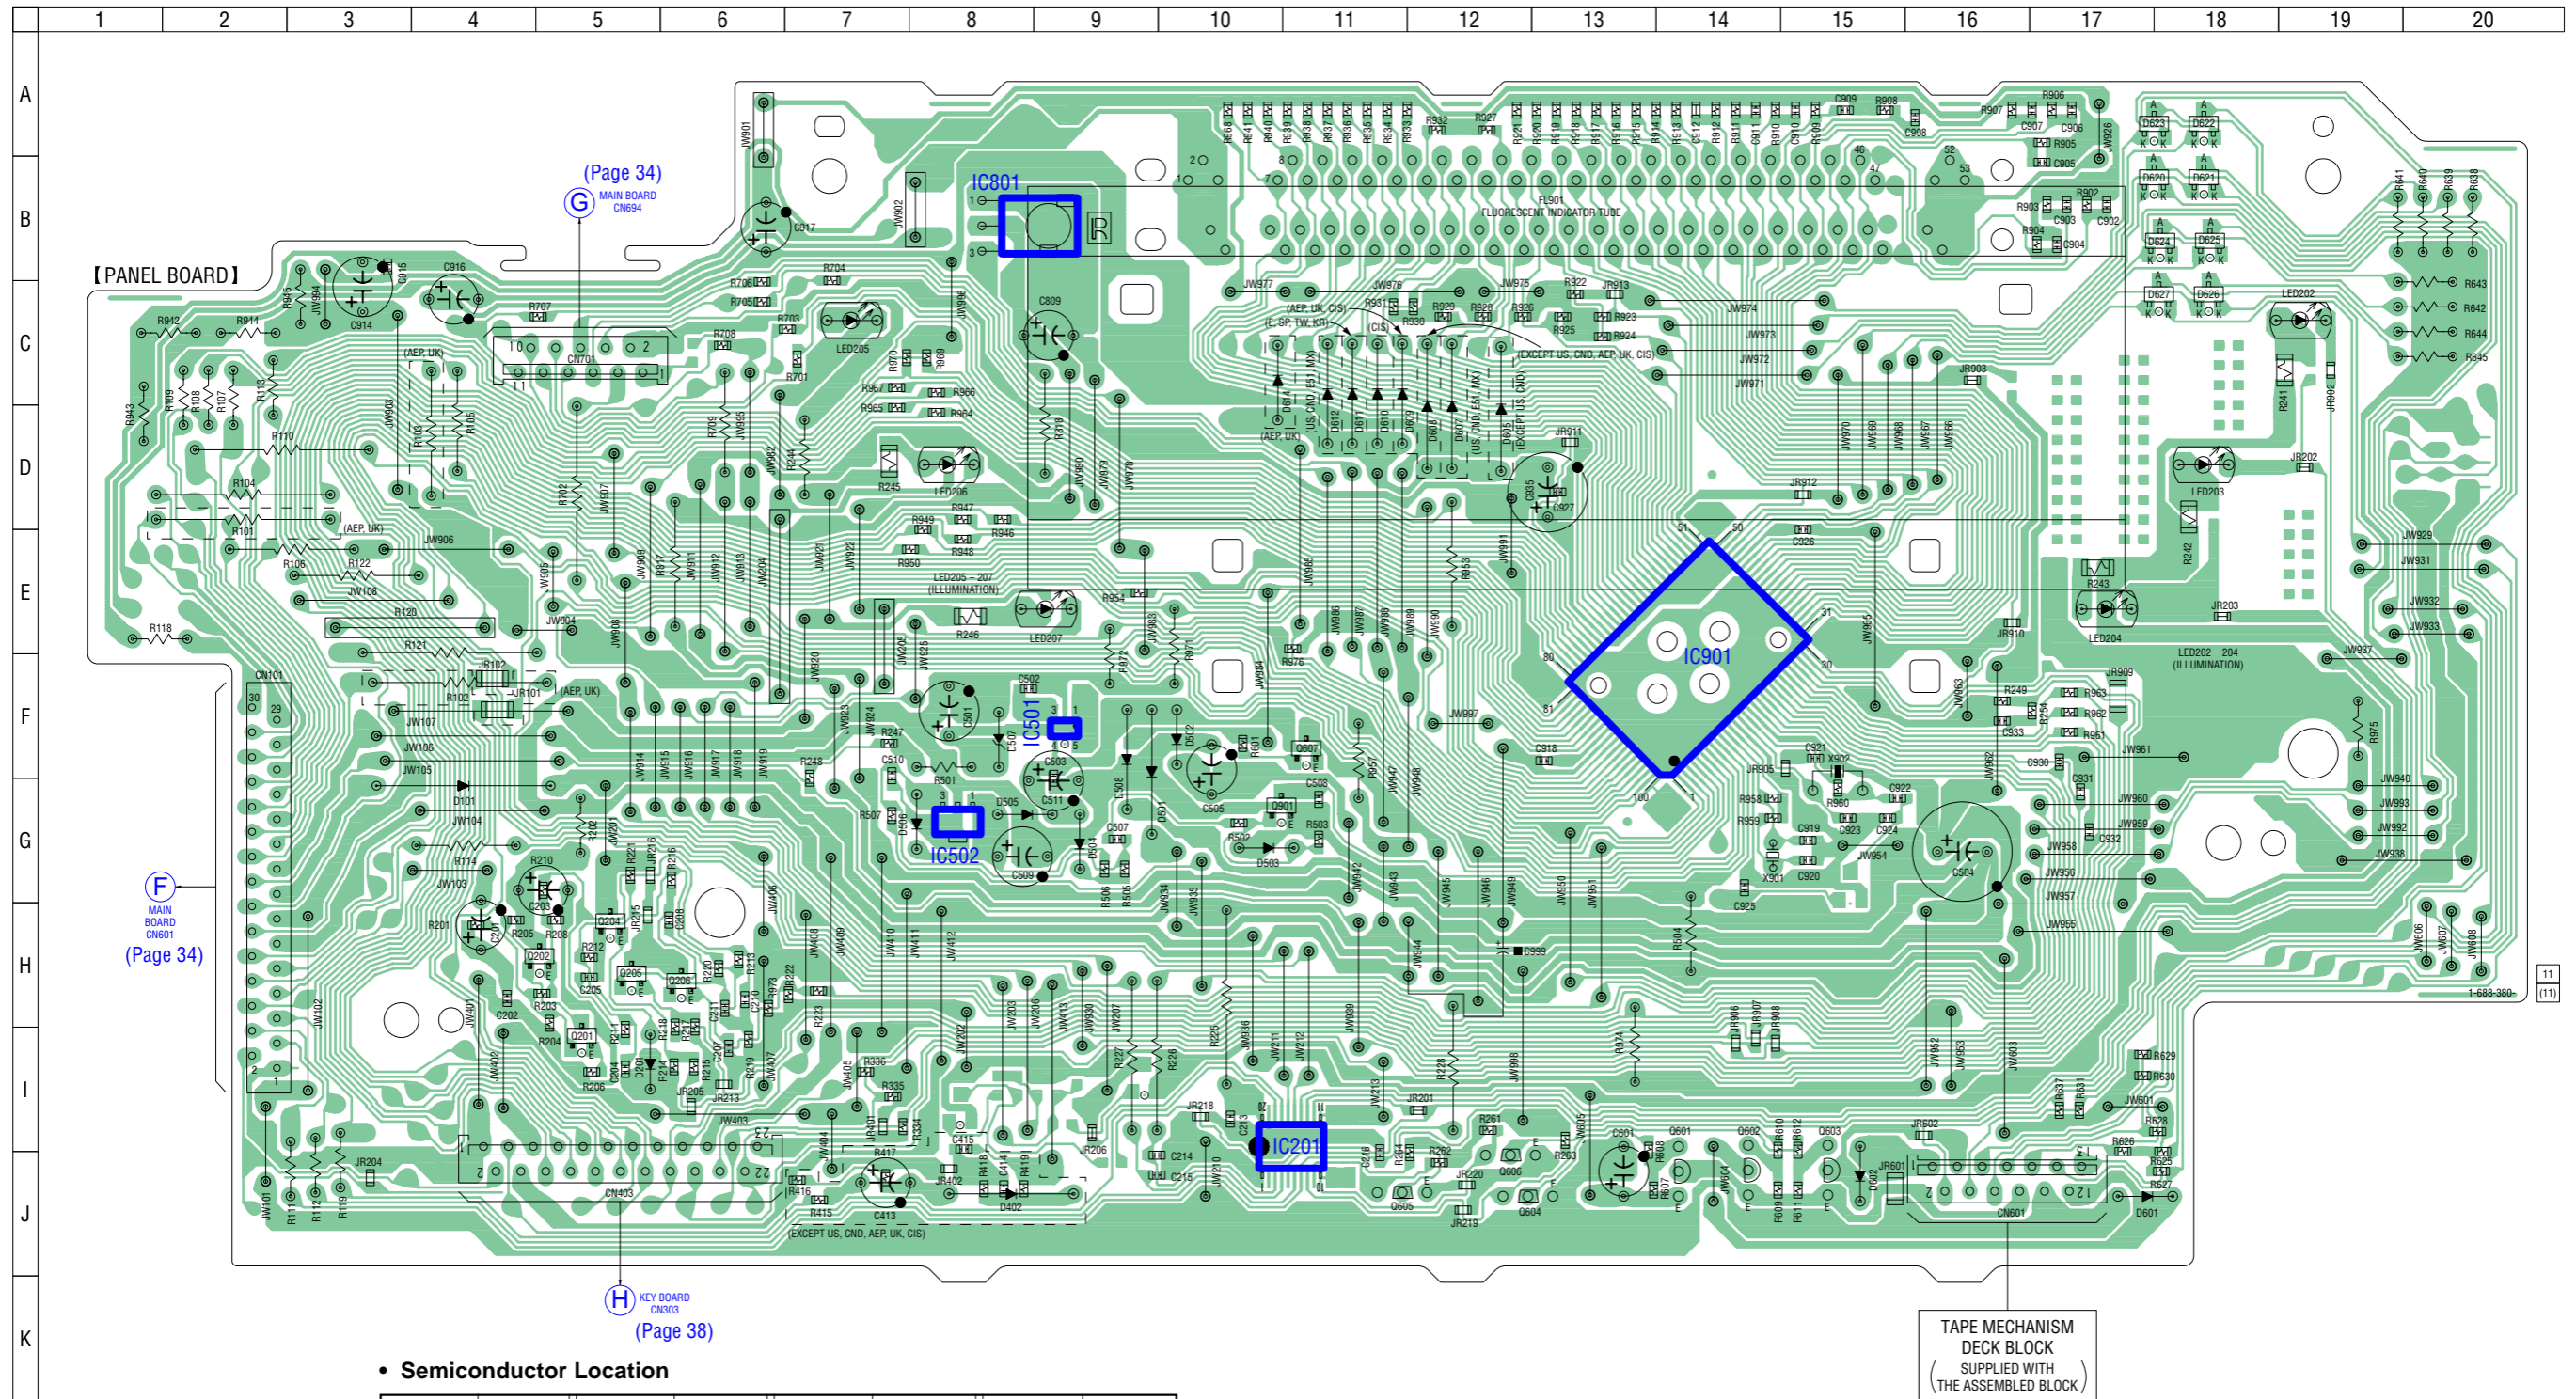
6-17. SCHEMATIC DIAGRAM – HP Section –

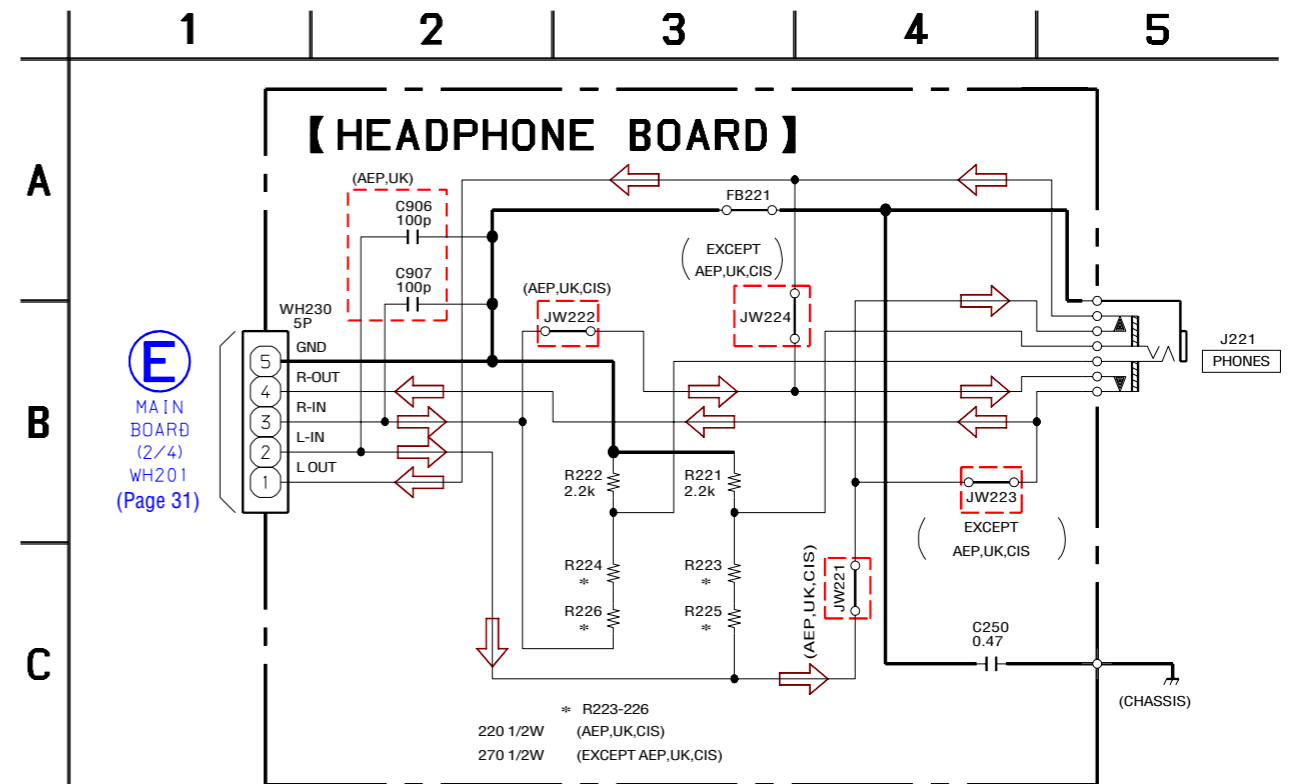

• Semiconductor Location

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D009	F-11	D101	F-4	D281	E-3	IC601	C-4	Q105	G-5	Q130	H-5	Q308	B-3
D010	F-10	D103	H-5	D291	F-4	IC671	D-5	Q106	G-4	Q181	F-4	Q309	B-3
D019	E-10	D104	G-4	D292	G-4	IC672	E-6	Q107	H-5	Q182	F-3	Q310	B-2
D020	E-10	D105	H-4	D301	B-3			Q108	G-4	Q183	E-3	Q311	C-2
D021	E-10	D106	H-3	D501	F-7	JW690	D-6	Q109	H-5	Q201	F-2	Q312	C-3
D022	E-10	D107	G-4	D661	C-5			Q110	H-4	Q231	G-8	Q501	F-2
D031	H-8	D108	G-3	D662	C-5	Q022	D-10	Q111	G-6	Q232	F-8	Q503	E-2
D032	F-8	D109	G-5	D663	C-5	Q023	F-9	Q112	G-4	Q233	G-6	Q601	C-5
D033	F-8	D110	G-4	D671	F-6	Q024	F-9	Q117	H-6	Q234	G-6	Q641	B-5
D041	D-9	D111	H-6	D691	D-7	Q041	D-8	Q118	H-4	Q235	G-7	Q642	B-3
D042	D-9	D201	F-2	D692	D-7	Q043	D-8	Q119	H-7	Q281	E-3	Q643	C-6
D043	D-9	D231	G-8	D693	D-7	Q044	D-8	Q120	H-4	Q282	F-3	Q671	E-6
D044	D-9	D232	G-7	D694	C-6	Q045	E-9	Q121	H-6	Q291	F-4	Q672	E-6
D045	D-8	D235	G-7	D695	F-4	Q046	E-9	Q122	H-4	Q292	G-5	Q673	E-6
D063	F-7	D236	G-7	D697	B-5	Q047	E-9	Q123	H-7	Q301	C-3	Q674	E-5
D064	F-7	D239	G-6	D698	F-4	Q063	F-7	Q124	H-5	Q302	D-3	Q675	E-4
D065	F-6	D240	G-7	D801	B-7	Q064	F-7	Q125	H-6	Q303	C-3	Q676	E-4
D066	F-6	D241	H-7			Q101	G-5	Q126	H-4	Q304	C-3	Q677	E-4
D067	D-9	D242	G-6	IC001	H-8	Q102	G-4	Q127	H-7	Q305	C-3		
D068	D-9	D243	G-6	IC002	H-8	Q103	G-5	Q128	H-5	Q306	C-3		
D069	F-7	D244	F-5	IC003	G-8	Q104	G-3	Q129	H-7	Q307	B-3		


6-18. PRINTED WIRING BOARD – PANEL Section – • See page 23 for Circuit Boards Location.  :Uses unleaded solder.




• Semiconductor Location

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D101	G-4	D607	D-12	D627	C-18	Q201	I-5
D201	I-5	D608	D-12			Q202	H-5
D402	J-8	D609	C-11	IC201	I-11	Q204	H-5
D501	F-9	D610	C-11	IC501	F-9	Q205	H-5
D502	F-10	D611	C-11	IC502	G-8	Q206	H-6
D503	G-10	D612	C-11	IC801	B-9	Q601	J-14
D504	G-9	D614	C-10	IC901	F-14	Q602	J-14
D505	G-8	D620	B-18			Q603	J-15
D506	G-8	D621	B-18	LED202	C-19	Q604	J-12
D507	F-8	D622	A-18	LED203	D-18	Q605	J-11
D508	F-9	D623	A-18	LED204	E-17	Q606	J-12
D601	J-17	D624	B-18	LED205	C-7	Q607	F-11
D602	J-15	D625	B-18	LED206	D-8	Q901	G-10
D605	D-12	D626	C-18	LED207	E-9		


6-19. SCHEMATIC DIAGRAM – PANEL Section – • See page 44 for IC Block Diagram. • See page 44 for Waveforms.

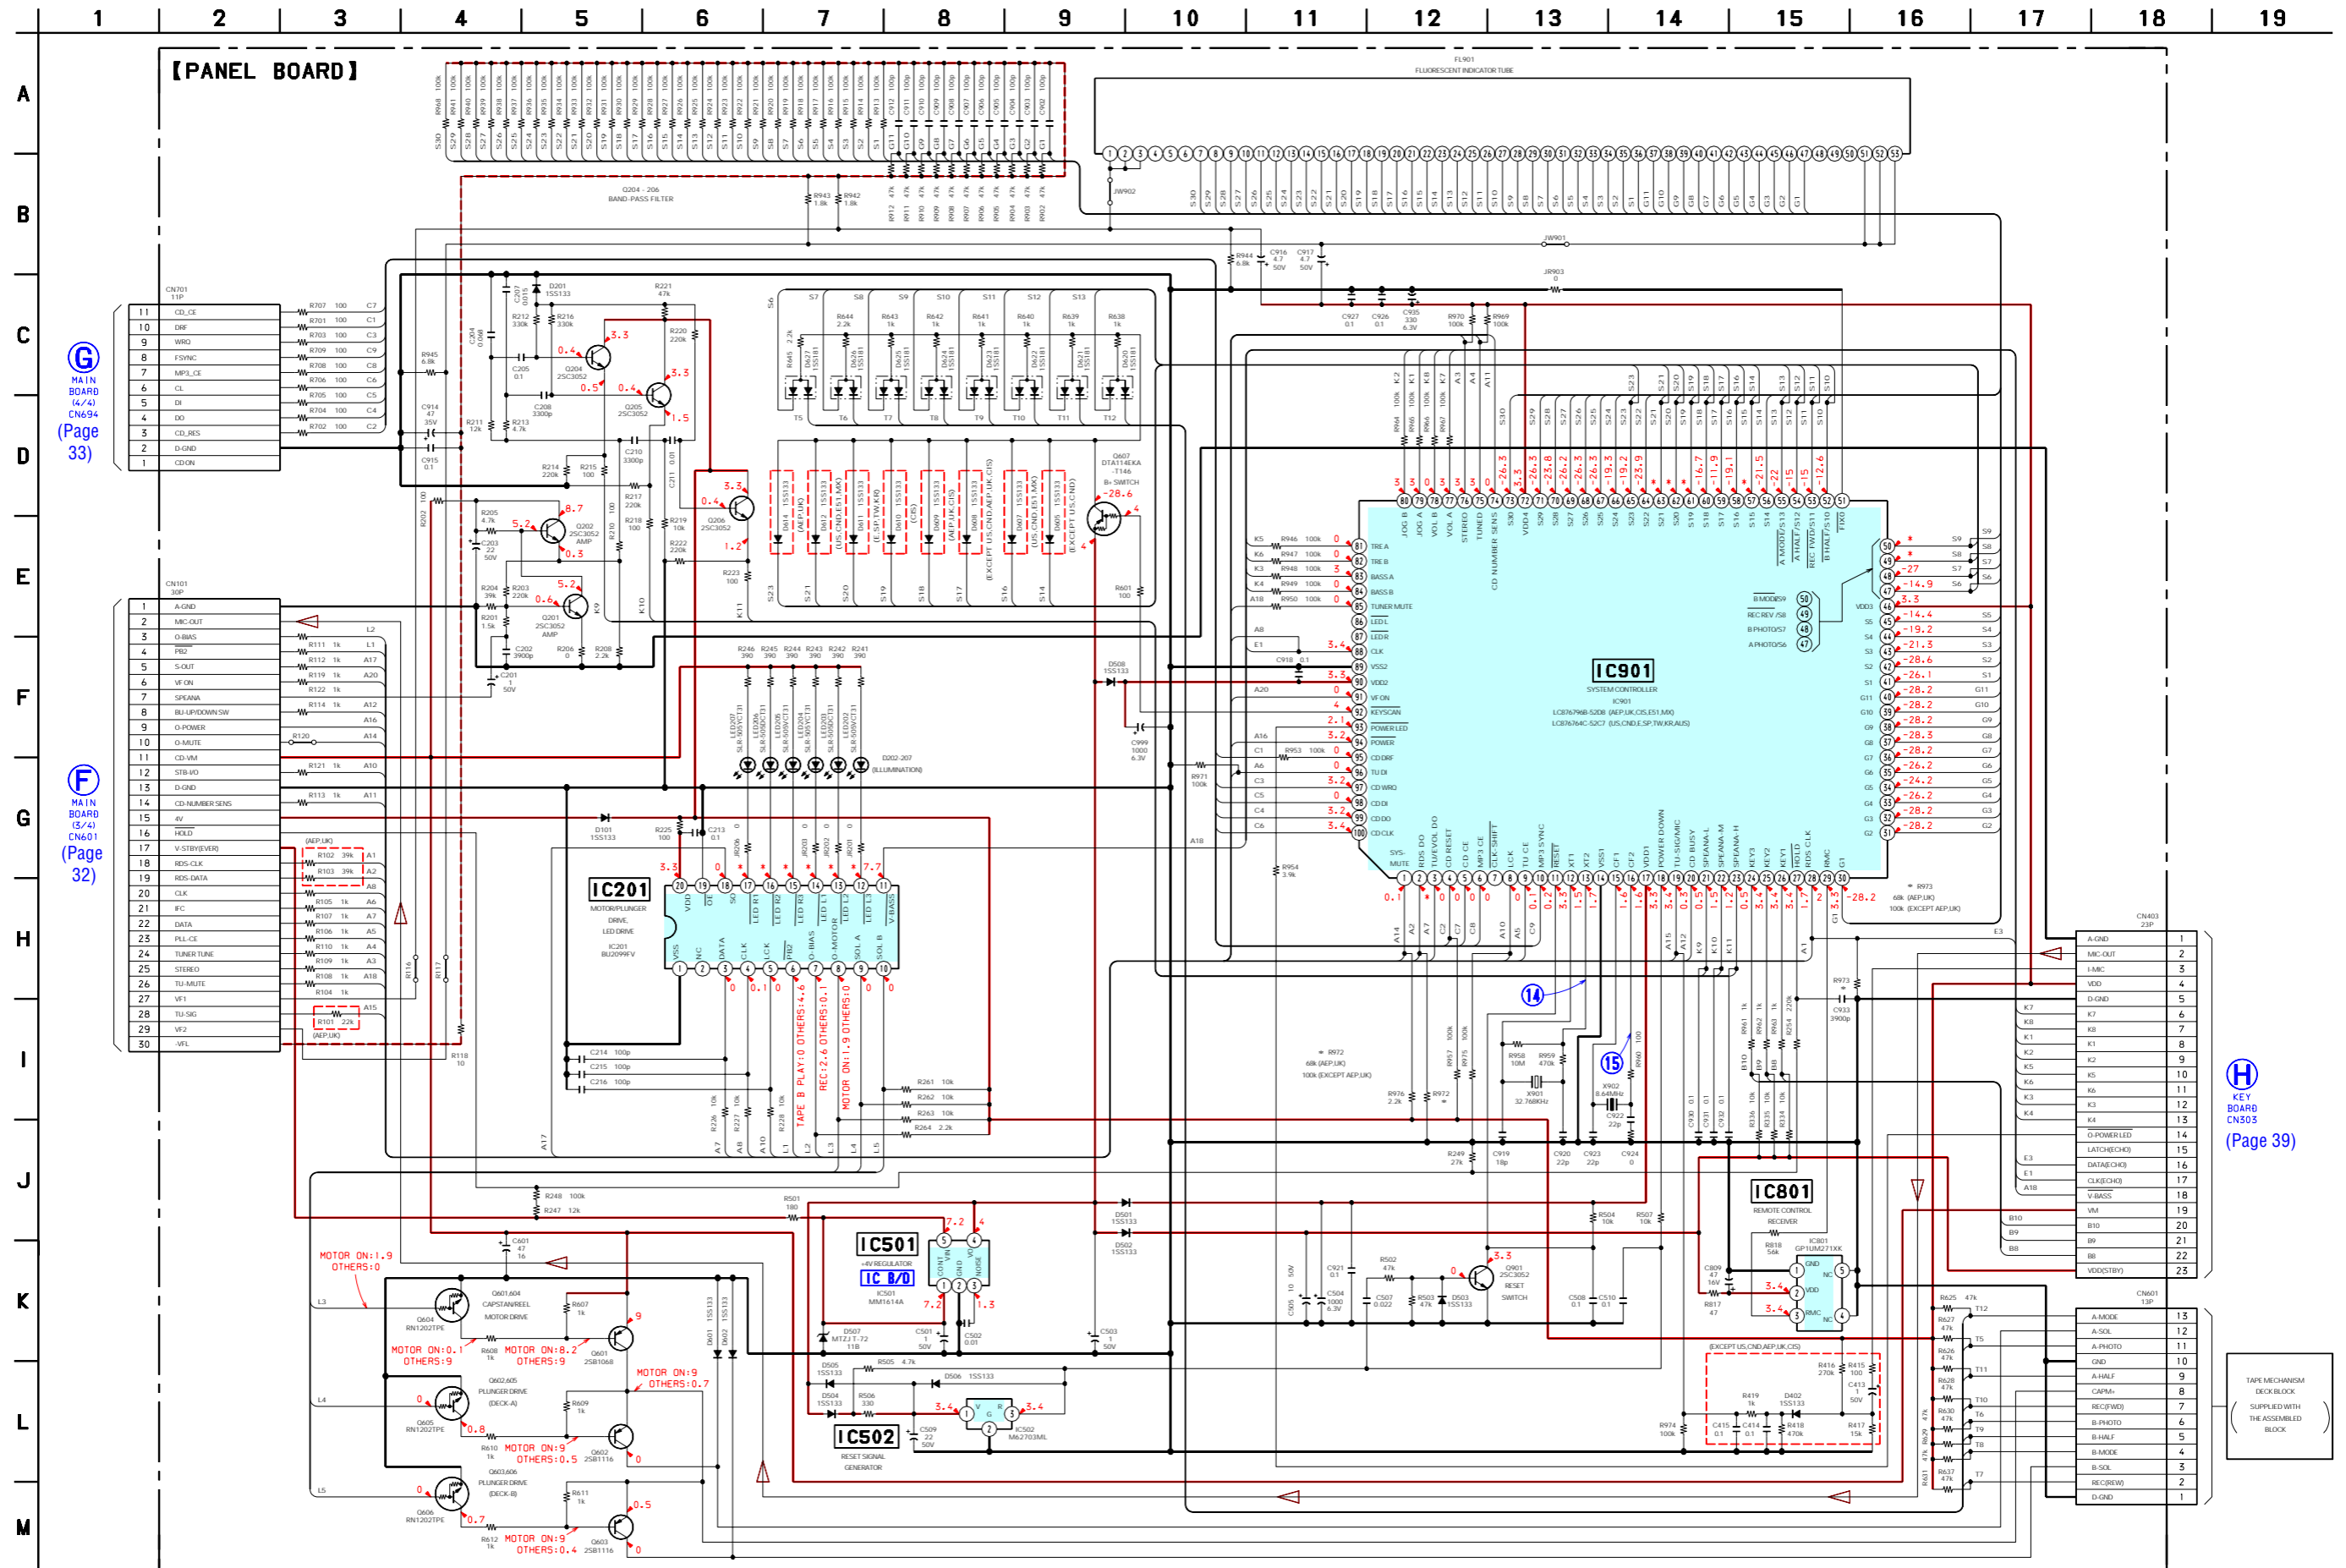


【KEY BOARD】

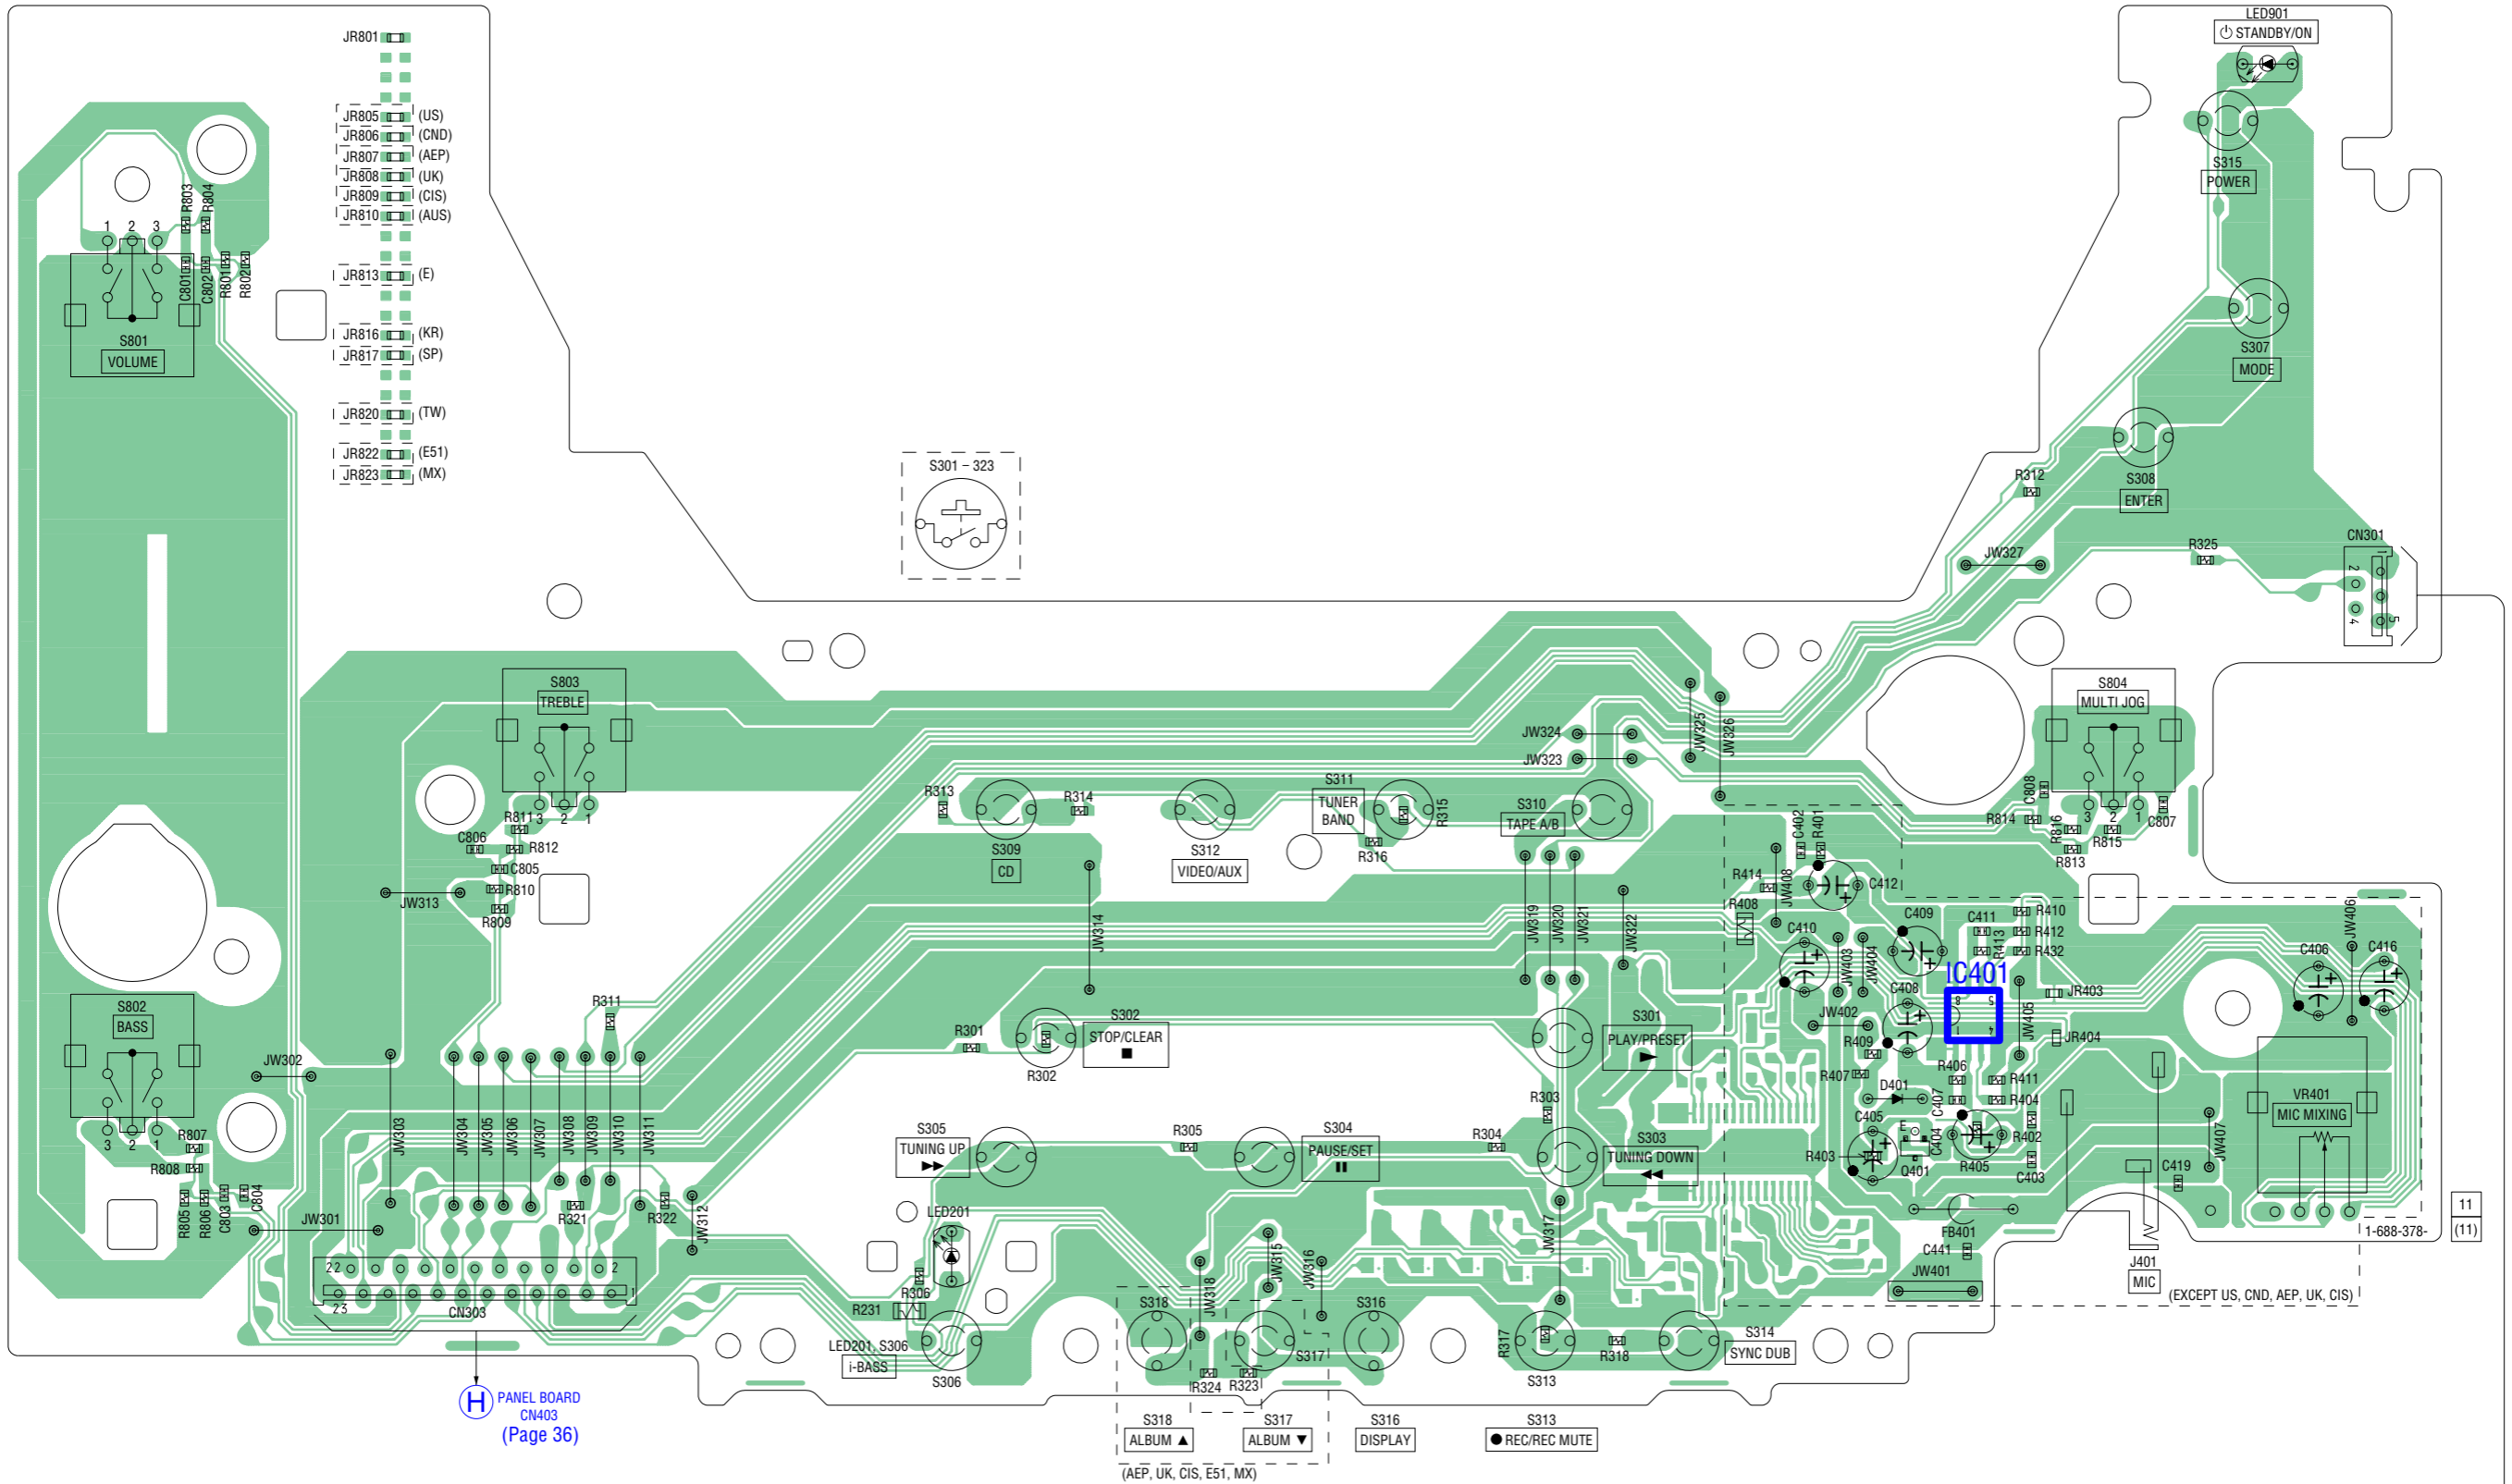

【CD KEY BOARD】

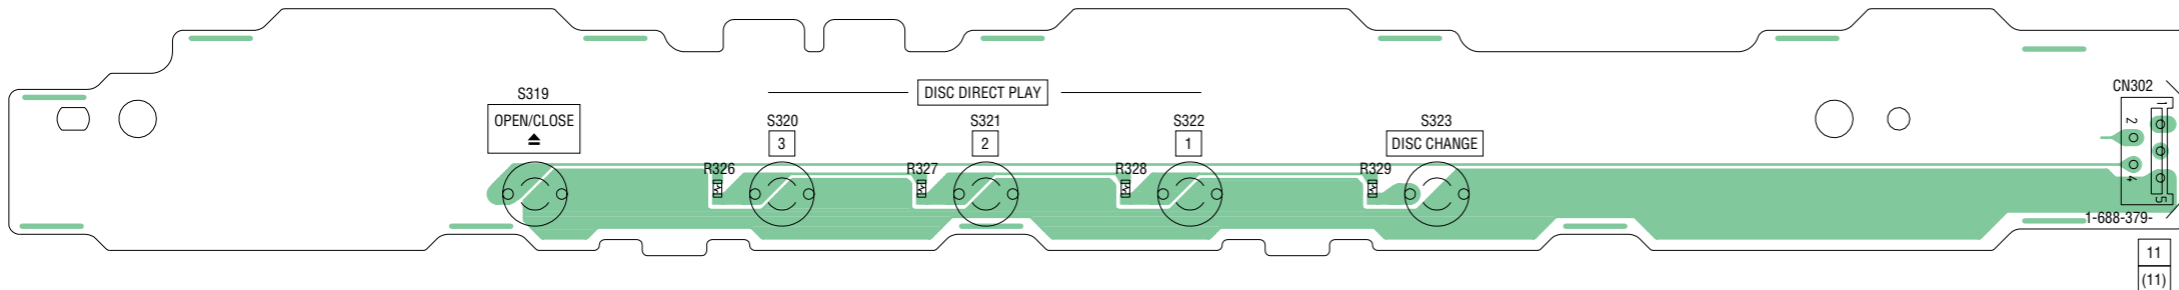


6-21. SCHEMATIC DIAGRAM – KEY Section –

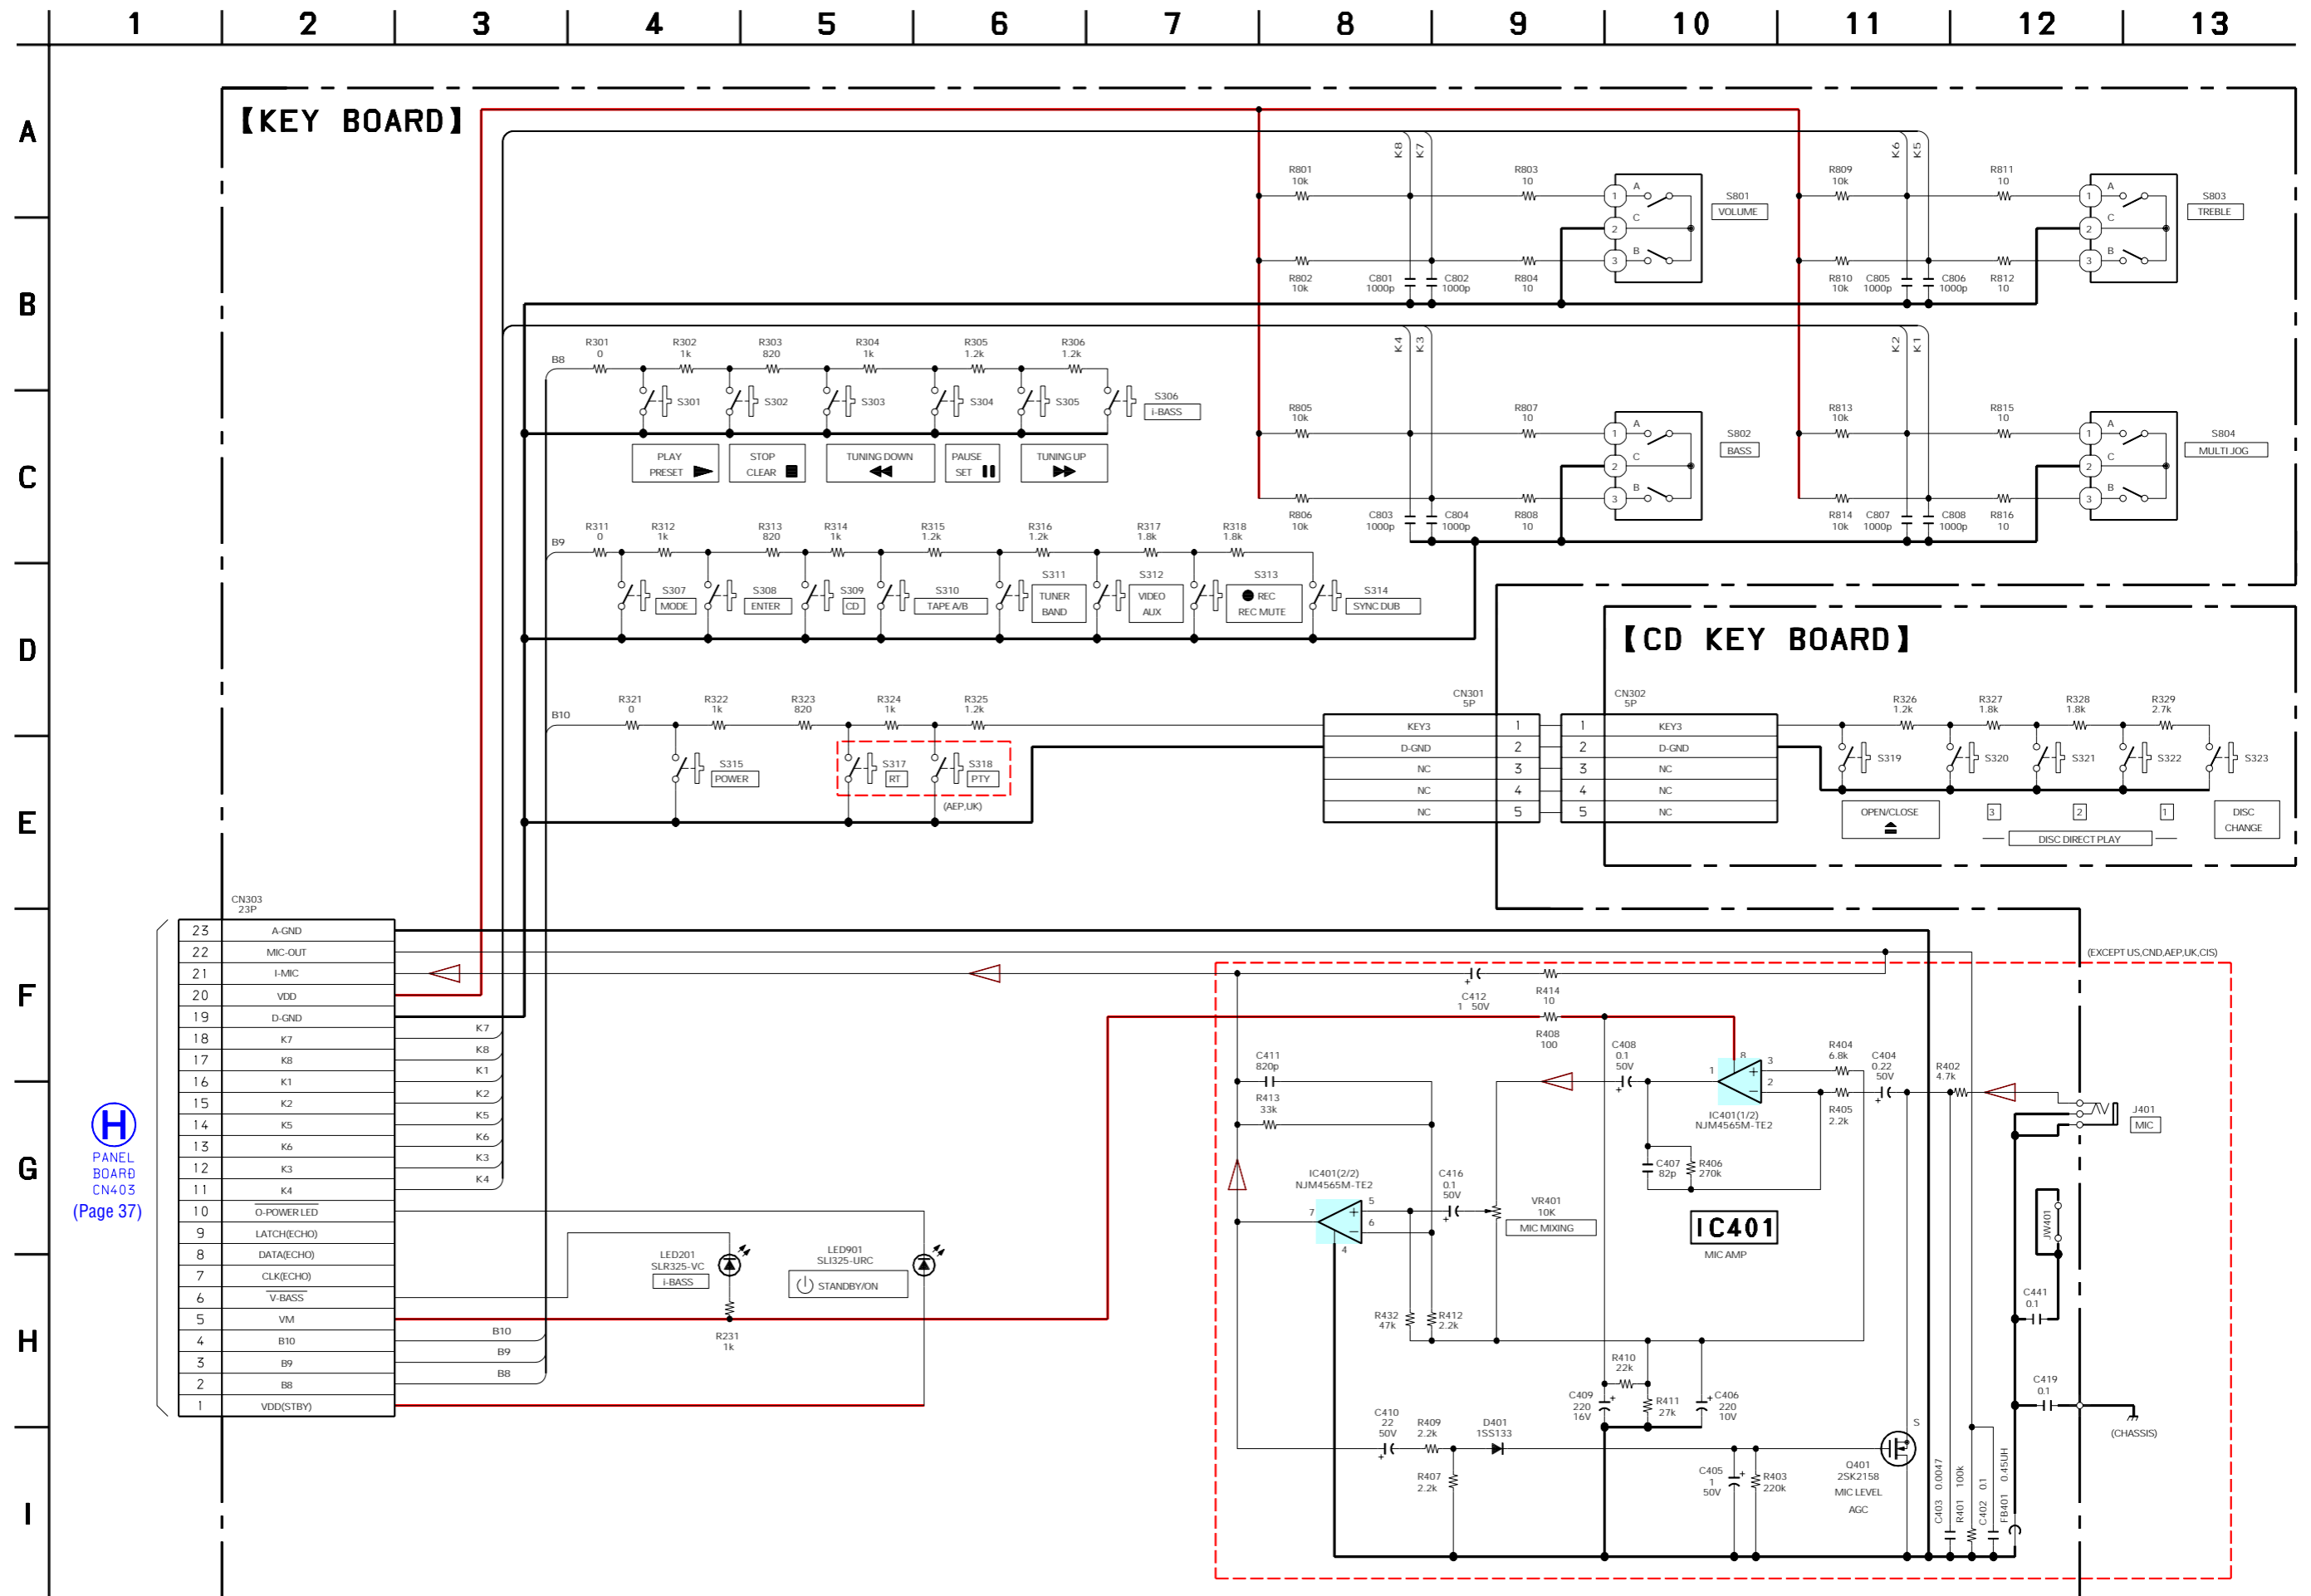

**H**  
PANEL BOARD  
CN403  
(Page 37)

6-22. PRINTED WIRING BOARD – PT Section – (EXCEPT E, E51, SP, TW) • See page 23 for Circuit Boards Location.  :Uses unleaded solder.

【 PT BOARD 】

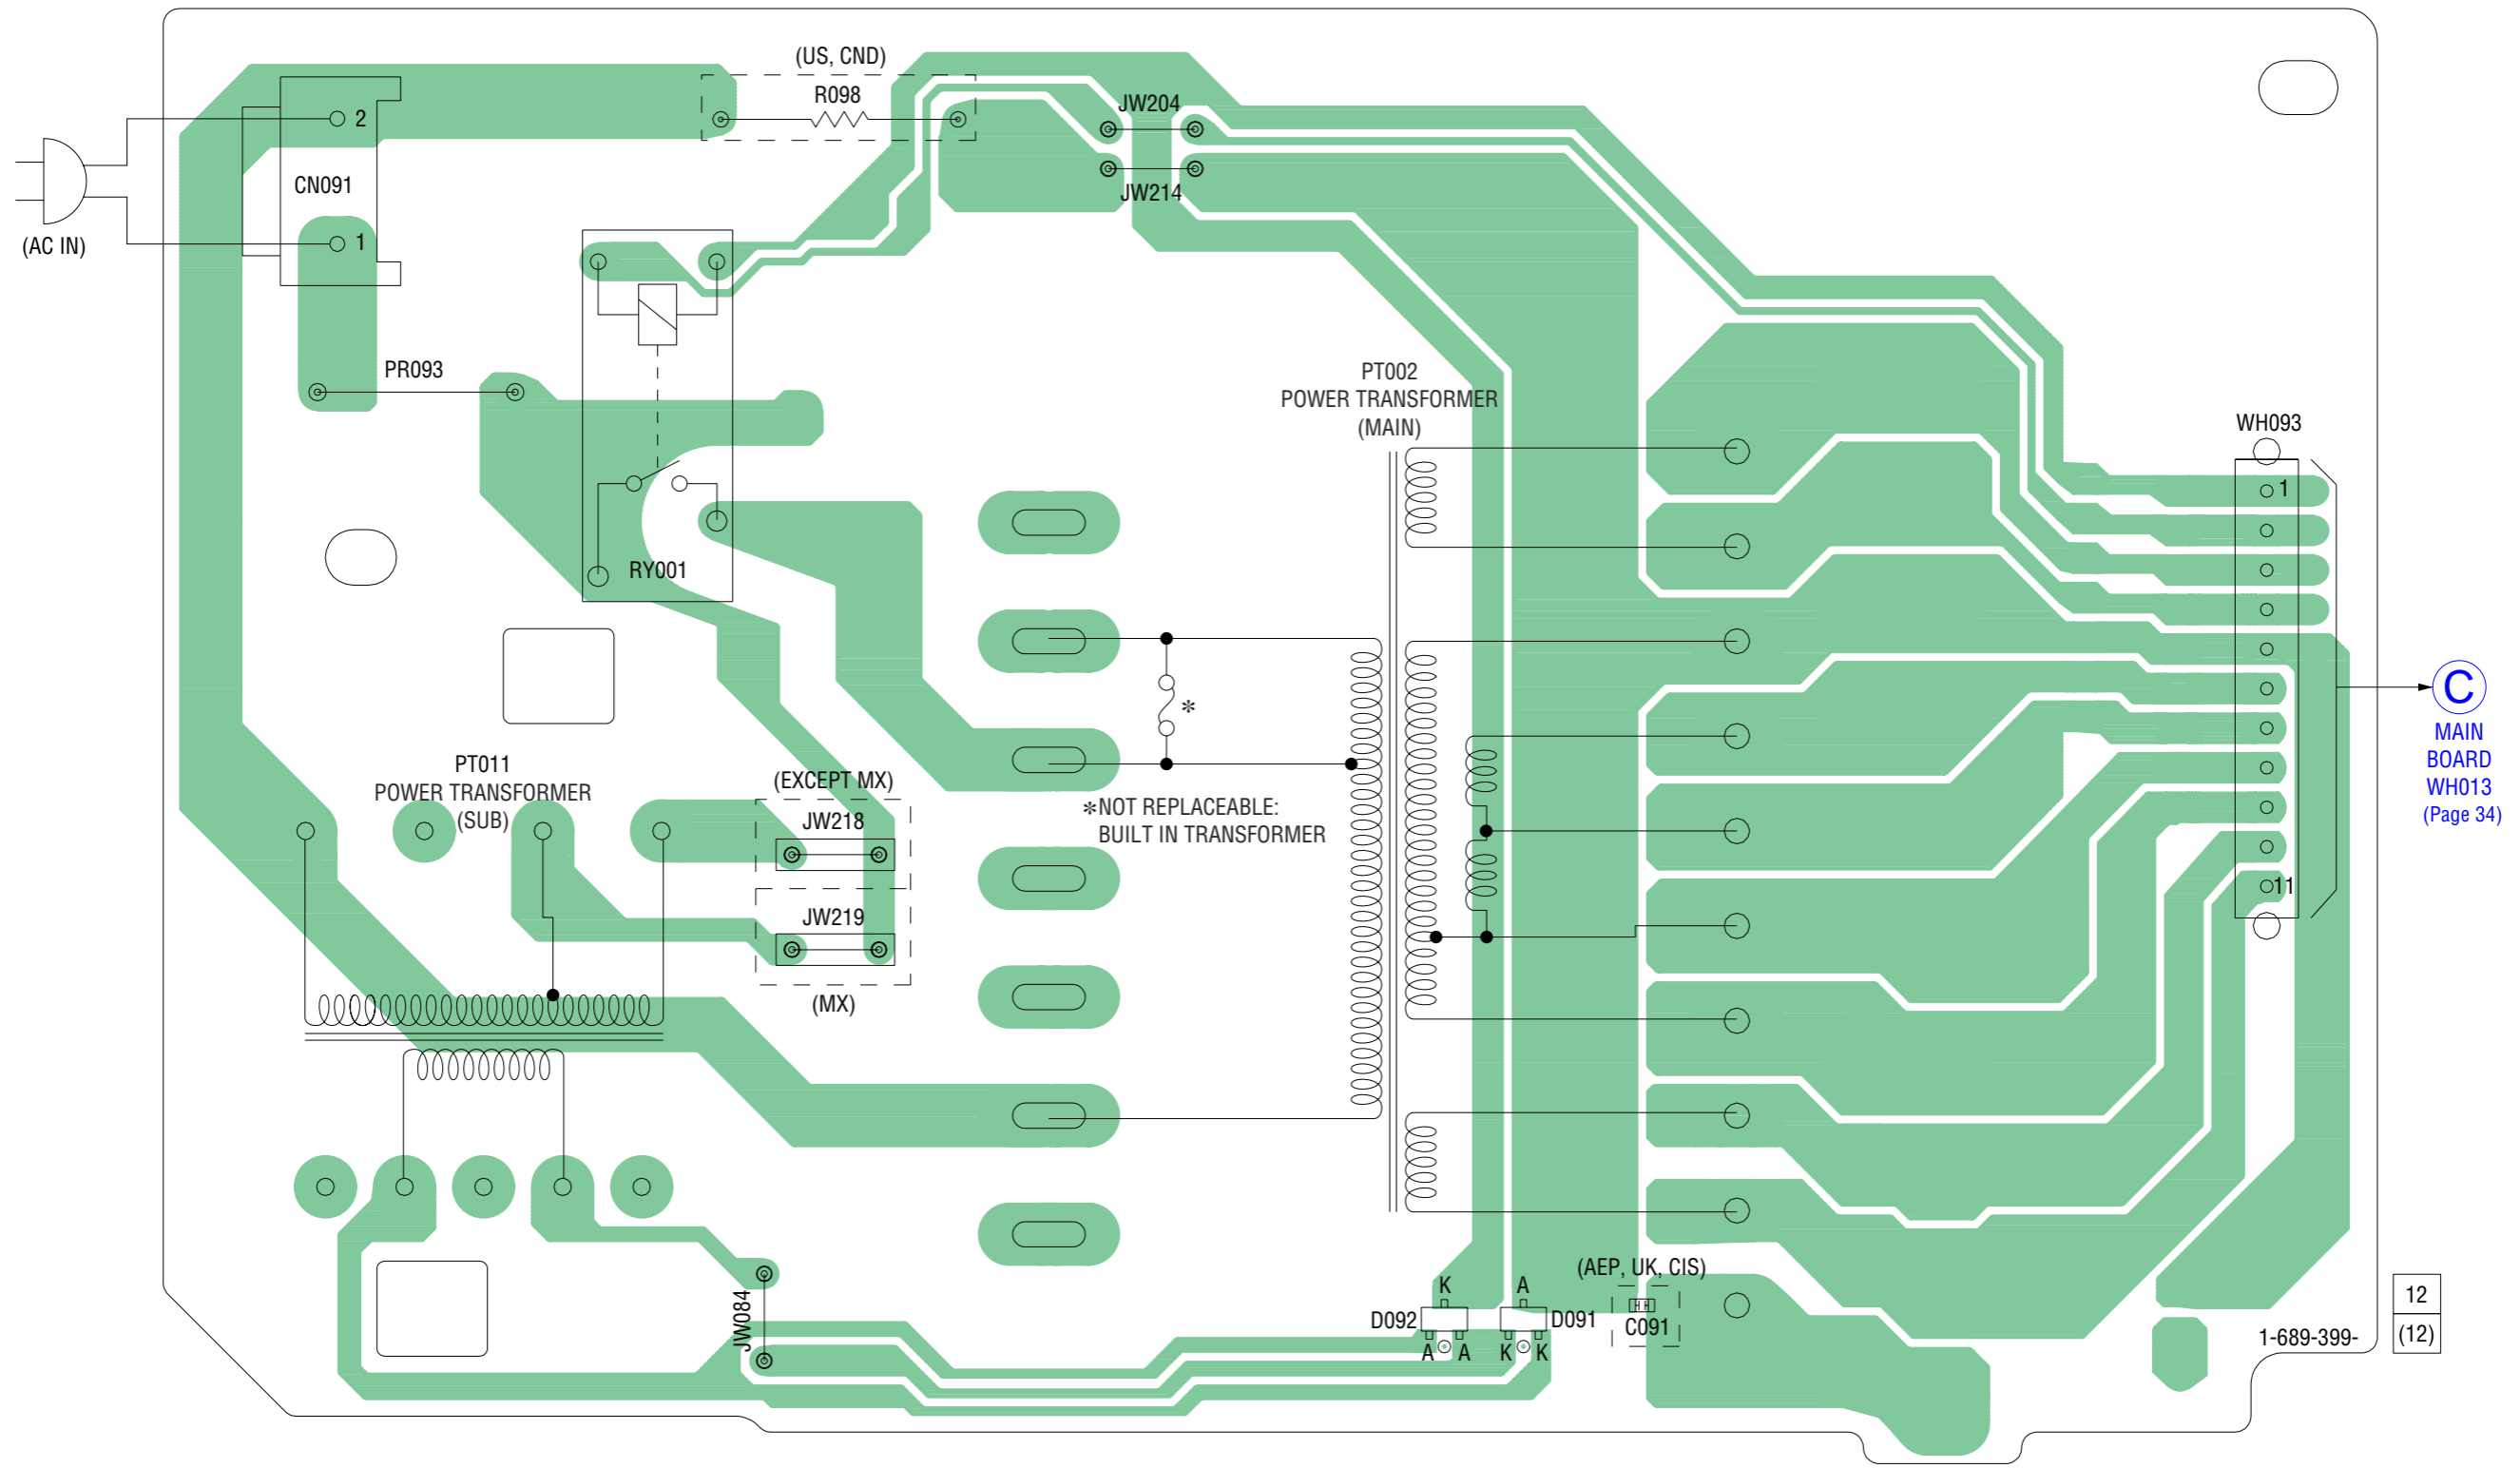


**C**  
MAIN BOARD  
WH013  
(Page 34)


1-689-399-  
12  
(12)




6-23. SCHEMATIC DIAGRAM – PT Section – (EXCEPT E, E51, SP, TW)

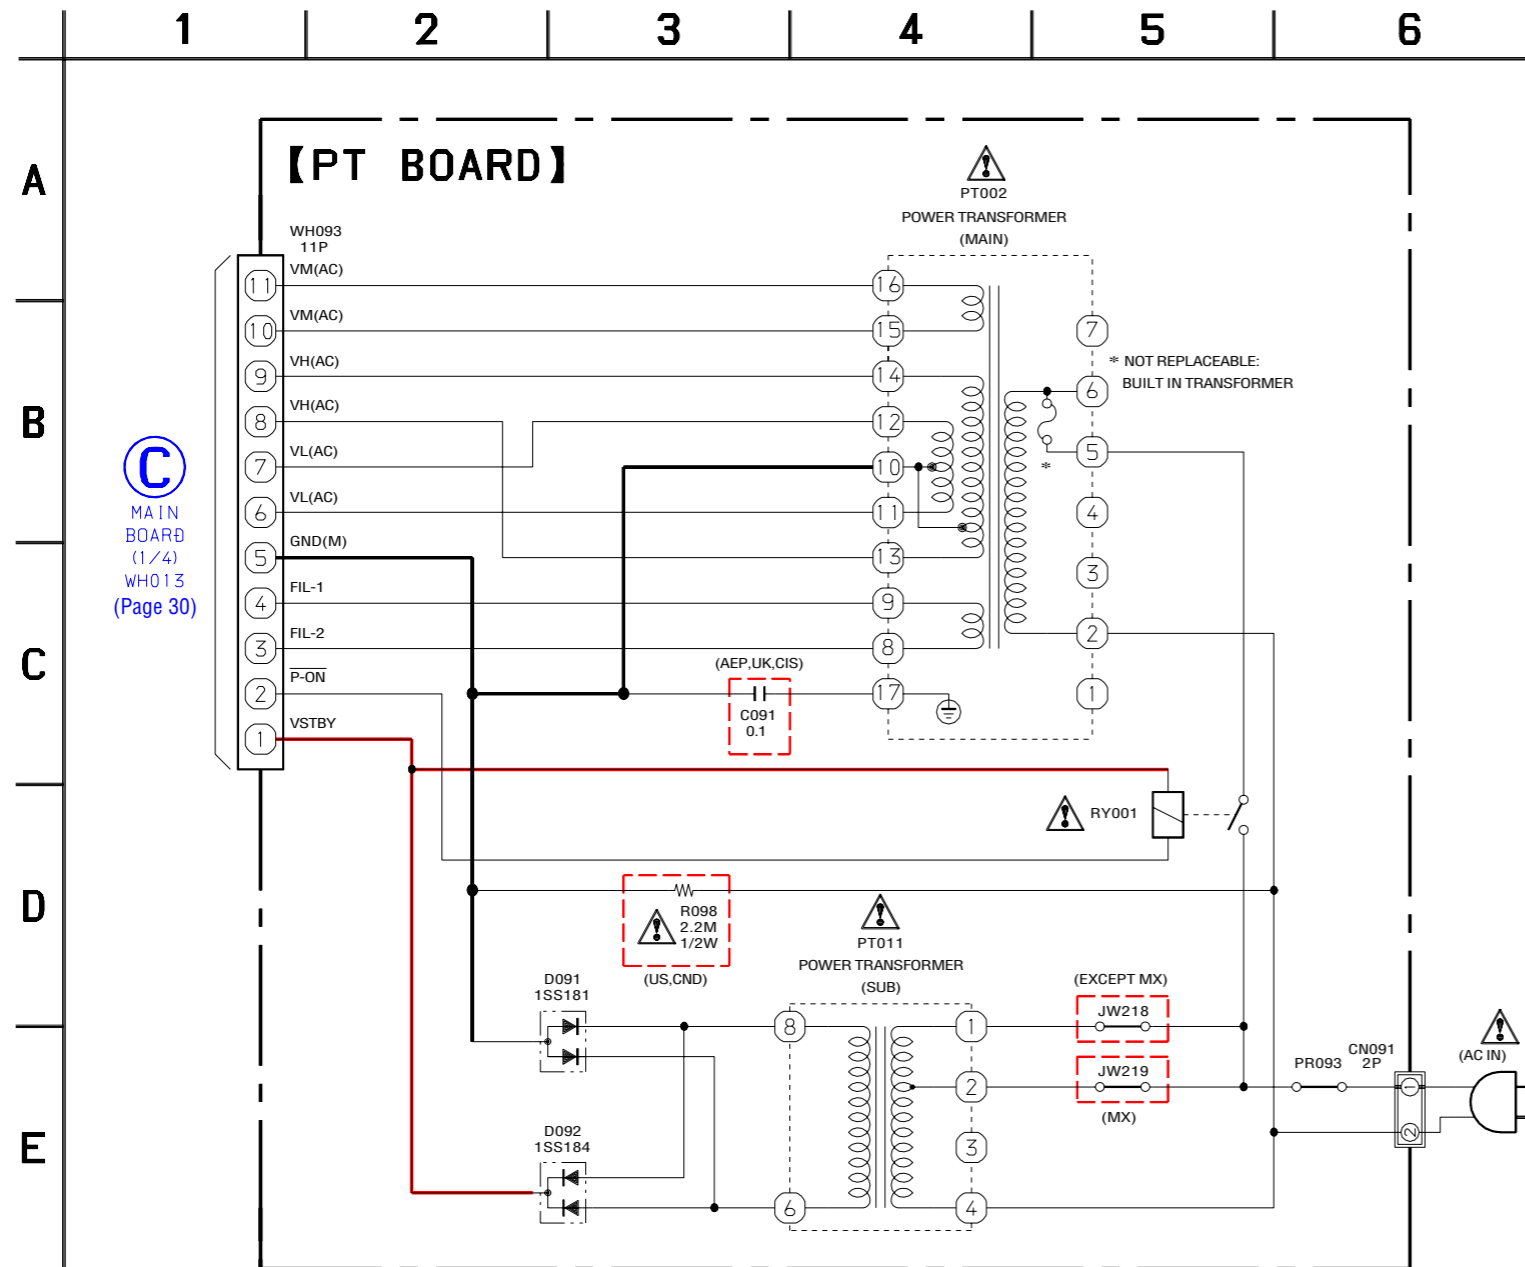

<p>The components identified by mark <math>\triangle</math> or dotted line with mark <math>\triangle</math> are critical for safety. Replace only with part number specified.</p>	<p>Les composants identifiés par une marque <math>\triangle</math> sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>
---	--

6-24. PRINTED WIRING BOARD – PT Section – (E, E51, SP, TW) • See page 23 for Circuit Boards Location.  :Uses unleaded solder.

6-25. SCHEMATIC DIAGRAM – PT Section – (E, E51, SP, TW)

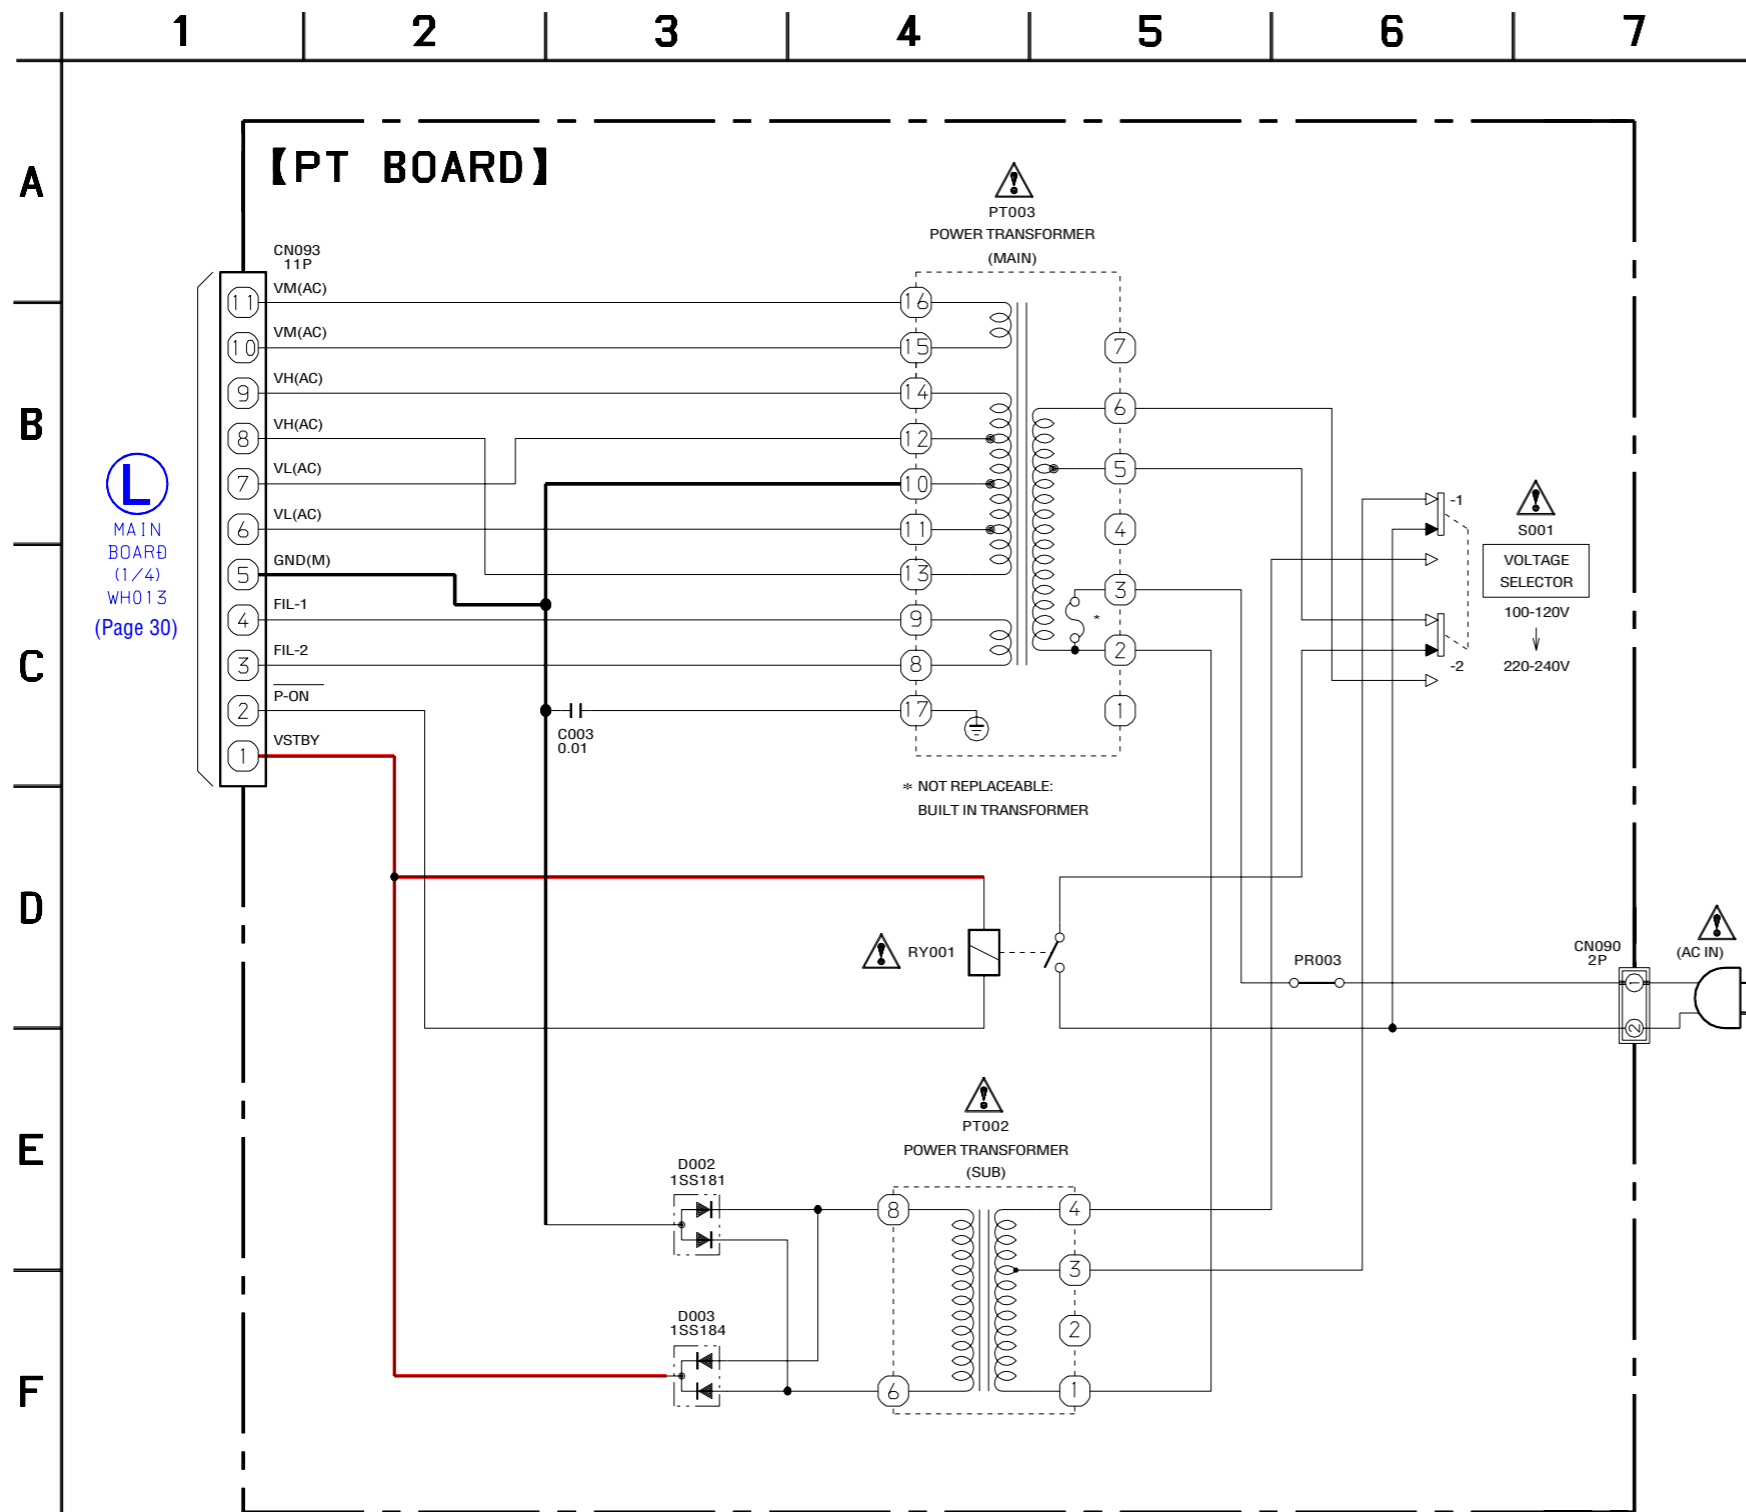


**L**  
MAIN BOARD  
(1/4)  
WH013  
(Page 30)

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

• Waveforms  
– BD Board –


1 IC721 ④ (RF) (CD Play Mode)

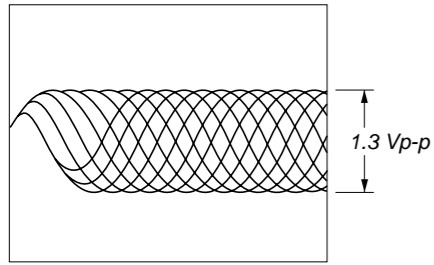


2 IC721 ⑬ (TE) (CD Play Mode)

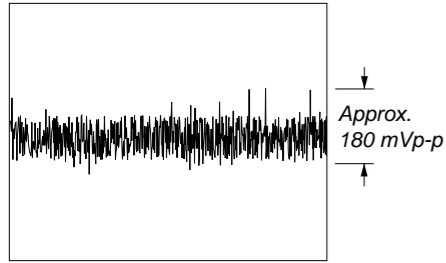

3 IC721 ⑮ (TE) (CD Play Mode)

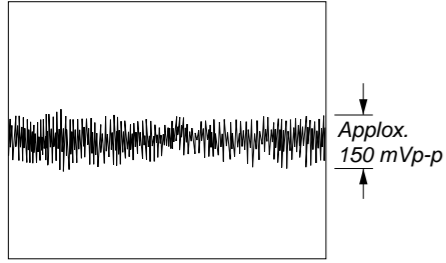


4 IC721 ⑳ (XOUT)

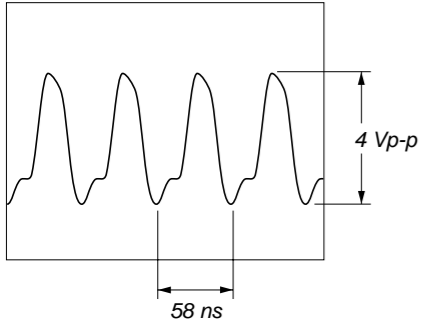


– MAIN Board –


11 L311 ⑥, ⑦ (REC Mode)

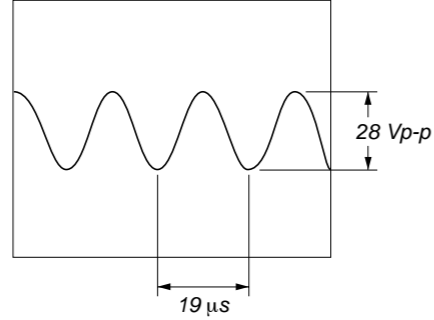

12 L311 ⑤ (REC Mode)

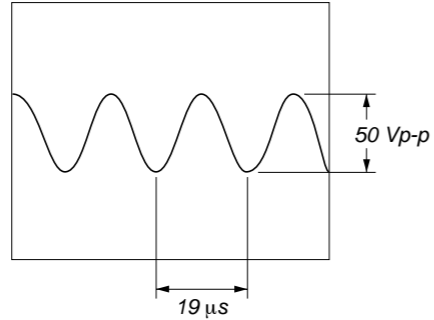


13 Q310 Collector (REC Mode)

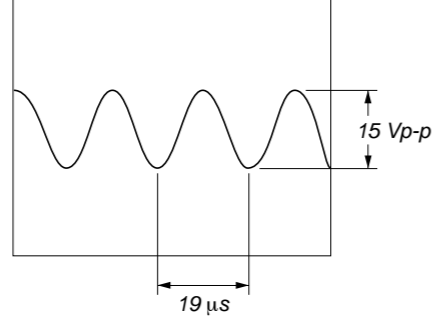


– PANEL Board –

14 IC901 ⑬ (XT2)

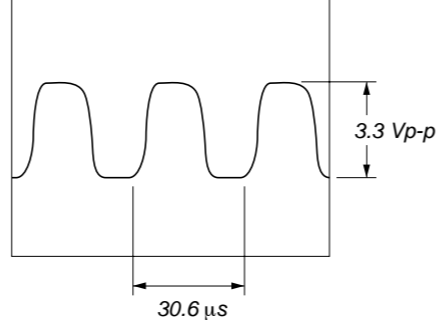


15 IC901 ⑯ (CF2)

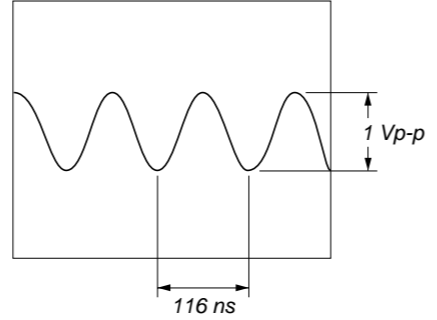


• IC Block Diagrams  
– BD Board –

IC721 LC78646E-E

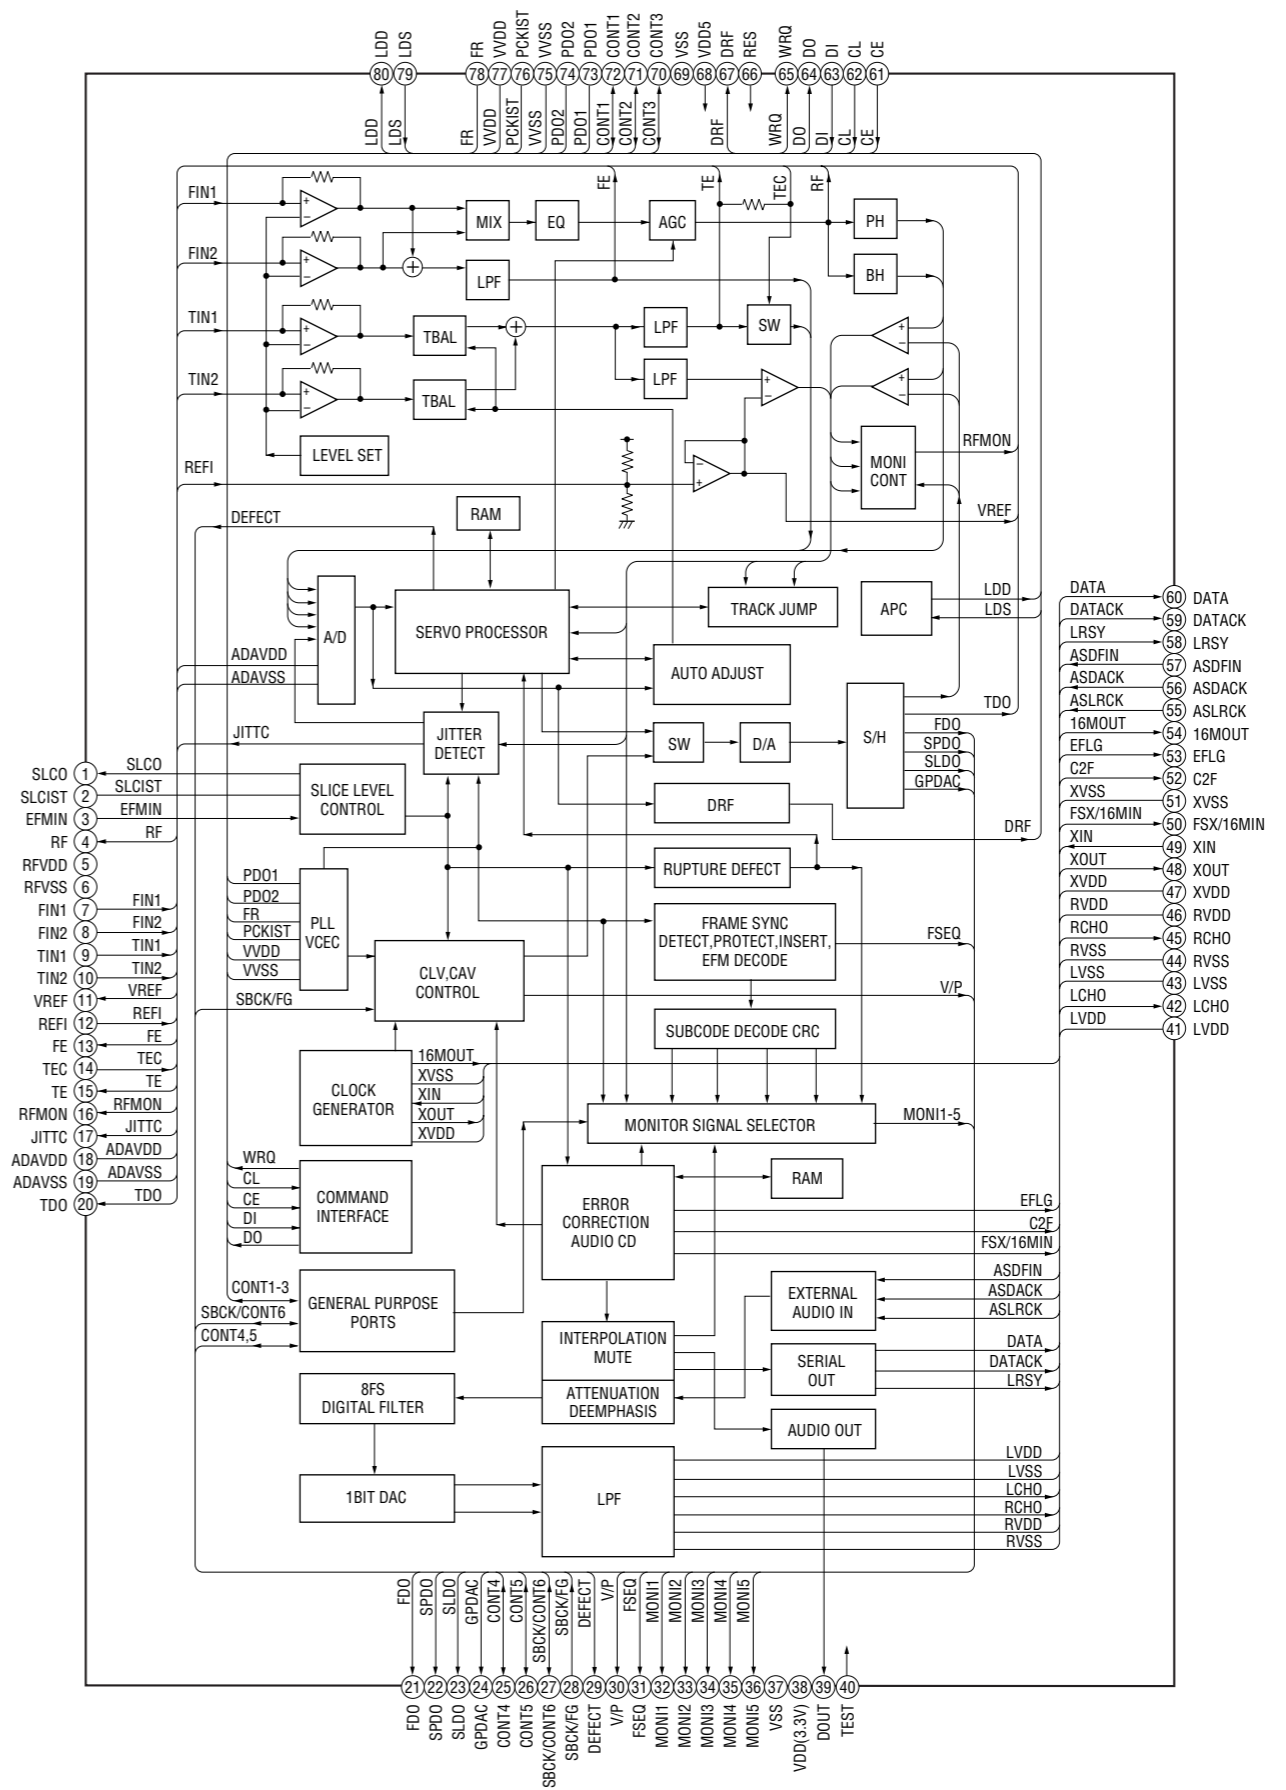


– DRIVER Board –

IC701, 712 BA6956AN

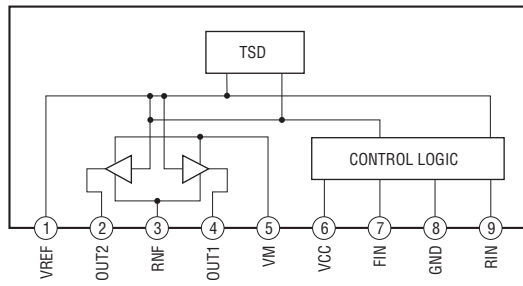


– MAIN Board –

IC601 BD3881FV

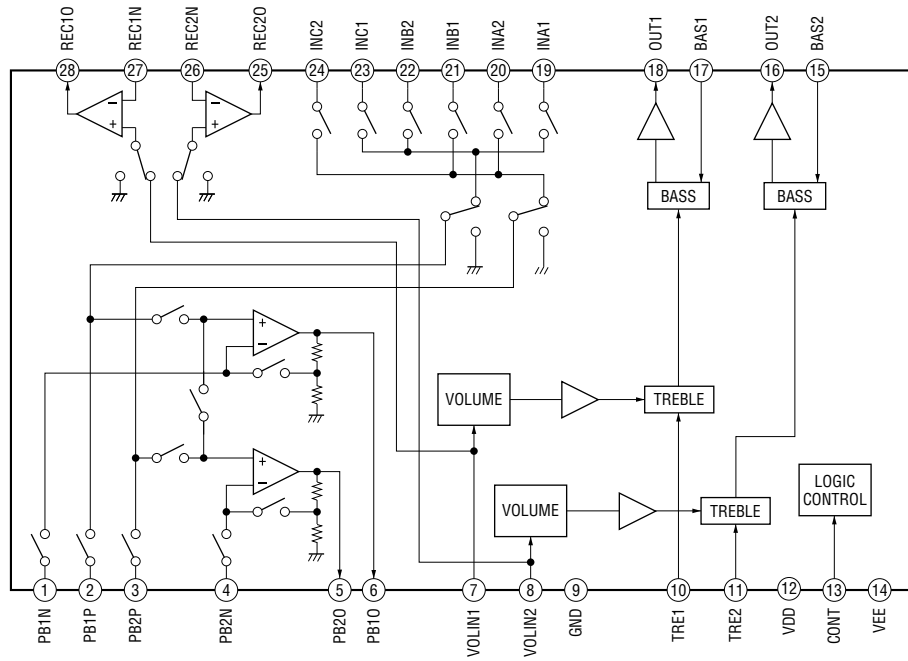


# CX-JN5

## IC671 NJM2156M (TE2)

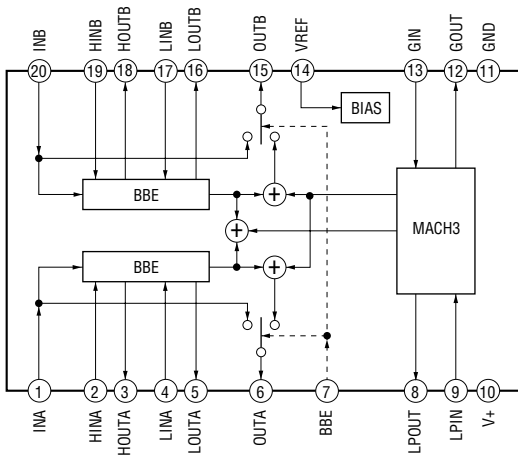


## IC672 BU2092F-E2

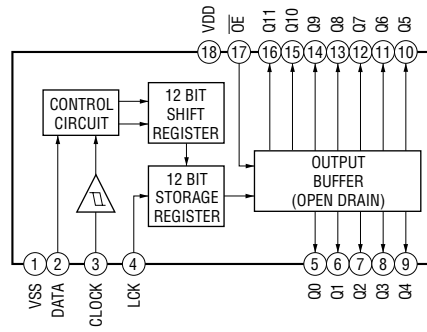

## - PANEL Board -

## IC501 MM1614A

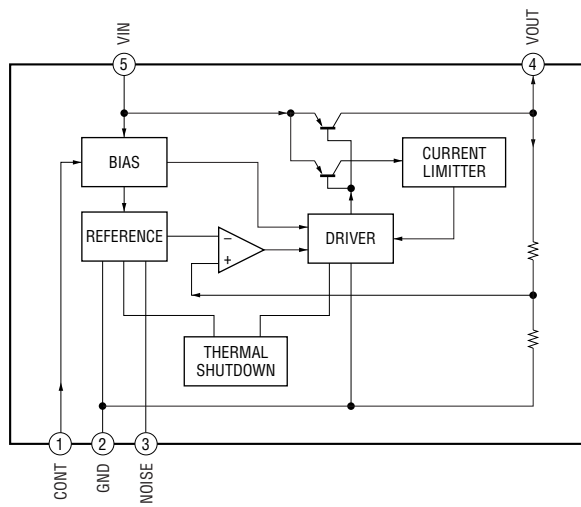

**6-26. IC PIN FUNCTION DESCRIPTION**
**• PANEL BOARD IC901 (SYSTEM CONTROLLER)**
**LC876764C-52C7 (US, Canadian, E, Singapore, Taiwan, Korean, Australian models),**
**LC876796B-52D8 (AEP, UK, CIS, Chilean, Peruvian, Mexican models)**

Pin No.	Pin Name	I/O	Description
1	SYS-MUTE	O	Line muting on/off control signal output terminal
2	RDS DO	I	RDS serial data input from the FM/AM tuner unit
3	TU/EVOL DO	O	Serial data output to the FM/AM tuner unit, motor/plunger driver and electrical volume
4	CD RESET	O	Reset signal output to the CD DSP
5	CD CE	O	Chip enable signal output to the CD DSP
6	MP3 CE	O	Chip enable signal output to the MP3 decoder (AEP, UK, CIS, Chilean, Peruvian and Mexican models)
7	$\overline{\text{CLK-SHIFT}}$	O	Shift clock signal output terminal Not used
8	LCK	O	Latch clock signal output to the motor/plunger driver
9	TU CE	O	Chip enable signal output to the FM/AM tuner unit
10	MP3 SYNC	I	SYNC signal input from the MP3 decoder (AEP, UK, CIS, Chilean, Peruvian and Mexican models)
11	$\overline{\text{RESET}}$	I	System reset signal input from the reset signal generator "L": reset For several hundreds msec. after the power supply rises, "L" is input, then it changes to "H"
12	XT1	I	System clock input terminal (32.768 kHz)
13	XT2	O	System clock output terminal (32.768 kHz)
14	VSS1	—	Ground terminal
15	CF1	I	System clock input terminal (8.64 MHz)
16	CF2	O	System clock output terminal (8.64 MHz)
17	VDD1	—	Power supply terminal (+3.3V)
18	POWER DOWN	I	Power down detection signal input terminal
19	TU-SIG/MIC	I	RDS signal input (AEP and UK models) and MIC signal input (except US, Canadian, AEP, UK, CIS models) terminal
20	CD BUSY	I	Optical pick-up up/down detection and tray open/close detection signal input terminal
21	SPEANA-L	I	Spectrum analyzer drive signal input terminal (low band)
22	SPEANA-M	I	Spectrum analyzer drive signal input terminal (middle band)
23	SPEANA-H	I	Spectrum analyzer drive signal input terminal (high band)
24	KEY3	I	Front panel key input terminal (A/D input)
25	KEY2	I	Front panel key input terminal (A/D input)
26	KEY1	I	Front panel key input terminal (A/D input)
27	$\overline{\text{HOLD}}$	I	System malfunction signal (hold signal) input from the power amplifier circuit
28	RDS CLK	I	RDS serial data transfer clock signal input from the tuner unit
29	RMC	I	Remote control signal input terminal
30 to 40	G1 to G11	O	Grid drive signal output to the fluorescent indicator tube
41 to 45	S1 to S5	O	Segment drive signal output to the fluorescent indicator tube
46	VDD3	—	Power supply terminal (+3.3V)
47	A PHOTO/S6	I/O	Deck-A tape reel rotating detection signal input and segment drive signal output to the fluorescent indicator tube
48	B PHOTO/S7	I/O	Deck-B tape reel rotating detection signal input and segment drive signal output to the fluorescent indicator tube
49	$\overline{\text{REC REV/S8}}$	I/O	Recording (reverse direction) detection signal input and segment drive signal output to the fluorescent indicator tube
50	$\overline{\text{B MODE/S9}}$	I/O	Deck-B mode detection signal input and segment drive signal output to the fluorescent indicator tube

Pin No.	Pin Name	I/O	Description
51	$\overline{\text{FIX0}}$	I/O	Not used
52	$\overline{\text{B HALF/S10}}$	I/O	Deck-B cassette detection signal input and segment drive signal output to the fluorescent indicator tube
53	$\overline{\text{REC FWD/S11}}$	I/O	Recording (forward direction) detection signal input and segment drive signal output to the fluorescent indicator tube
54	$\overline{\text{A HALF/S12}}$	I/O	Deck-A cassette detection signal input and segment drive signal output to the fluorescent indicator tube
55	$\overline{\text{A MODE/S13}}$	I/O	Deck-A mode detection signal input and segment drive signal output to the fluorescent indicator tube
56 to 67	S14 to S25	O	Segment drive signal output to the fluorescent indicator tube
68 to 71	S26 to S29	O	Segment drive signal output to the fluorescent indicator tube
72	VDD4	—	Power supply terminal (+3.3V)
73	S30	O	Segment drive signal output to the fluorescent indicator tube
74	CD NUMBER SENS	I	CD table address detection signal input terminal
75	TUNED	I	Tuning detection signal input from the tuner unit
76	STEREO	I	FM stereo detection signal input from the tuner unit
77	VOL A	I	Jog dial pulse input terminal (VOLUME)
78	VOL B	I	Jog dial pulse input terminal (VOLUME)
79	JOG A	I	Jog dial pulse input terminal (JOG)
80	JOG B	I	Jog dial pulse input terminal (JOG)
81	TRE A	I	Jog dial pulse input terminal (TREBLE)
82	TRE B	I	Jog dial pulse input terminal (TREBLE)
83	BASS A	I	Jog dial pulse input terminal (BASS)
84	BASS B	I	Jog dial pulse input terminal (BASS)
85	TUNER MUTE	O	Tuner muting on/off control signal output terminal
86	$\overline{\text{LED L}}$	O	LED drive signal output terminal
87	$\overline{\text{LED R}}$	O	LED drive signal output terminal
88	CLK	O	Serial data transfer clock signal output to the FM/AM tuner unit, motor/plunger driver and BBE controller
89	VSS2	—	Ground terminal
90	VDD2	—	Power supply terminal (+3.3V)
91	VF ON	O	Not used
92	$\overline{\text{KEYSCAN}}$	O	Scan signal output for switches in the tape deck section and segment drive signal (S14 to S25)
93	$\overline{\text{POWER LED}}$	O	LED drive signal output terminal
94	$\overline{\text{POWER}}$	O	Power on/off control signal output terminal
95	CD DRF	I	Focus on detection signal input from the CD DSP
96	TU DI	I	Serial data input from the FM/AM tuner unit
97	CD WRQ	I	Interrupt request signal input from the CD DSP
98	CD DI	I	Serial data input from the CD DSP
99	CD DO	O	Serial data output to the CD DSP
100	CD CLK	O	Serial data transfer clock signal output to the CD DSP



## SECTION 7 EXPLODED VIEWS

**NOTE:**

- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts  
Example:  
KNOB, BALANCE (WHITE) . . . (RED)  


↑ Parts Color    ↑ Cabinet's Color
- Abbreviation  
 AUS : Australian model                      KR : Koream model                      SP : Singapore model  
 CND : Canadian model                      MX : Mexican model                      TW : Taiwan model  
 E51 : Chilean and Peruvian models

- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Accessories and packing materials are given in the last of the electrical parts list.

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

### 7-1. CASE SECTION

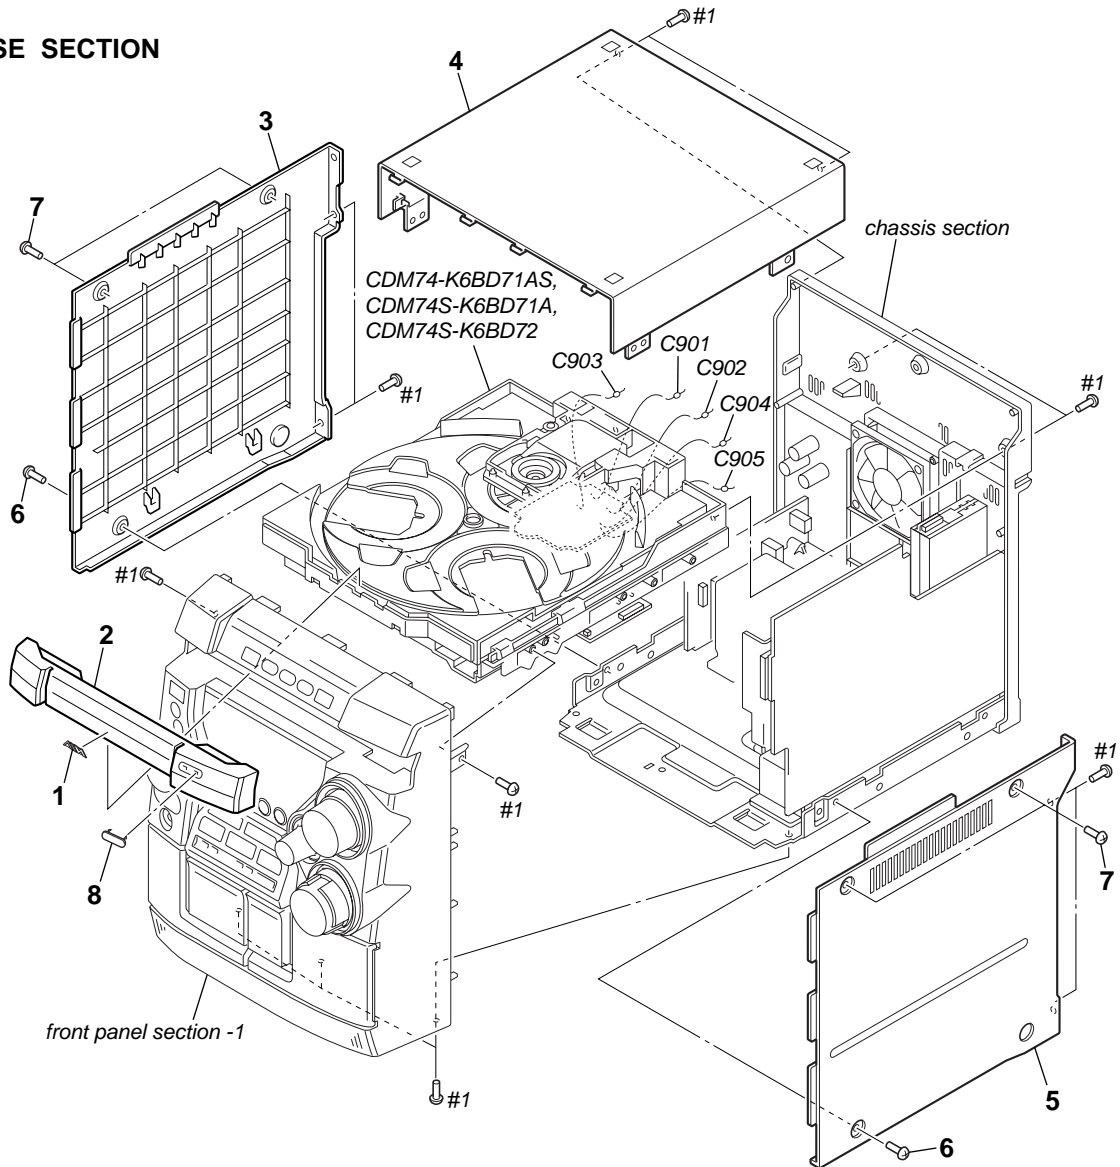


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	4-245-158-01	EMBLEM		7	3-363-099-41	SCREW (CASE 3 TP2)	
2	4-245-186-01	PANEL, TRAY (US, CND, E, SP, TW, KR, AUS)		8	4-246-682-01	EMBLEM (30), MP3 (AEP, UK, CIS, E51, MX)	
2	4-245-186-11	PANEL, TRAY (AEP, UK, CIS, E51, MX)		#1	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S	
3	4-245-183-01	CASE (SIDE-L) (US, CND)		C901	1-127-888-11	CERAMIC      0.1uF      10%      50V	
3	4-245-183-11	CASE (SIDE-L) (EXCEPT US, CND)		C902	1-127-888-11	CERAMIC      0.1uF      10%      50V	
4	4-244-849-21	CASE (TOP) (US, CND)		C903	1-127-888-11	CERAMIC      0.1uF      10%      50V	
4	4-244-849-31	CASE (TOP) (EXCEPT US, CND)				(US, CND, E, SP, TW, KR, AUS)	
5	4-245-184-01	CASE (SIDE-R) (US, CND)		C904	1-127-888-11	CERAMIC      0.1uF      10%      50V	
5	4-245-184-11	CASE (SIDE-R) (EXCEPT US, CND)				(US, CND, E, SP, TW, KR, AUS)	
6	3-363-099-01	SCREW (CASE 3 TP2)		C905	1-127-888-11	CERAMIC      0.1uF      10%      50V	
						(US, CND, E, SP, TW, KR, AUS)	

**7-2. FRONT PANEL SECTION-1**

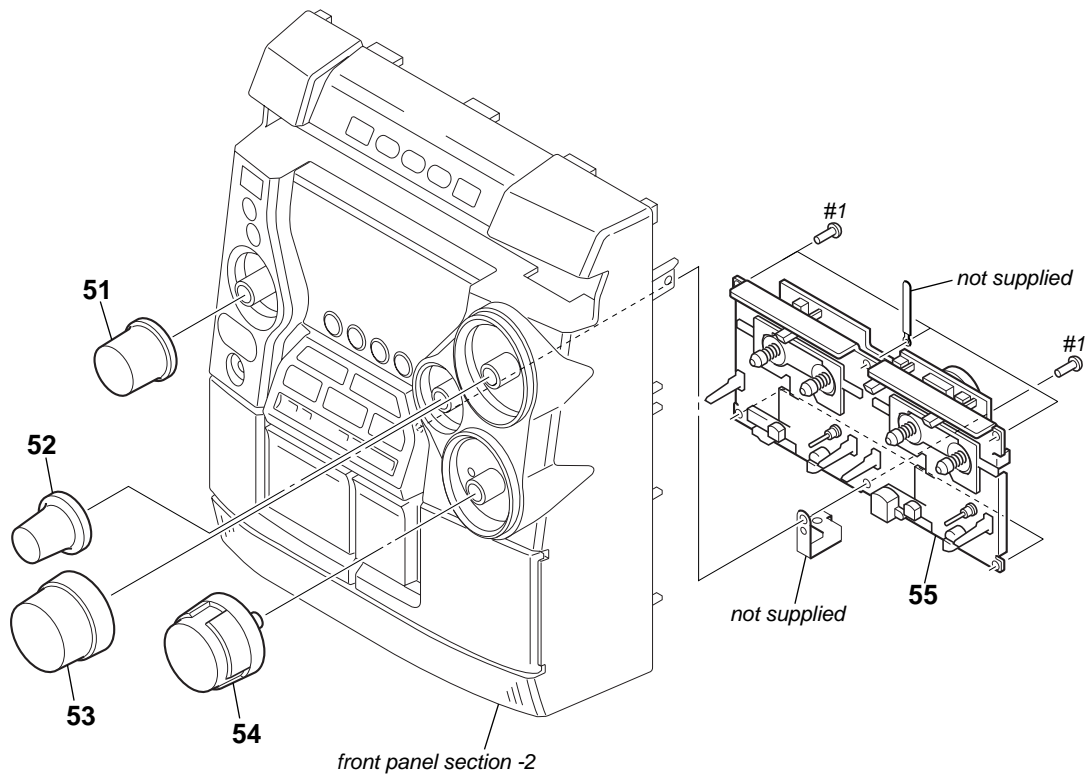


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	4-245-178-01	PLATING, KNOB ROTARY (JOG)		55	1-796-486-41	DECK, MECHANICAL (CWM43FR16) (AEP, UK, CIS, E, E51, SP, TW, KR, AUS)	
52	4-245-180-01	PLATING, KNOB ROTARY (TRE)		55	1-796-486-51	DECK, MECHANICAL (CWM43FR26) (MX)	
53	4-245-182-01	PLATING, KNOB ROTARY (VOL)		#1	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S	
54	4-245-176-01	PLATING, KNOB ROTARY (BASS)					
55	1-796-485-51	DECK, MECHANICAL (CWM43FF13) (US,CND)					

7-3. FRONT PANEL SECTION-2

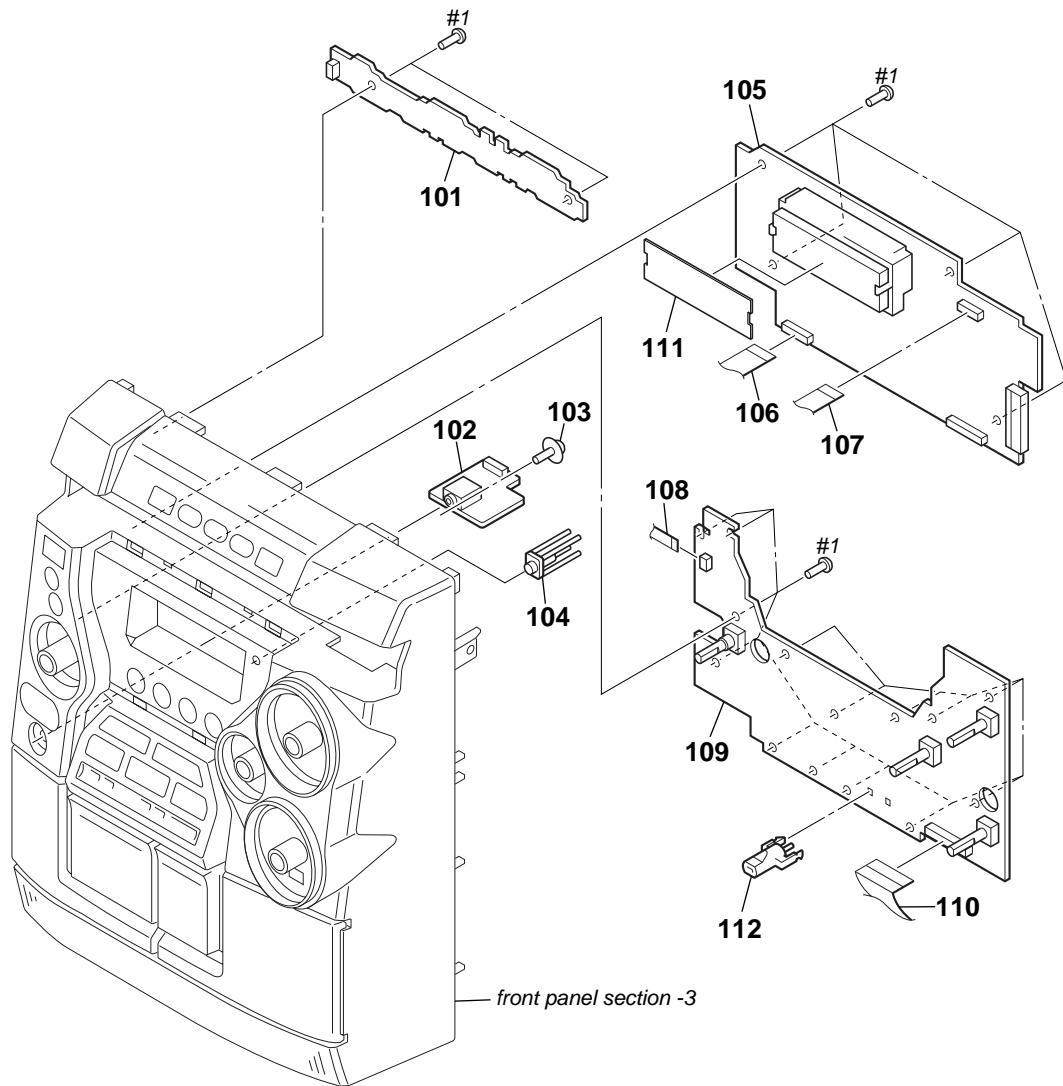


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	1-688-379-11	CD KEY BOARD		107	1-769-944-11	WIRE (FLAT TYPE) (11 CORE)	
102	1-688-400-12	HEADPHONE BOARD		108	1-769-857-11	WIRE (FLAT TYPE) (5 CORE)	
103	3-229-336-01	SCREW, +BVWH TAPPING		109	A-4732-642-A	KEY BOARD, COMPLETE (US, CND)	
104	4-245-189-01	REFLECTOR, REMOTE CONTROL		109	A-4732-920-A	KEY BOARD, COMPLETE (E51)	
105	A-4732-641-A	PANEL BOARD, COMPLETE (US, CND)		109	A-4732-924-A	KEY BOARD, COMPLETE (AEP, UK, CIS)	
105	A-4748-179-A	PANEL BOARD, COMPLETE (AEP, UK)		109	A-4734-516-A	KEY BOARD, COMPLETE (MX)	
105	A-4733-014-A	PANEL BOARD, COMPLETE (E51)		109	A-4748-604-A	KEY BOARD, COMPLETE (E, SP, TW, AUS)	
105	A-4734-513-A	PANEL BOARD, COMPLETE (MX)		109	A-4748-928-A	KEY BOARD, COMPLETE (KR)	
105	A-4747-732-A	PANEL BOARD, COMPLETE (CIS)		110	1-773-182-11	WIRE (FLAT TYPE) (23 CORE)	
105	A-4747-795-A	PANEL BOARD, COMPLETE (E, SP, TW, KR, AUS)		111	4-245-194-01	SHEET, FL	
106	1-751-688-11	WIRE (FLAT TYPE) (13 CORE)		112	4-425-264-01	GUIDE (I BASS)	
				#1	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S	

7-4. FRONT PANEL SECTION-3

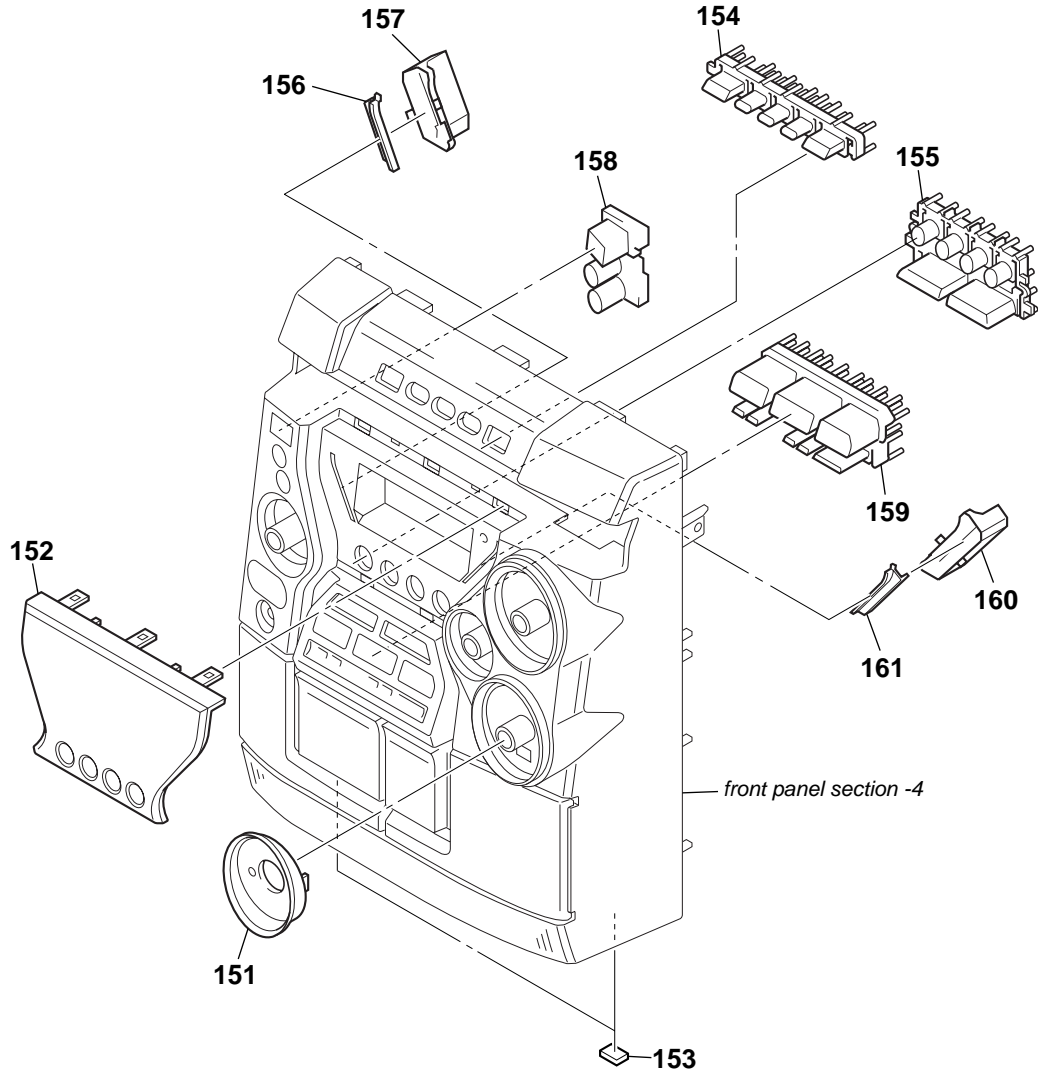


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	4-245-193-01	RING (BASS)		156	4-245-190-01	REFLECTOR (BASS)	
152	4-245-199-41	WINDOW, DISPLAY (US, CND, E, SP, TW, KR, AUS)		157	4-245-164-01	GUIDE (BASS)	
152	4-245-199-51	WINDOW, DISPLAY (E51, MX)		158	X-4955-560-1	KEY ASSY (POWER)	
152	4-245-199-71	WINDOW, DISPLAY (AEP, UK)		159	X-4955-571-1	KEY ASSY (OPE) (◀◀.   . ▶▶. SYNC DUB. ● REC/REC MUTE. i-BASS) (EXCEPT AEP, UK, E51, MX)	
152	4-245-199-81	WINDOW, DISPLAY (CIS)		159	X-4955-572-1	KEY ASSY (MP3) (◀◀.   . ▶▶. SYNC DUB. ● REC/REC MUTE. ALBUM ▼. ALBUM ▲. i-BASS) (AEP, UK, E51, MX)	
153	4-233-980-01	RUBBER FOOT		160	4-245-165-01	GUIDE (VOL)	
154	4-245-171-01	KEY (CD) (DISC CHANGE. 1. 2. 3. ▲)		161	4-245-192-01	REFLECTOR (VOL)	
155	4-245-172-01	KEY (FUN) (TAPE A/B. TUNER BAND. VIDEO/AUX. CD. ▶. ■) (US, CND)					
155	4-245-172-11	KEY (FUN) (TAPE A/B. TUNER BAND. VIDEO/AUX. CD. ▶. ■) (EXCEPT US, CND)					

7-5. FRONT PANEL SECTION-4

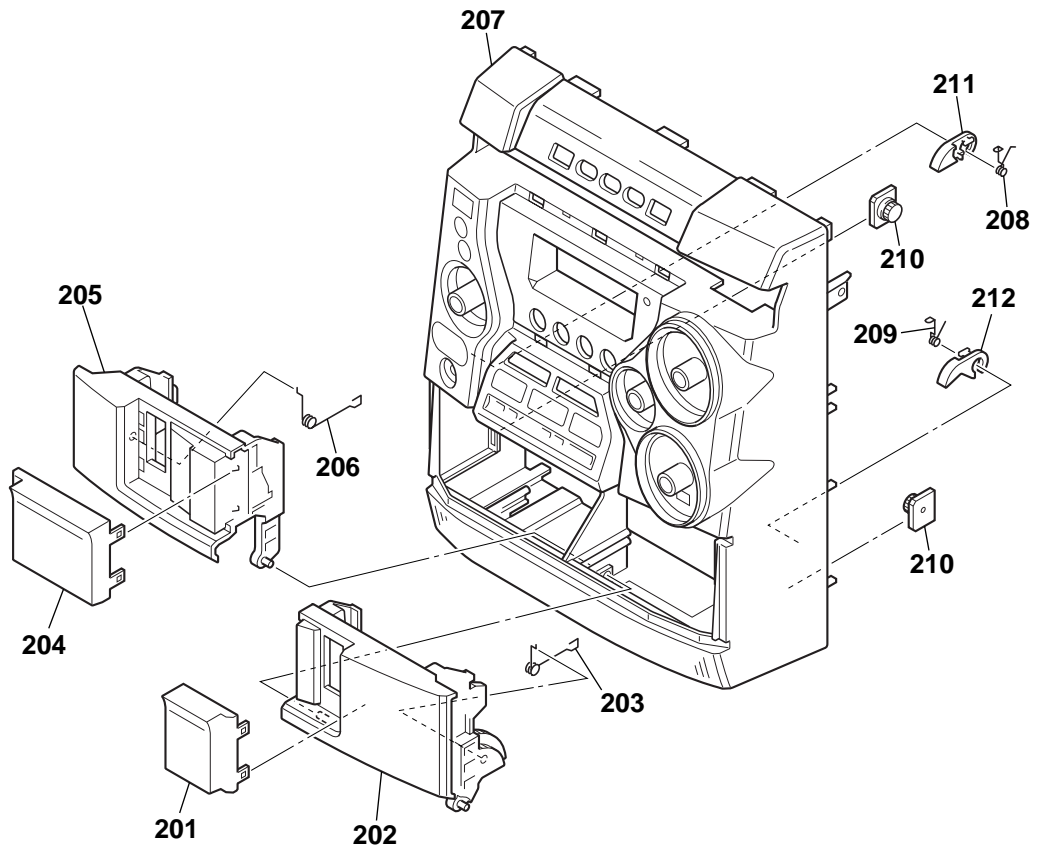

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
201	4-245-198-01	WINDOW (2), CASSETTE		207	4-245-153-31	CABINET, FRONT (E51, MX)	
202	4-245-160-01	BOX (2), CASSETTE (US, CND)		207	4-245-153-41	CABINET, FRONT (E, SP, TW, KR, AUS)	
202	4-245-160-11	BOX (2), CASSETTE (2) (EXCEPT US, CND)		207	4-245-153-81	CABINET, FRONT (CIS)	
203	4-245-196-01	SPRING (R), TORSION COIL		208	4-231-836-01	SPRING (HEART CAM-A)	
204	4-245-197-01	WINDOW (1), CASSETTE		209	4-231-841-01	SPRING (HEART CAM-B)	
205	4-245-159-01	BOX (1), CASSETTE		210	4-224-104-41	DAMPER	
206	4-245-195-01	SPRING (L), TORSION COIL		211	4-231-824-01	CAM (A), HEART	
207	4-245-153-01	CABINET, FRONT(US, CND)		212	4-231-825-01	CAM (B), HEART	
207	4-245-153-21	CABINET, FRONT (AEP, UK)					

**7-6. CHASSIS SECTION**

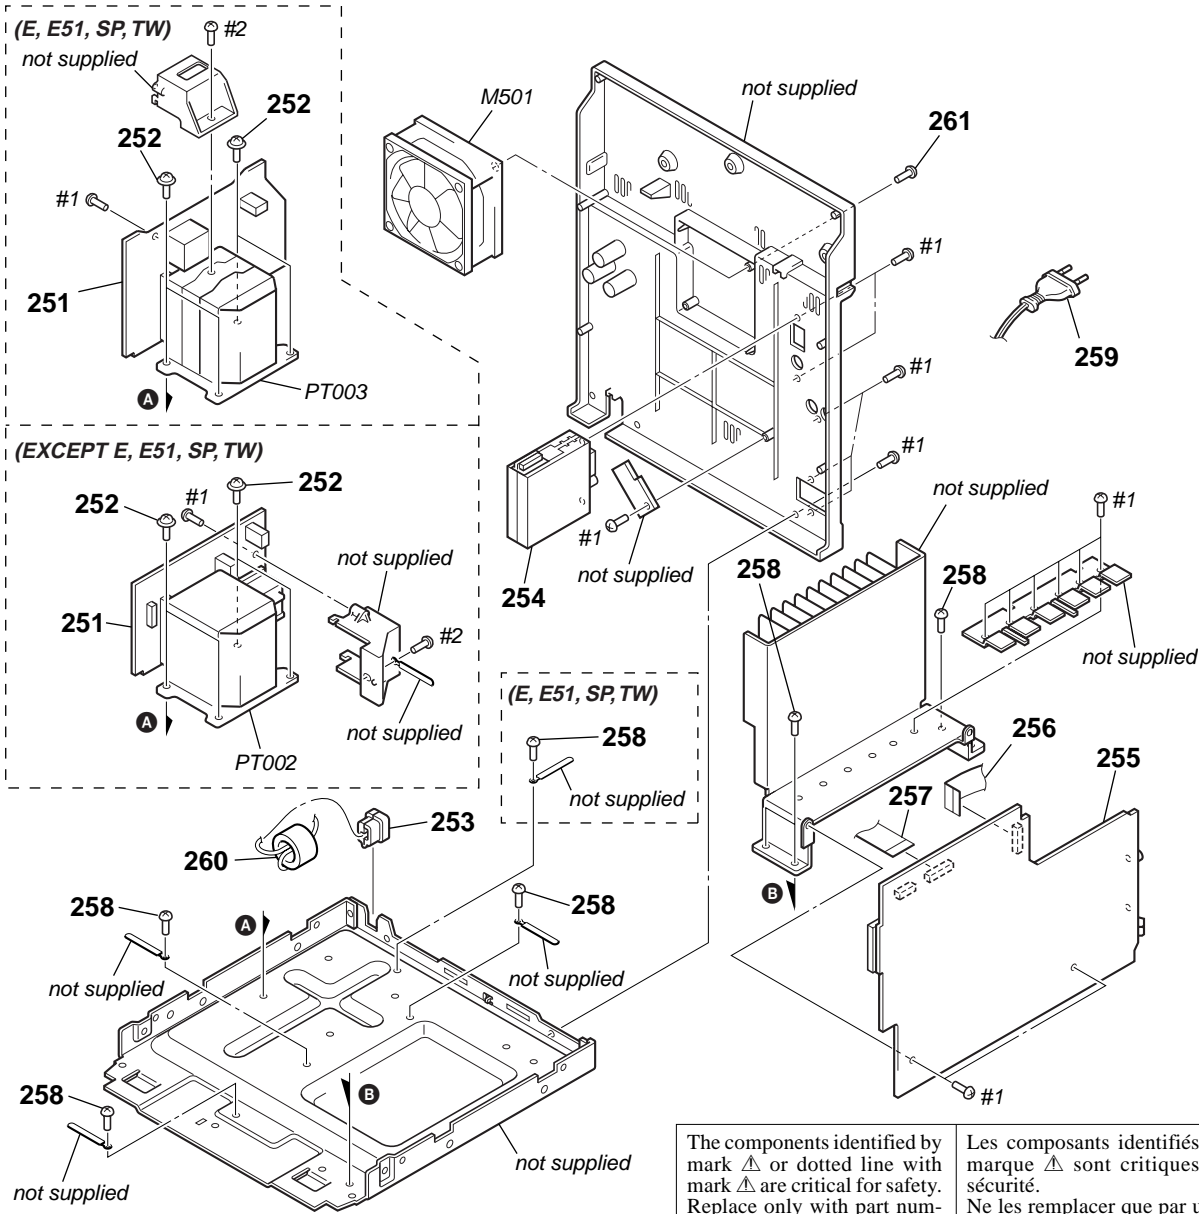

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark
251	1-688-399-12	PT BOARD (EXCEPT E, E51, SP, TW)	
251	1-688-763-11	PT BOARD (E, E51, SP, TW)	
252	4-242-527-01	S-SCREW, ITC+4-8 R	
253	3-703-244-11	BUSHING (2104), CORD	
254	1-693-615-11	TUNER PACK (E, E51, MX, SP, TW, AUS)	
254	1-693-616-11	TUNER PACK (AEP, UK)	
254	1-693-617-11	TUNER (KR)	
254	1-693-618-11	TUNER PACK (CIS)	
254	1-693-631-11	TUNER PACK (US, CND)	
255	A-4732-937-A	MAIN BOARD, COMPLETE (AEP, UK)	
255	A-4733-016-A	MAIN BOARD, COMPLETE (E51)	
255	A-4733-077-A	MAIN BOARD, COMPLETE (US, CND)	
255	A-4734-312-A	MAIN BOARD, COMPLETE (MX)	
255	A-4747-718-A	MAIN BOARD, COMPLETE (CIS)	
255	A-4747-797-A	MAIN BOARD, COMPLETE (E, SP, TW)	
255	A-4747-826-A	MAIN BOARD, COMPLETE (KR)	
255	A-4748-138-A	MAIN BOARD, COMPLETE (AUS)	
256	1-769-943-11	WIRE (FLAT TYPE) (11 CORE) (EXCEPT AEP, UK)	
256	1-773-007-11	WIRE (FLAT TYPE) (15 CORE) (AEP, UK)	
257	1-827-222-11	WIRE (FLAT TYPE) (19 CORE)	

Ref. No.	Part No.	Description	Remark
258	4-242-539-01	BVIT3B+3-8R W/O SLOT	
$\Delta$ 259	1-696-845-11	CORD, POWER (AUS)	
$\Delta$ 259	1-757-140-11	CORD, POWER (AEP, SP, CIS, E51)	
$\Delta$ 259	1-775-787-62	CORD, POWER (UK)	
$\Delta$ 259	1-823-296-11	CORD, POWER (KR)	
$\Delta$ 259	1-823-597-11	CORD, POWER (US, CND)	
$\Delta$ 259	1-827-226-21	CORD, POWER (E, MX)	
$\Delta$ 259	1-827-597-11	CORD, POWER (TW)	
260	1-400-285-11	F-BEAD, E2515MRT	
261	4-242-808-01	BVT2 +3-15 W/O SLOT (E, E51, MX, SP, TW, KR)	
M501	1-763-738-31	FAN, DC	
$\Delta$ PT002	1-439-762-11	TRANSFORMER, POWER (US)	
$\Delta$ PT002	1-439-921-11	TRANSFORMER, POWER (AEP, UK, CIS)	
$\Delta$ PT002	1-439-923-11	TRANSFORMER, POWER (MX)	
$\Delta$ PT002	1-439-924-11	TRANSFORMER, POWER (KR)	
$\Delta$ PT002	1-439-968-11	TRANSFORMER, POWER (CND)	
$\Delta$ PT002	1-443-049-11	TRANSFORMER, POWER (AUS)	
$\Delta$ PT003	1-439-922-11	TRANSFORMER, POWER (E, E51, SP, TW)	
#1	7-685-647-79	SCREW +BVT 3X10 TYPE2 N-S	
#2	7-685-872-09	SCREW +BVT 3X8 (S)	

7-7. CD MECHANISM DECK SECTION-1


( CDM74-K6BD71AS: MX  
CDM74S-K6BD71A: AEP, UK, CIS, E51  
CDM74S-K6BD72: US, CND, E, SP, TW, KR, AUS )

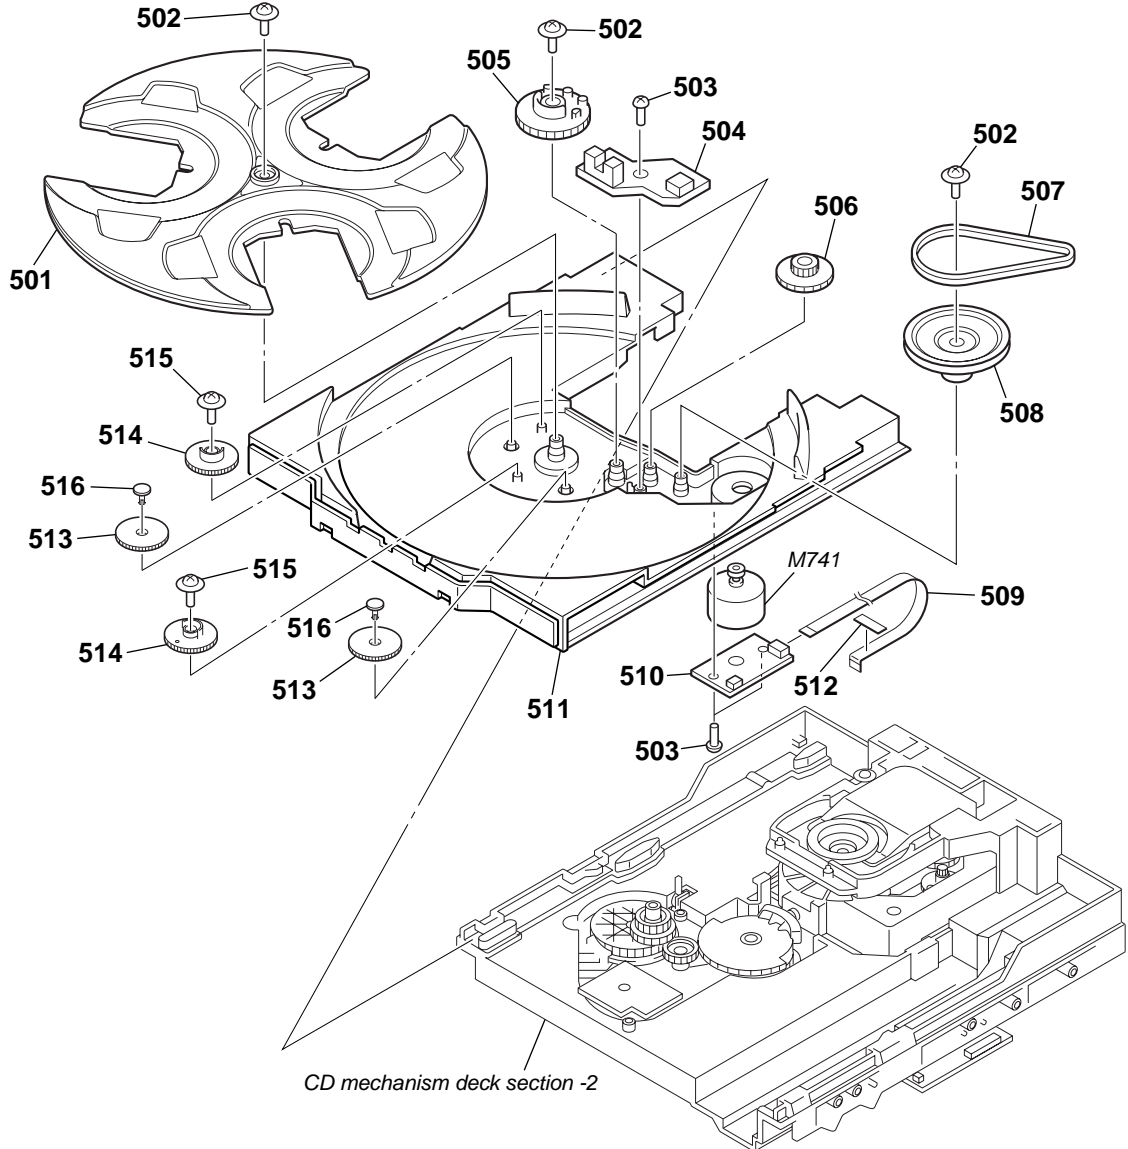

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
501	4-243-815-01	TABLE (LOADING)		510	1-687-134-11	MOTOR (TB) BOARD	
502	4-218-252-61	SCREW (+PTPWH M2.6), FLOATING		511	4-243-816-01	TRAY	
503	4-218-253-21	SCREW (M2.6), +BTTP		512	3-321-598-01	SHEET (BA)	
504	1-687-132-11	SENSOR BOARD		513	4-245-570-01	GEAR (JOINT)	
505	4-243-819-01	GEAR (GENEVA)		514	4-245-571-01	GEAR (STOPPER)	
506	4-243-820-01	GEAR (TABLE)		515	4-985-672-01	SCREW (+PTPWH M2.6), FLOATING	
507	4-243-823-01	BELT (TABLE)		516	4-245-572-01	BUSHING (GEAR)	
508	4-243-821-01	PULLEY (TABLE)		M741	A-4723-963-A	MOTOR ASSY, TABLE	
509	1-776-182-11	WIRE (FLAT TYPE) (5 CORE)					

**7-8. CD MECHANISM DECK SECTION-2**

( CDM74-K6BD71AS: MX  
CDM74S-K6BD71A: AEP, UK, CIS, E51  
CDM74S-K6BD72: US, CND, E, SP, TW, KR, AUS )

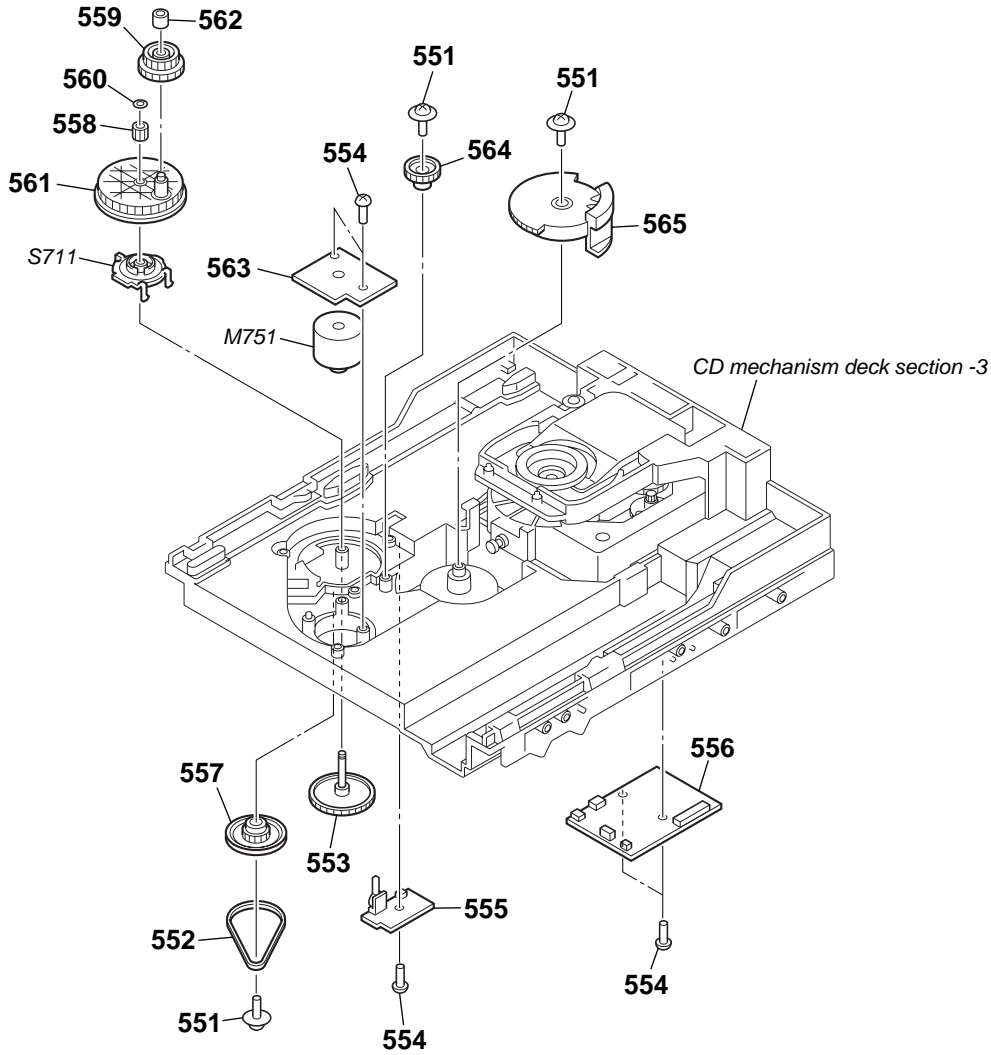


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
551	4-218-252-61	SCREW (+PTPWH M2.6), FLOATING		560	3-016-533-11	WASHER (FR), STOPPER (EXCEPT MX)	
552	4-244-034-01	BELT (LOADING)		561	4-244-108-01	GEAR, SWING	
553	4-224-613-01	GEAR (SHAFT)		562	4-224-608-01	COLLAR, SWING	
554	4-218-253-31	SCREW (M2.6), +BTTP		563	1-687-133-11	MOTOR (LD) BOARD	
555	1-687-669-11	SW BOARD		564	4-224-606-01	GEAR (RV)	
556	1-687-135-11	DRIVER BOARD		565	4-243-818-01	GEAR (U/D)	
557	4-225-844-01	GEAR (LOADING A)		M751	A-4736-655-A	MOTOR ASSY, LOADING (EXCEPT MX)	
558	4-224-611-01	GEAR (LOADING B)		M751	A-4737-553-A	MOTOR ASSY, LOADING (MX)	
559	4-224-609-01	GEAR (LOADING C)		S711	1-477-680-11	ENCODER, ROTARY	
560	3-016-533-01	WASHER (FR), STOPPER (MX)				(DISC TRAY ADDRESS DETECT)	



**7-9. CD MECHANISM DECK SECTION-3**


( CDM74-K6BD71AS: MX  
CDM74S-K6BD71A: AEP, UK, CIS, E51  
CDM74S-K6BD72: US, CND, E, SP, TW, KR, AUS )

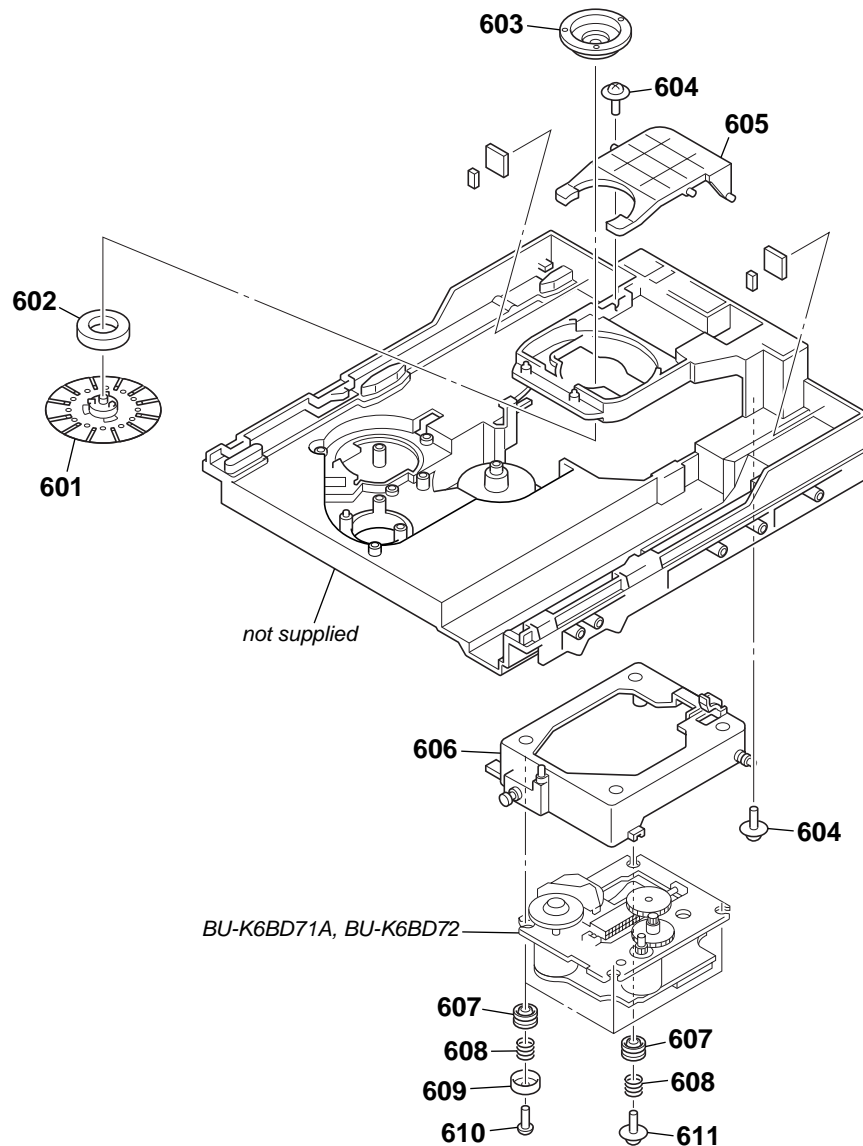

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
601	X-4955-707-1	PULLEY (A5) ASSY, CHUCKING (EXCEPT MX)		607	4-227-549-11	INSULATOR	
601	X-4955-791-1	PULLEY (SI) ASSY, CHUCKING (MX)		608	4-227-045-11	SPRING (INSULATOR), COIL (MX)	
602	1-471-035-11	MAGNET ASSY		608	4-227-045-31	SPRING (INSULATOR), COIL (EXCEPT MX)	
603	4-221-688-01	PULLEY (B), CHUCKING (MX)		609	4-231-151-01	STOPPER (BU)	
603	4-231-189-01	PULLEY (B), CHUCKING (EXCEPT MX)		610	4-218-253-31	SCREW (M2.6), +BTTP	
604	4-218-252-61	SCREW (+PTPWH M2.6), FLOATING		611	4-985-672-01	SCREW (+PTPWH M2.6), FLOATING	
605	4-243-822-01	LEVER (LIFTER)		612	4-243-817-01	CHASSIS	
606	X-4955-536-1	HOLDER (213) ASSY					

**7-10. BASE UNIT SECTION**

( BU-K6BD71A: AEP, UK, CIS, MX, E51  
BU-K6BD72: US, CND, E, SP, TW, KR, AUS )

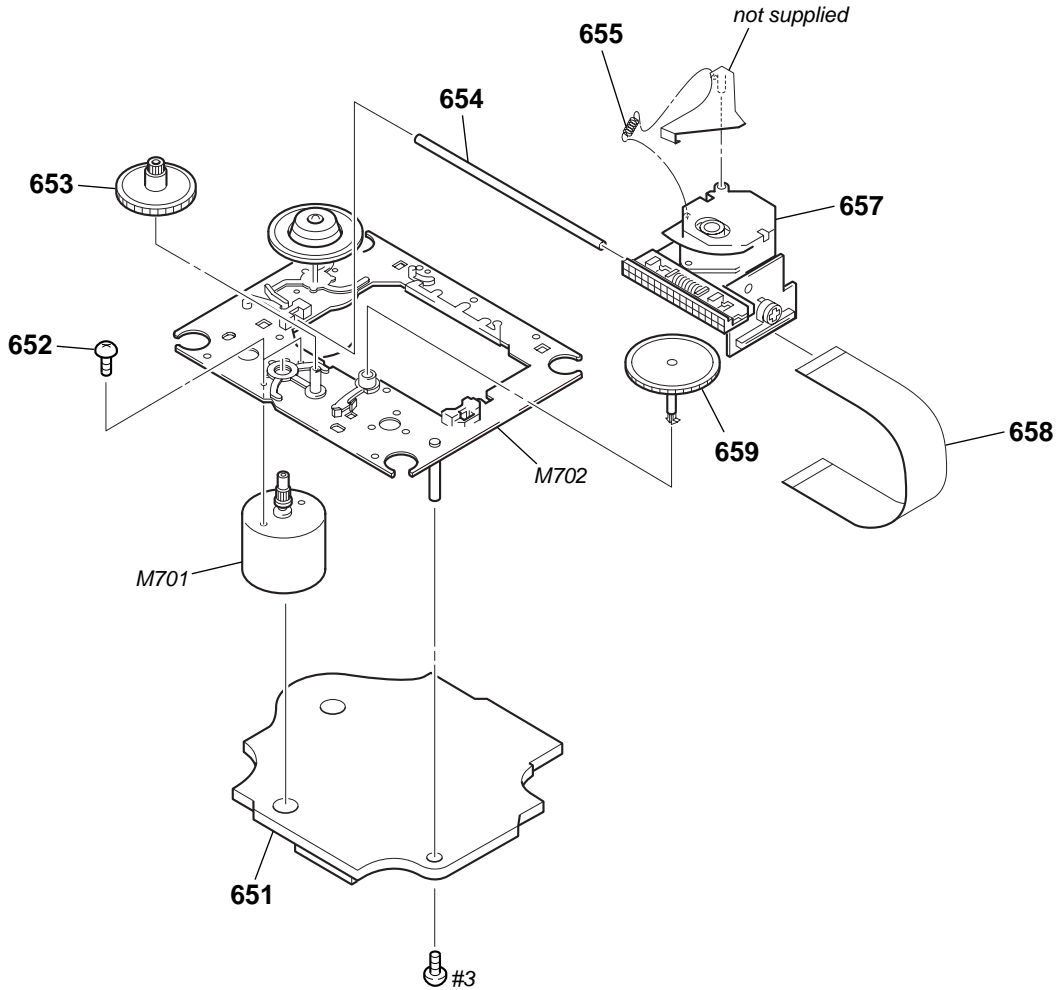

<p>The components identified by mark <math>\triangle</math> or dotted line with mark <math>\triangle</math> are critical for safety. Replace only with part number specified.</p>	<p>Les composants identifiés par une marque <math>\triangle</math> sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>
---	--

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
651	A-4732-699-A	BD BOARD, COMPLETE (AEP, UK, CIS, E51, MX)		$\triangle$ 657	8-820-020-11	OPTICAL PICK-UP KSS-213D/Z-RP	
651	A-4734-406-A	BD BOARD, COMPLETE (US, CND, SP, TW, KR, AUS)		658	1-823-859-11	WIRE (FLAT TYPE) (16 CORE)	
652	3-713-786-51	SCREW +P 2X3		659	2-626-907-11	GEAR (A)	
653	2-627-003-01	GEAR (B) (RP)		M701	X-2625-769-1	GEAR ASSY (MB) (RP), MOTOR (SLED)	
654	2-626-908-01	SHAFT, SLED		M702	X-2161-802-1	CHASSIS ASSY (DCP), T. T (SPINDLE)	
655	2-646-702-01	SPRING, EXTENSION		#3	7-685-534-19	SCREW +BTP 2.6X8 TYPE2 N-S	

## SECTION 8 ELECTRICAL PARTS LIST

BD

**NOTE:**

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS  
All resistors are in ohms.  
METAL: Metal-film resistor.  
METAL OXIDE: Metal oxide-film resistor.  
F: nonflammable
- Abbreviation  
AUS : Australian model                      KR : Korean model                      SP : Singapore model  
CND : Canadian model                      MX : Mexican model                      TW : Taiwan model  
E51 : Chilean and Peruvian models

- Items marked “\*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS  
In each case, u:  $\mu$ , for example:  
uA. . :  $\mu$ A. .                      uPA. . :  $\mu$ PA. .  
uPB. . :  $\mu$ PB. .                      uPC. . :  $\mu$ PC. .  
uPD. . :  $\mu$ PD. .
- CAPACITORS  
uF:  $\mu$ F
- COILS  
uH:  $\mu$ H

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
	A-4732-699-A	BD BOARD, COMPLETE ***** (AEP, UK, CIS, E51, MX)		C803	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
		< CAPACITOR >		C804	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C701	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C805	1-126-392-11	ELECT CHIP 100uF 20%	6.3V
C702	1-126-392-11	ELECT CHIP 100uF	20% 6.3V	C806	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C703	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C807	1-126-392-11	ELECT CHIP 100uF 20%	6.3V
C704	1-126-391-11	ELECT CHIP 47uF	20% 6.3V	C810	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C705	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V	C811	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C706	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C812	1-115-156-11	CERAMIC CHIP 1uF	10V
C707	1-126-392-11	ELECT CHIP 100uF	20% 6.3V	C813	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C708	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C814	1-126-392-11	ELECT CHIP 100uF 20%	6.3V
C709	1-126-392-11	ELECT CHIP 100uF	20% 6.3V	C815	1-128-360-11	ELECT CHIP 220uF 20%	10V
C710	1-165-176-11	CERAMIC CHIP 0.047uF	10% 16V	C816	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C711	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C817	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C712	1-162-949-11	CERAMIC CHIP 47PF	5% 50V	C823	1-162-949-11	CERAMIC CHIP 47PF 5%	50V
C713	1-162-968-11	CERAMIC CHIP 0.0047uF	10% 50V	C824	1-162-949-11	CERAMIC CHIP 47PF 5%	50V
C714	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C825	1-162-949-11	CERAMIC CHIP 47PF 5%	50V
C715	1-126-401-21	ELECT CHIP 1uF	20% 50V	C829	1-162-949-11	CERAMIC CHIP 47PF 5%	50V
C716	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V	C830	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C717	1-162-968-11	CERAMIC CHIP 0.0047uF	10% 50V	C831	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C718	1-115-156-11	CERAMIC CHIP 1uF	10V	C834	1-128-360-11	ELECT CHIP 220uF 20%	10V
C719	1-162-968-11	CERAMIC CHIP 0.0047uF	10% 50V	C835	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C720	1-162-953-11	CERAMIC CHIP 100PF	5% 50V	C837	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C721	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C843	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C722	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C844	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C723	1-126-392-11	ELECT CHIP 100uF	20% 6.3V	C856	1-115-156-11	CERAMIC CHIP 1uF	10V
C729	1-128-360-11	ELECT CHIP 220uF	20% 10V	C857	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C732	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V	C858	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C733	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V	C859	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C734	1-162-917-11	CERAMIC CHIP 15PF	5% 50V	C860	1-162-953-11	CERAMIC CHIP 100PF 5%	50V
C735	1-162-918-11	CERAMIC CHIP 18PF	5% 50V			< CONNECTOR >	
C741	1-164-156-11	CERAMIC CHIP 0.1uF	25V	CN708	1-817-244-11	CONNECTOR, FFC 16P	
C742	1-164-156-11	CERAMIC CHIP 0.1uF	25V	CN710	1-778-874-11	CONNECTOR, FFC (LIF (NON-ZIF)) 19P	
C743	1-165-176-11	CERAMIC CHIP 0.047uF	10% 16V			< FERRITE BEAD >	
C744	1-125-837-11	CERAMIC CHIP 1uF	10% 6.3V	FB701	1-550-907-21	FERRITE 0uH	
C746	1-164-156-11	CERAMIC CHIP 0.1uF	25V	FB707	1-550-907-21	FERRITE 0uH	
C747	1-164-156-11	CERAMIC CHIP 0.1uF	25V	FB708	1-550-907-21	FERRITE 0uH	
C748	1-128-360-11	ELECT CHIP 220uF	20% 10V	FB801	1-550-907-21	FERRITE 0uH	
C753	1-162-949-11	CERAMIC CHIP 47PF	5% 50V	FB802	1-550-907-21	FERRITE 0uH	
C754	1-162-949-11	CERAMIC CHIP 47PF	5% 50V	FB803	1-550-907-21	FERRITE 0uH	
C756	1-162-949-11	CERAMIC CHIP 47PF	5% 50V	FB804	1-550-907-21	FERRITE 0uH	
C802	1-164-156-11	CERAMIC CHIP 0.1uF	25V	FB805	1-550-907-21	FERRITE 0uH	

**BD**

Ref. No.	Part No.	Description	Remark
FB806	1-550-907-21	FERRITE	0uH
FB807	1-550-907-21	FERRITE	0uH
FB808	1-550-907-21	FERRITE	0uH
< IC >			
IC721	6-701-796-01	IC LC78646E-E	
IC722	6-704-220-01	IC BA5836FP	
IC801	6-704-008-01	IC LC78684E-E	
IC802	6-704-009-01	IC LC32V4265CT-25-MPB-E	
IC803	6-704-007-01	IC MM1571J	
< TRANSISTOR >			
Q701	8-729-054-57	TRANSISTOR	KTN2907AS-RTK
< RESISTOR >			
R701	1-216-841-11	METAL CHIP	47K 5% 1/10W
R702	1-216-835-11	METAL CHIP	15K 5% 1/10W
R703	1-216-835-11	METAL CHIP	15K 5% 1/10W
R704	1-216-835-11	METAL CHIP	15K 5% 1/10W
R705	1-216-835-11	METAL CHIP	15K 5% 1/10W
R706	1-216-841-11	METAL CHIP	47K 5% 1/10W
R707	1-216-797-11	METAL CHIP	10 5% 1/10W
R708	1-216-833-11	METAL CHIP	10K 5% 1/10W
R709	1-216-838-11	METAL CHIP	27K 5% 1/10W
R711	1-216-815-11	METAL CHIP	330 5% 1/10W
R713	1-216-821-11	METAL CHIP	1K 5% 1/10W
R714	1-216-809-11	METAL CHIP	100 5% 1/10W
R715	1-216-809-11	METAL CHIP	100 5% 1/10W
R716	1-216-809-11	METAL CHIP	100 5% 1/10W
R717	1-216-809-11	METAL CHIP	100 5% 1/10W
R718	1-216-809-11	METAL CHIP	100 5% 1/10W
R719	1-216-809-11	METAL CHIP	100 5% 1/10W
R720	1-216-809-11	METAL CHIP	100 5% 1/10W
R721	1-216-809-11	METAL CHIP	100 5% 1/10W
R722	1-216-821-11	METAL CHIP	1K 5% 1/10W
R725	1-216-819-11	METAL CHIP	680 5% 1/10W
R726	1-216-819-11	METAL CHIP	680 5% 1/10W
R727	1-216-809-11	METAL CHIP	100 5% 1/10W
R728	1-216-841-11	METAL CHIP	47K 5% 1/10W
R729	1-216-834-11	METAL CHIP	12K 5% 1/10W
R730	1-216-822-11	METAL CHIP	1.2K 5% 1/10W
R731	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
R732	1-216-864-11	METAL CHIP	0 5% 1/10W
R738	1-218-867-11	METAL CHIP	6.8K 5% 1/10W
R739	1-216-864-11	METAL CHIP	0 5% 1/10W
R740	1-218-867-11	METAL CHIP	6.8K 5% 1/10W
R741	1-216-864-11	METAL CHIP	0 5% 1/10W
R744	1-216-845-11	METAL CHIP	100K 5% 1/10W
R745	1-216-809-11	METAL CHIP	100 5% 1/10W
R746	1-216-803-11	METAL CHIP	33 5% 1/10W
R747	1-216-803-11	METAL CHIP	33 5% 1/10W
R760	1-216-809-11	METAL CHIP	100 5% 1/10W
R765	1-216-857-11	METAL CHIP	1M 5% 1/10W
R801	1-216-809-11	METAL CHIP	100 5% 1/10W
R802	1-216-809-11	METAL CHIP	100 5% 1/10W
R803	1-216-809-11	METAL CHIP	100 5% 1/10W
R804	1-216-809-11	METAL CHIP	100 5% 1/10W

Ref. No.	Part No.	Description	Remark
R805	1-216-809-11	METAL CHIP	100 5% 1/10W
R806	1-216-809-11	METAL CHIP	100 5% 1/10W
R807	1-216-809-11	METAL CHIP	100 5% 1/10W
R817	1-216-827-11	METAL CHIP	3.3K 5% 1/10W
R818	1-216-811-11	METAL CHIP	150 5% 1/10W
R819	1-216-821-11	METAL CHIP	1K 5% 1/10W
R820	1-216-821-11	METAL CHIP	1K 5% 1/10W
R823	1-216-809-11	METAL CHIP	100 5% 1/10W
R824	1-216-809-11	METAL CHIP	100 5% 1/10W
R825	1-216-809-11	METAL CHIP	100 5% 1/10W
R826	1-216-809-11	METAL CHIP	100 5% 1/10W
R827	1-216-809-11	METAL CHIP	100 5% 1/10W
R828	1-216-809-11	METAL CHIP	100 5% 1/10W
R829	1-216-809-11	METAL CHIP	100 5% 1/10W
R832	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
R833	1-216-809-11	METAL CHIP	100 5% 1/10W
R834	1-216-809-11	METAL CHIP	100 5% 1/10W
R860	1-216-809-11	METAL CHIP	100 5% 1/10W
< SWITCH >			
S701	1-771-853-11	SWITCH, DETECTION (LIMIT IN)	
< VIBRATOR >			
X701	1-767-408-21	VIBRATOR, CRYSTAL (16.9344MHz)	
*****			
A-4734-406-A	BD BOARD, COMPLETE		
*****			
(US, CND, E, SP, TW, KR, AUS)			
< CAPACITOR >			
C701	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C702	1-124-584-00	ELECT	100uF 20% 10V
C703	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C704	1-124-589-11	ELECT	47uF 20% 16V
C705	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C706	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C707	1-124-584-00	ELECT	100uF 20% 10V
C708	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C709	1-124-584-00	ELECT	100uF 20% 10V
C710	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V
C711	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C712	1-162-949-11	CERAMIC CHIP	47PF 5% 50V
C713	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V
C714	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C715	1-126-160-11	ELECT	1uF 20% 50V
C716	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C717	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V
C718	1-115-156-11	CERAMIC CHIP	1uF 10V
C719	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V
C720	1-162-953-11	CERAMIC CHIP	100PF 5% 50V
C721	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C722	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C723	1-124-584-00	ELECT	100uF 20% 10V
C729	1-126-934-11	ELECT	220uF 20% 10V
C731	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C732	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C733	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V

BD

CD KEY

DRIVER

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C734	1-162-917-11	CERAMIC CHIP	15PF 5% 50V	R728	1-216-841-11	METAL CHIP	47K 5% 1/10W
C735	1-162-918-11	CERAMIC CHIP	18PF 5% 50V	R729	1-216-834-11	METAL CHIP	12K 5% 1/10W
C741	1-164-156-11	CERAMIC CHIP	0.1uF 25V	R730	1-216-822-11	METAL CHIP	1.2K 5% 1/10W
C742	1-164-156-11	CERAMIC CHIP	0.1uF 25V	R731	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
C743	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V	R732	1-216-864-11	METAL CHIP	0 5% 1/10W
C744	1-125-837-11	CERAMIC CHIP	1uF 10% 6.3V	R738	1-218-867-11	METAL CHIP	6.8K 5% 1/10W
C745	1-162-949-11	CERAMIC CHIP	47PF 5% 50V	R739	1-216-864-11	METAL CHIP	0 5% 1/10W
C746	1-164-156-11	CERAMIC CHIP	0.1uF 25V	R740	1-218-867-11	METAL CHIP	6.8K 5% 1/10W
C747	1-164-156-11	CERAMIC CHIP	0.1uF 25V	R741	1-216-864-11	METAL CHIP	0 5% 1/10W
C748	1-126-934-11	ELECT	220uF 20% 10V	R744	1-216-845-11	METAL CHIP	100K 5% 1/10W
C750	1-162-949-11	CERAMIC CHIP	47PF 5% 50V	R745	1-216-809-11	METAL CHIP	100 5% 1/10W
C751	1-162-949-11	CERAMIC CHIP	47PF 5% 50V	R746	1-216-803-11	METAL CHIP	33 5% 1/10W
C752	1-162-949-11	CERAMIC CHIP	47PF 5% 50V	R747	1-216-803-11	METAL CHIP	33 5% 1/10W
C753	1-162-949-11	CERAMIC CHIP	47PF 5% 50V	R751	1-216-841-11	METAL CHIP	47K 5% 1/10W
C754	1-162-949-11	CERAMIC CHIP	47PF 5% 50V	R752	1-216-841-11	METAL CHIP	47K 5% 1/10W
C756	1-162-949-11	CERAMIC CHIP	47PF 5% 50V	R753	1-216-841-11	METAL CHIP	47K 5% 1/10W
		< CONNECTOR >		R754	1-216-841-11	METAL CHIP	47K 5% 1/10W
CN708	1-793-907-11	CONNECTOR, FFC/FPC 16P		R760	1-216-809-11	METAL CHIP	100 5% 1/10W
CN710	1-784-741-11	CONNECTOR, FFC 19P		R765	1-216-857-11	METAL CHIP	1M 5% 1/10W
		< FERRITE BEAD >				< SWITCH >	
FB701	1-550-907-21	FERRITE	0uH	S701	1-771-853-11	SWITCH, DETECTION (LIMIT IN)	
FB707	1-550-907-21	FERRITE	0uH			< VIBRATOR >	
FB708	1-550-907-21	FERRITE	0uH	X701	1-579-280-11	VIBRATOR, CRYSTAL (16.9344MHz)	
		< IC >				*****	
IC721	6-701-796-01	IC LC78646E-E			1-688-379-11	CD KEY BOARD	
IC722	6-704-220-01	IC BA5836FP				*****	
		< TRANSISTOR >				< CONNECTOR >	
Q701	8-729-054-57	TRANSISTOR	KTN2907AS-RTK	CN302	1-784-766-11	CONNECTOR, FFC 5P	
		< RESISTOR >				< RESISTOR >	
R701	1-216-841-11	METAL CHIP	47K 5% 1/10W	R326	1-216-822-11	METAL CHIP	1.2K 5% 1/10W
R702	1-216-835-11	METAL CHIP	15K 5% 1/10W	R327	1-216-824-11	METAL CHIP	1.8K 5% 1/10W
R703	1-216-835-11	METAL CHIP	15K 5% 1/10W	R328	1-216-824-11	METAL CHIP	1.8K 5% 1/10W
R704	1-216-835-11	METAL CHIP	15K 5% 1/10W	R329	1-216-826-11	METAL CHIP	2.7K 5% 1/10W
R705	1-216-835-11	METAL CHIP	15K 5% 1/10W			< SWITCH >	
R706	1-216-841-11	METAL CHIP	47K 5% 1/10W	S319	1-762-875-21	SWITCH, KEYBOARD (OPEN/CLOSE ▲)	
R707	1-216-797-11	METAL CHIP	10 5% 1/10W	S320	1-762-875-21	SWITCH, KEYBOARD (DISC DIRECT PLAY 3)	
R708	1-216-833-11	METAL CHIP	10K 5% 1/10W	S321	1-762-875-21	SWITCH, KEYBOARD (DISC DIRECT PLAY 2)	
R709	1-216-838-11	METAL CHIP	27K 5% 1/10W	S322	1-762-875-21	SWITCH, KEYBOARD (DISC DIRECT PLAY 1)	
R711	1-216-815-11	METAL CHIP	330 5% 1/10W	S323	1-762-875-21	SWITCH, KEYBOARD (DISC CHANGE)	
R713	1-216-821-11	METAL CHIP	1K 5% 1/10W			*****	
R714	1-216-809-11	METAL CHIP	100 5% 1/10W		1-687-135-11	DRIVER BOARD	
R715	1-216-809-11	METAL CHIP	100 5% 1/10W			*****	
R716	1-216-809-11	METAL CHIP	100 5% 1/10W			< CAPACITOR >	
R717	1-216-809-11	METAL CHIP	100 5% 1/10W	C715	1-126-933-11	ELECT	100uF 20% 16V
R718	1-216-809-11	METAL CHIP	100 5% 1/10W	C731	1-126-964-11	ELECT	10uF 20% 50V
R719	1-216-809-11	METAL CHIP	100 5% 1/10W	C735	1-164-159-21	CERAMIC	0.1uF 50V
R720	1-216-809-11	METAL CHIP	100 5% 1/10W	C736	1-164-159-21	CERAMIC	0.1uF 50V
R721	1-216-809-11	METAL CHIP	100 5% 1/10W	C737	1-164-159-21	CERAMIC	0.1uF 50V
R722	1-216-809-11	METAL CHIP	100 5% 1/10W	C741	1-162-306-11	CERAMIC	0.01uF 30% 16V
R725	1-216-819-11	METAL CHIP	680 5% 1/10W	C751	1-162-306-11	CERAMIC	0.01uF 30% 16V
R726	1-216-819-11	METAL CHIP	680 5% 1/10W				
R727	1-216-809-11	METAL CHIP	100 5% 1/10W				

**CX-JN5**  
Ver 1.1

<b>DRIVER</b>	<b>HEADPHONE</b>	<b>KEY</b>
---------------	------------------	------------

Ref. No.	Part No.	Description	Remark
C752	1-164-159-21	CERAMIC 0.1uF	50V
< CONNECTOR >			
CN701	1-785-338-11	PIN, CONNECTOR (LIGHT ANGLE) 12P	
CN702	1-784-766-11	CONNECTOR, FFC 5P	
* CN703	1-564-720-11	PIN, CONNECTOR (SMALL TYPE) 4P	
CN704	1-785-328-11	PIN, CONNECTOR (LIGHT ANGRE) 2P	
< DIODE >			
D701	8-719-921-42	DIODE MTZJ-T-77-5.1A	
D711	8-719-109-69	DIODE MTZJ-T-77-3.6B	
< IC >			
IC701	8-759-598-69	IC BA6956AN	
IC712	8-759-598-69	IC BA6956AN	
< TRANSISTOR >			
Q731	8-729-029-66	TRANSISTOR RT1N141S-TP	
< RESISTOR >			
R701	1-249-413-11	CARBON 470	5% 1/4W
R702	1-247-807-31	CARBON 100	5% 1/4W
R711	1-249-417-11	CARBON 1K	5% 1/4W
R712	1-249-425-11	CARBON 4.7K	5% 1/4W
R713	1-249-433-11	CARBON 22K	5% 1/4W
R721	1-249-425-11	CARBON 4.7K	5% 1/4W
R722	1-249-425-11	CARBON 4.7K	5% 1/4W
R723	1-249-425-11	CARBON 4.7K	5% 1/4W
R731	1-247-807-31	CARBON 100	5% 1/4W
R732	1-249-429-11	CARBON 10K	5% 1/4W
R733	1-249-417-11	CARBON 1K	5% 1/4W
R734	1-249-430-11	CARBON 12K	5% 1/4W
R735	1-247-807-31	CARBON 100	5% 1/4W
R751	1-249-425-11	CARBON 4.7K	5% 1/4W
*****			
	1-688-400-12	HAEDPHONE BOARD	
*****			
< CAPACITOR >			
C250	1-125-891-11	CERAMIC CHIP 0.47uF	10% 10V
C906	1-162-282-31	CERAMIC 100PF	10% 50V
			(AEP, UK)
C907	1-162-282-31	CERAMIC 100PF	10% 50V
			(AEP, UK)
< JACK >			
J221	1-785-448-21	JACK (PHONES)	
< RESISTOR >			
R221	1-216-206-00	RES-CHIP 2.2K	5% 1/8W
R222	1-216-206-00	RES-CHIP 2.2K	5% 1/8W
R223	1-260-092-11	CARBON 270	5% 1/2W
			(EXCEPT AEP, UK, CIS)
R223	1-260-320-11	CARBON 220	5% 1/2W
			(AEP, UK, CIS)
R224	1-260-092-11	CARBON 270	5% 1/2W
			(EXCEPT AEP, UK, CIS)

Ref. No.	Part No.	Description	Remark
R224	1-260-320-11	CARBON 220	5% 1/2W
			(AEP, UK, CIS)
R225	1-260-092-11	CARBON 270	5% 1/2W
			(EXCEPT AEP, UK, CIS)
R225	1-260-320-11	CARBON 220	5% 1/2W
			(AEP, UK, CIS)
R226	1-260-092-11	CARBON 270	5% 1/2W
			(EXCEPT AEP, UK, CIS)
R226	1-260-320-11	CARBON 220	5% 1/2W
			(AEP, UK, CIS)
< CONNECTOR >			
WH230	1-816-818-11	HLDR, WIRE 2.5-5P	
*****			
	A-4732-642-A	KEY BOARD, COMPLETE (US, CND)	
	A-4732-920-A	KEY BOARD, COMPLETE (E51)	
	A-4732-924-A	KEY BOARD, COMPLETE (AEP, UK, CIS)	
	A-4734-516-A	KEY BOARD, COMPLETE (MX)	
	A-4748-604-A	KEY BOARD, COMPLETE (E, SP, TW, AUS)	
	A-4748-928-A	KEY BOARD, COMPLETE (KR)	
		*****	
< CAPACITOR >			
C402	1-164-156-11	CERAMIC CHIP 0.1uF	25V
			(EXCEPT US, CND, AEP, UK, CIS)
C403	1-162-968-11	CERAMIC CHIP 0.0047uF	10% 50V
			(EXCEPT US, CND, AEP, UK, CIS)
C404	1-126-957-11	ELECT 0.22uF	20% 50V
			(EXCEPT US, CND, AEP, UK, CIS)
C405	1-126-960-11	ELECT 1uF	20% 50V
			(EXCEPT US, CND, AEP, UK, CIS)
C406	1-126-934-11	ELECT 220uF	20% 10V
			(EXCEPT US, CND, AEP, UK, CIS)
C407	1-162-926-11	CERAMIC CHIP 82PF	5% 50V
			(EXCEPT US, CND, AEP, UK, CIS)
C408	1-126-956-91	ELECT 0.1uF	20% 50V
			(EXCEPT US, CND, AEP, UK, CIS)
C409	1-126-934-11	ELECT 220uF	20% 16V
			(EXCEPT US, CND, AEP, UK, CIS)
C410	1-126-965-91	ELECT 22uF	20% 50V
			(EXCEPT US, CND, AEP, UK, CIS)
C411	1-164-473-11	CERAMIC CHIP 820PF	5% 50V
			(EXCEPT US, CND, AEP, UK, CIS)
C412	1-126-960-11	ELECT 1uF	20% 50V
			(EXCEPT US, CND, AEP, UK, CIS)
C416	1-126-956-91	ELECT 0.1uF	20% 50V
			(EXCEPT US, CND, AEP, UK, CIS)
C419	1-164-156-11	CERAMIC CHIP 0.1uF	25V
			(EXCEPT US, CND, AEP, UK, CIS)
C441	1-100-234-11	CERAMIC CHIP 0.1uF	25V
			(EXCEPT US, CND, AEP, UK, CIS)
C801	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
C802	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
C803	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
C804	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
C805	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
C806	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
C807	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
C808	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
		< CONNECTOR >				< RESISTOR >	
CN301	1-784-766-11	CONNECTOR, FFC 5P		R231	1-216-198-00	RES-CHIP 1K 5%	1/8W
CN303	1-784-784-11	CONNECTOR, FFC 23P		R301	1-216-864-11	SHORT CHIP 0	
		< DIODE >		R302	1-216-821-11	METAL CHIP 1K 5%	1/10W
D401	8-719-991-34	DIODE 1SS133T-72 (EXCEPT US, CND, AEP, UK, CIS)		R303	1-216-820-11	METAL CHIP 820 5%	1/10W
		< FERRITE BEAD >		R304	1-216-821-11	METAL CHIP 1K 5%	1/10W
FB401	1-410-396-41	FERRITE 0.45uH (EXCEPT US, CND, AEP, UK, CIS)		R305	1-216-822-11	METAL CHIP 1.2K 5%	1/10W
		< IC >		R306	1-216-822-11	METAL CHIP 1.2K 5%	1/10W
IC401	8-759-710-97	IC NJM4565M (TE2) (EXCEPT US, CND, AEP, UK, CIS)		R311	1-216-864-11	SHORT CHIP 0	
		< JACK >		R312	1-216-821-11	METAL CHIP 1K 5%	1/10W
J401	1-816-860-11	JACK, 6.3 BLK MONO W/SW V MSC (MIC) (EXCEPT US, CND, AEP, UK, CIS)		R313	1-216-820-11	METAL CHIP 820 5%	1/10W
		< SHORT >		R314	1-216-821-11	METAL CHIP 1K 5%	1/10W
JR403	1-216-864-11	SHORT CHIP 0 (EXCEPT US, CND, AEP, UK, CIS)		R315	1-216-822-11	METAL CHIP 1.2K 5%	1/10W
JR404	1-216-864-11	SHORT CHIP 0 (EXCEPT US, CND, AEP, UK, CIS)		R316	1-216-822-11	METAL CHIP 1.2K 5%	1/10W
JR801	1-216-864-11	SHORT CHIP 0		R317	1-216-824-11	METAL CHIP 1.8K 5%	1/10W
JR805	1-216-864-11	METAL CHIP 0 5% 1/10W (US)		R318	1-216-824-11	METAL CHIP 1.8K 5%	1/10W
JR806	1-216-864-11	METAL CHIP 0 5% 1/10W (CND)		R321	1-216-864-11	SHORT CHIP 0	
JR807	1-216-864-11	METAL CHIP 0 5% 1/10W (AEP)		R322	1-216-821-11	METAL CHIP 1K 5%	1/10W
JR808	1-216-864-11	METAL CHIP 0 5% 1/10W (UK)		R323	1-216-820-11	METAL CHIP 820 5%	1/10W
JR809	1-216-864-11	METAL CHIP 0 5% 1/10W (CIS)		R324	1-216-821-11	METAL CHIP 1K 5%	1/10W
JR810	1-216-864-11	METAL CHIP 0 5% 1/10W (AUS)		R325	1-216-822-11	METAL CHIP 1.2K 5%	1/10W
JR813	1-216-864-11	METAL CHIP 0 5% 1/10W (E)		R401	1-216-845-11	METAL CHIP 100K 5% (EXCEPT US, CND, AEP, UK, CIS)	1/10W
JR816	1-216-864-11	METAL CHIP 0 5% 1/10W (KR)		R402	1-216-829-11	METAL CHIP 4.7K 5% (EXCEPT US, CND, AEP, UK, CIS)	1/10W
JR817	1-216-864-11	METAL CHIP 0 5% 1/10W (SP)		R403	1-216-849-11	METAL CHIP 220K 5% (EXCEPT US, CND, AEP, UK, CIS)	1/10W
JR820	1-216-864-11	METAL CHIP 0 5% 1/10W (TW)		R404	1-218-867-11	METAL CHIP 6.8K 5% (EXCEPT US, CND, AEP, UK, CIS)	1/10W
JR822	1-216-864-11	METAL CHIP 0 5% 1/10W (E51)		R405	1-216-825-11	METAL CHIP 2.2K 5% (EXCEPT US, CND, AEP, UK, CIS)	1/10W
JR823	1-216-864-11	METAL CHIP 0 5% 1/10W (MX)		R406	1-216-850-11	METAL CHIP 270K 5% (EXCEPT US, CND, AEP, UK, CIS)	1/10W
		< LED >		R407	1-216-825-11	METAL CHIP 2.2K 5% (EXCEPT US, CND, AEP, UK, CIS)	1/10W
LED201	8-719-053-43	DIODE SLR-325VCT31 (i-BASS)		R408	1-216-174-00	RES-CHIP 100 5% (EXCEPT US, CND, AEP, UK, CIS)	1/8W
LED901	6-500-641-01	DIODE SLI-325URC (Ⓢ) STANDBY/ON)		R409	1-216-825-11	METAL CHIP 2.2K 5% (EXCEPT US, CND, AEP, UK, CIS)	1/10W
		< TRANSISTOR >		R410	1-216-837-11	METAL CHIP 22K 5% (EXCEPT US, CND, AEP, UK, CIS)	1/10W
Q401	8-729-045-62	FET 2SK2158-T2B (EXCEPT US, CND, AEP, UK, CIS)		R411	1-216-838-11	METAL CHIP 27K 5% (EXCEPT US, CND, AEP, UK, CIS)	1/10W
				R412	1-216-825-11	METAL CHIP 2.2K 5% (EXCEPT US, CND, AEP, UK, CIS)	1/10W
				R413	1-216-839-11	METAL CHIP 33K 5% (EXCEPT US, CND, AEP, UK, CIS)	1/10W
				R414	1-216-797-11	METAL CHIP 10 5% (EXCEPT US, CND, AEP, UK, CIS)	1/10W
				R432	1-216-841-11	METAL CHIP 47K 5% (EXCEPT US, CND, AEP, UK, CIS)	1/10W
				R801	1-216-833-11	METAL CHIP 10K 5%	1/10W
				R802	1-216-833-11	METAL CHIP 10K 5%	1/10W
				R803	1-216-797-11	METAL CHIP 10 5%	1/10W
				R804	1-216-797-11	METAL CHIP 10 5%	1/10W
				R805	1-216-833-11	METAL CHIP 10K 5%	1/10W
				R806	1-216-833-11	METAL CHIP 10K 5%	1/10W
				R807	1-216-797-11	METAL CHIP 10 5%	1/10W
				R808	1-216-797-11	METAL CHIP 10 5%	1/10W
				R809	1-216-833-11	METAL CHIP 10K 5%	1/10W

**CX-JN5**  
Ver 1.1

<b>KEY</b>	<b>MAIN</b>
------------	-------------

Ref. No.	Part No.	Description	Remark
R810	1-216-833-11	METAL CHIP 10K 5%	1/10W
R811	1-216-797-11	METAL CHIP 10 5%	1/10W
R812	1-216-797-11	METAL CHIP 10 5%	1/10W
R813	1-216-833-11	METAL CHIP 10K 5%	1/10W
R814	1-216-833-11	METAL CHIP 10K 5%	1/10W
R815	1-216-797-11	METAL CHIP 10 5%	1/10W
R816	1-216-797-11	METAL CHIP 10 5%	1/10W
< SWITCH >			
S301	1-762-875-21	SWITCH, KEYBOARD(PLAY/PRESET ▶)	
S302	1-762-875-21	SWITCH, KEYBOARD(STOP/CLEAR ■)	
S303	1-762-875-21	SWITCH, KEYBOARD (TUNING DOWN, ◀◀)	
S304	1-762-875-21	SWITCH, KEYBOARD (PAUSE/SET ■■)	
S305	1-762-875-21	SWITCH, KEYBOARD (TUNING UP, ▶▶)	
S306	1-762-875-21	SWITCH, KEYBOARD (i-BASS)	
S307	1-762-875-21	SWITCH, KEYBOARD (MODE)	
S308	1-762-875-21	SWITCH, KEYBOARD (ENTER)	
S309	1-762-875-21	SWITCH, KEYBOARD (CD)	
S310	1-762-875-21	SWITCH, KEYBOARD (TAPE A/B)	
S311	1-762-875-21	SWITCH, KEYBOARD (TUNER BAND)	
S312	1-762-875-21	SWITCH, KEYBOARD (VIDEO/AUX)	
S313	1-762-875-21	SWITCH, KEYBOARD (● REC/REC MUTE)	
S314	1-762-875-21	SWITCH, KEYBOARD (SYNC DUB)	
S315	1-762-875-21	SWITCH, KEYBOARD (POWER)	
S316	1-762-875-21	SWITCH, KEYBOARD (DISPLAY)	
S317	1-762-875-21	SWITCH, KEYBOARD (ALBUM ▼) (AEP, UK, CIS, E51, MX)	
S318	1-762-875-21	SWITCH, KEYBOARD (ALBUM ▲) (AEP, UK, CIS, E51, MX)	
S801	1-786-396-11	SW, RTRY EC12E24604-30MM (VOLUME)	
S802	1-786-396-11	SW, RTRY EC12E24604-30MM (BASS)	
S803	1-477-824-11	ENCODER, ROTARY (TREBLE)	
S804	1-786-418-11	SW, RTRY RE0123PVB30F (MULTI JOG)	
< VARIABLE RESISTOR >			
VR401	1-227-502-11	RES, VAR, CARBON 10K (MIC LEVEL) (EXCEPT US, CND, AEP, UK, CIS)	
*****			
A-4732-937-A	MAIN BOARD, COMPLETE (AEP, UK)		
A-4733-016-A	MAIN BOARD, COMPLETE (E51)		
A-4733-077-A	MAIN BOARD, COMPLETE (US, CND)		
A-4734-312-A	MAIN BOARD, COMPLETE (MX)		
A-4747-718-A	MAIN BOARD, COMPLETE (CIS)		
A-4747-797-A	MAIN BOARD, COMPLETE (E, SP, TW)		
A-4747-826-A	MAIN BOARD, COMPLETE (KR)		
A-4748-138-A	MAIN BOARD, COMPLETE (AUS)		
*****			
7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S		
< CAPACITOR >			
C003	1-127-753-11	ELECT 3300uF 20%	71V (EXCEPT AEP, UK, CIS, E51, MX)
C003	1-127-813-11	ELECT 3300uF 20%	71V (E51, MX)
C003	1-135-516-11	ELECT 3300uF 20%	63V (AEP, UK, CIS)

Ref. No.	Part No.	Description	Remark
C004	1-127-753-11	ELECT 3300uF 20%	71V (EXCEPT AEP, UK, CIS, E51, MX)
C004	1-127-813-11	ELECT 3300uF 20%	71V (E51, MX)
C004	1-135-516-11	ELECT 3300uF 20%	63V (AEP, UK, CIS)
C005	1-126-955-21	ELECT 4700uF 20%	35V
C006	1-126-955-21	ELECT 4700uF 20%	35V
C007	1-128-549-11	ELECT 3300uF 20%	35V
C008	1-126-942-61	ELECT 1000uF 20%	25V
C011	1-165-621-11	CERAMIC CHIP 0.1uF	50V
C012	1-165-621-11	CERAMIC CHIP 0.1uF	50V
C013	1-165-621-11	CERAMIC CHIP 0.1uF	50V
C014	1-165-621-11	CERAMIC CHIP 0.1uF	50V
C015	1-165-621-11	CERAMIC CHIP 0.1uF	50V
C016	1-165-621-11	CERAMIC CHIP 0.1uF	50V
C017	1-165-621-11	CERAMIC CHIP 0.1uF	50V
C018	1-165-621-11	CERAMIC CHIP 0.1uF	50V
C022	1-126-933-11	ELECT 100uF 20%	16V
C023	1-126-948-11	ELECT 100uF 20%	35V
C026	1-126-947-11	ELECT 47uF 20%	25V
C029	1-126-947-11	ELECT 47uF 20%	10V
C030	1-162-968-11	CERAMIC CHIP 0.0047uF	10% 50V
C031	1-126-947-11	ELECT 47uF 20%	25V
C032	1-104-663-11	ELECT 33uF 20%	25V
C033	1-165-621-11	CERAMIC CHIP 0.1uF	50V
C034	1-165-621-11	CERAMIC CHIP 0.1uF	50V
C041	1-126-964-11	ELECT 10uF 20%	50V (AEP, UK, CIS)
C042	1-126-964-11	ELECT 10uF 20%	50V (AEP, UK, CIS)
C043	1-126-964-11	ELECT 10uF 20%	50V (AEP, UK, CIS)
C044	1-126-964-11	ELECT 10uF 20%	50V (AEP, UK, CIS)
C045	1-126-968-11	ELECT 100uF 20%	50V (AEP, UK, CIS)
C046	1-126-968-11	ELECT 100uF 20%	50V (AEP, UK, CIS)
C047	1-104-665-11	ELECT 100uF 20%	10V
C061	1-126-947-11	ELECT 47uF 20%	25V
C062	1-126-960-11	ELECT 1uF 20%	50V
C063	1-126-960-11	ELECT 1uF 20%	50V
C097	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C103	1-163-275-11	CERAMIC CHIP 0.001uF	5% 50V
C104	1-163-275-11	CERAMIC CHIP 0.001uF	5% 50V
C105	1-126-961-11	ELECT 2.2uF 20%	50V
C106	1-126-961-11	ELECT 2.2uF 20%	50V
C109	1-126-964-11	ELECT 10uF 20%	50V
C110	1-126-964-11	ELECT 10uF 20%	50V
C111	1-162-927-11	CERAMIC CHIP 100PF	5% 50V (AEP, UK, CIS)
C112	1-162-927-11	CERAMIC CHIP 100PF	5% 50V (AEP, UK, CIS)
C113	1-126-966-11	ELECT 33uF 20%	50V
C114	1-126-966-11	ELECT 33uF 20%	50V
C115	1-163-139-00	CERAMIC CHIP 820PF	5% 50V
C116	1-163-139-00	CERAMIC CHIP 820PF	5% 50V
C117	1-100-152-11	CERAMIC CHIP 100PF	5% 100V



Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C118	1-100-152-11	CERAMIC CHIP	100PF 5% 100V	C301	1-164-647-11	CERAMIC CHIP	0.0012uF 10% 50V
C119	1-100-152-11	CERAMIC CHIP	100PF 5% 100V	C302	1-164-647-11	CERAMIC CHIP	0.0012uF 10% 50V
C120	1-100-152-11	CERAMIC CHIP	100PF 5% 100V	C303	1-164-647-11	CERAMIC CHIP	0.0012uF 10% 50V
C121	1-165-621-11	CERAMIC CHIP	0.1uF 50V	C304	1-164-647-11	CERAMIC CHIP	0.0012uF 10% 50V
C122	1-165-621-11	CERAMIC CHIP	0.1uF 50V	C305	1-162-962-11	CERAMIC CHIP	470PF 10% 50V
C125	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C306	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C126	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C311	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C127	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V				(US, CND)
C128	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V (AEP, UK, CIS, KR)	C312	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
			(AEP, UK, CIS, KR)				(US, CND)
C129	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V (AEP, UK, CIS, KR)	C313	1-162-962-11	CERAMIC CHIP	470PF 10% 50V
C130	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V (AEP, UK, CIS, KR)				(US, CND)
C131	1-162-927-11	CERAMIC CHIP	100PF 5% 50V (AEP, UK, CIS, KR)	C313	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V
C132	1-162-927-11	CERAMIC CHIP	100PF 5% 50V (AEP, UK, CIS, KR)				(EXCEPT US, CND)
C133	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V (AEP, UK, CIS, KR)	C314	1-162-962-11	CERAMIC CHIP	470PF 10% 50V
							(US, CND)
C134	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V (AEP, UK, CIS, KR)	C314	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V
C135	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V (AEP, UK, CIS, KR)				(EXCEPT US, CND)
C136	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V (AEP, UK, CIS, KR)	C315	1-130-487-00	MYLAR	0.022uF 5% 50V
C181	1-126-960-11	ELECT	1uF 20% 50V	C316	1-130-485-00	MYLAR	0.015uF 5% 50V
C182	1-126-960-11	ELECT	1uF 20% 50V				
C201	1-165-621-11	CERAMIC CHIP	0.1uF 50V	C317	1-130-479-00	MYLAR	0.0047uF 5% 50V
C202	1-165-621-11	CERAMIC CHIP	0.1uF 50V				(EXCEPT US, CND)
C203	1-165-621-11	CERAMIC CHIP	0.1uF 50V	C317	1-130-485-00	MYLAR	0.015uF 5% 50V
C204	1-165-621-11	CERAMIC CHIP	0.1uF 50V				(US, CND)
C205	1-100-158-91	CERAMIC CHIP	1000PF 5% 100V (US, CND, KR)	C318	1-130-479-00	MYLAR	0.0047uF 5% 50V
				C319	1-126-964-11	ELECT	10uF 20% 50V
C205	1-162-974-11	CERAMIC CHIP	0.01uF 50V (AEP, UK, CIS)	C320	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C206	1-100-158-91	CERAMIC CHIP	1000PF 5% 100V (US, CND, KR)	C321	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C206	1-162-974-11	CERAMIC CHIP	0.01uF 50V (AEP, UK, CIS)	C322	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C207	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V (US, CND, AEP, UK, CIS, KR)	C501	1-126-960-11	ELECT	1uF 20% 50V
C208	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V (US, CND, AEP, UK, CIS, KR)				(EXCEPT US, CND, AEP, UK, CIS)
C213	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V (EXCEPT AEP, UK, CIS)	C502	1-126-947-11	ELECT	47uF 20% 25V
C230	1-119-850-11	ELECT	10uF 20% 63V				(EXCEPT US, CND, AEP, UK, CIS)
C231	1-119-850-11	ELECT	10uF 20% 63V	C503	1-126-947-11	ELECT	47uF 20% 25V
C232	1-164-156-11	CERAMIC CHIP	0.1uF 25V				(EXCEPT US, CND, AEP, UK, CIS)
C239	1-165-621-11	CERAMIC CHIP	0.1uF 50V (AEP, UK, CIS, KR)	C601	1-162-923-11	CERAMIC CHIP	47PF 5% 50V
C240	1-165-621-11	CERAMIC CHIP	0.1uF 50V (AEP, UK, CIS, KR)	C602	1-162-923-11	CERAMIC CHIP	47PF 5% 50V
C241	1-125-891-11	CERAMIC CHIP	0.47uF 10% 10V	C603	1-104-665-11	ELECT	100uF 20% 10V
C243	1-165-621-11	CERAMIC CHIP	0.1uF 50V (AEP, UK, CIS, KR)	C604	1-104-665-11	ELECT	100uF 20% 10V
C244	1-165-621-11	CERAMIC CHIP	0.1uF 50V (AEP, UK, CIS, KR)	C605	1-130-481-00	MYLAR	0.0068uF 5% 50V
C281	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V	C606	1-130-481-00	MYLAR	0.0068uF 5% 50V
C282	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V	C607	1-162-962-11	CERAMIC CHIP	470PF 10% 50V
				C608	1-162-962-11	CERAMIC CHIP	470PF 10% 50V
				C609	1-126-960-11	ELECT	1uF 20% 50V
				C610	1-126-960-11	ELECT	1uF 20% 50V
				C611	1-164-739-11	CERAMIC CHIP	560PF 5% 50V
				C612	1-164-739-11	CERAMIC CHIP	560PF 5% 50V
				C613	1-162-967-11	CERAMIC CHIP	0.0033uF 10% 50V
				C614	1-162-967-11	CERAMIC CHIP	0.0033uF 10% 50V
				C621	1-164-218-11	CERAMIC CHIP	180PF 0.25PF 50V
				C622	1-164-218-11	CERAMIC CHIP	180PF 0.25PF 50V
				C623	1-113-503-11	CERAMIC CHIP	0.0039uF 5% 25V
							(EXCEPT US, CND)
				C623	1-164-479-11	CERAMIC CHIP	0.0056uF 10% 50V
							(US, CND)
				C624	1-113-503-11	CERAMIC CHIP	0.0039uF 5% 25V
							(EXCEPT US, CND)
				C624	1-164-479-11	CERAMIC CHIP	0.0056uF 10% 50V
							(US, CND)
				C625	1-164-174-11	CERAMIC CHIP	0.0082uF 10% 25V

MAIN

Ref. No.	Part No.	Description	Remark
C626	1-164-174-11	CERAMIC CHIP	0.0082uF 10% 25V
C629	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V (EXCEPT US, CND)
C630	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V (EXCEPT US, CND)
C641	1-126-957-11	ELECT	0.22uF 20% 50V
C642	1-126-957-11	ELECT	0.22uF 20% 50V
C643	1-126-957-11	ELECT	0.22uF 20% 50V
C644	1-126-957-11	ELECT	0.22uF 20% 50V
C645	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V
C646	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V
C647	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C649	1-126-963-11	ELECT	4.7uF 20% 50V
C651	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C652	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C653	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C654	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C655	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C661	1-126-934-11	ELECT	220uF 20% 10V
C662	1-126-947-11	ELECT	47uF 20% 25V
C663	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C664	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C668	1-162-927-11	CERAMIC CHIP	100PF 5% 50V (AEP, UK, CIS, KR)
C669	1-162-927-11	CERAMIC CHIP	100PF 5% 50V (AEP, UK, CIS, KR)
C670	1-162-927-11	CERAMIC CHIP	100PF 5% 50V (AEP, UK, CIS, KR)
C671	1-126-959-11	ELECT	0.47uF 20% 50V
C672	1-126-959-11	ELECT	0.47uF 20% 50V
C673	1-164-392-11	CERAMIC CHIP	390PF 5% 50V
C674	1-164-392-11	CERAMIC CHIP	390PF 5% 50V
C675	1-164-677-11	CERAMIC CHIP	0.033uF 10% 16V
C676	1-164-677-11	CERAMIC CHIP	0.033uF 10% 16V
C677	1-119-818-31	ELECT	0.33uF 20% 50V
C678	1-119-818-31	ELECT	0.33uF 20% 50V
C679	1-126-934-11	ELECT	220uF 20% 10V
C680	1-130-499-00	MYLAR	0.22uF 5% 50V
C681	1-130-499-00	MYLAR	0.22uF 5% 50V
C682	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C683	1-126-941-11	ELECT	470uF 20% 25V
C684	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C685	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V (AEP, UK, CIS, KR)
C686	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V (AEP, UK, CIS, KR)
C687	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C688	1-126-964-11	ELECT	10uF 20% 50V
C689	1-164-156-11	CERAMIC CHIP	0.1uF 25V (AEP, UK, CIS, KR)
C693	1-126-960-11	ELECT	1uF 20% 50V
C694	1-126-960-11	ELECT	1uF 20% 50V
C695	1-126-935-11	ELECT	470uF 20% 10V
C698	1-162-974-11	CERAMIC CHIP	0.01uF 50V (AEP, UK, CIS, KR)
C699	1-162-974-11	CERAMIC CHIP	0.01uF 50V (AEP, UK, CIS, KR)
C730	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C731	1-162-927-11	CERAMIC CHIP	100PF 5% 50V

Ref. No.	Part No.	Description	Remark
C732	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C733	1-164-156-11	CERAMIC CHIP	0.1uF 25V (AEP, UK, CIS, KR)
C734	1-164-156-11	CERAMIC CHIP	0.1uF 25V (AEP, UK, CIS, KR)
C764	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V
C765	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V
C766	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V
C767	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V
C801	1-126-964-11	ELECT	10uF 20% 50V (AEP, UK)
C802	1-164-156-11	CERAMIC CHIP	0.1uF 25V (AEP, UK)
C901	1-127-876-11	CERAMIC	0.01uF 10% 50V (AEP, UK, CIS, KR)
C902	1-127-876-11	CERAMIC	0.01uF 10% 50V (AEP, UK, CIS, KR)
C903	1-127-888-11	CERAMIC	0.1uF 10% 50V (AEP, UK, CIS, KR)
C904	1-127-888-11	CERAMIC	0.1uF 10% 50V (AEP, UK, CIS, KR)
C905	1-127-888-11	CERAMIC	0.1uF 10% 50V (AEP, UK, CIS, KR)
< CONNECTOR >			
* CN301	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P	
* CN302	1-564-710-11	PIN, CONNECTOR (SMALL TYPE) 8P	
* CN503	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P (EXCEPT US, CND, AEP, UK, CIS)	
CN601	1-793-766-11	CONNECTOR, BOARD TO BOARD 30P	
CN691	1-784-780-11	CONNECTOR, FFC 19P	
CN694	1-568-830-11	CONNECTOR, FFC 11P	
CN801	1-568-830-11	CONNECTOR, FFC 11P (EXCEPT AEP, UK)	
CN802	1-784-776-11	CONNECTOR, FFC 15P (AEP, UK)	
< DIODE/SHORT >			
D009	8-719-072-05	DIODE	D5SBA20-4003
D010	8-719-500-56	DIODE	D3SBA20
D019	8-719-048-61	DIODE	EGP20DL-6349
D020	8-719-048-61	DIODE	EGP20DL-6349
D021	8-719-048-61	DIODE	EGP20DL-6349
D022	8-719-048-61	DIODE	EGP20DL-6349
D031	8-719-991-34	DIODE	1SS133T-72
D032	8-719-988-61	DIODE	1SS355TE-17
D033	8-719-988-61	DIODE	1SS355TE-17
D041	6-500-522-21	DIODE	10EDB40-TB3 (AEP, UK, CIS)
D042	6-500-522-21	DIODE	10EDB40-TB3 (AEP, UK, CIS)
D043	6-500-522-21	DIODE	10EDB40-TB3 (AEP, UK, CIS)
D044	6-500-522-21	DIODE	10EDB40-TB3 (AEP, UK, CIS)
D045	8-719-083-87	DIODE	UDZS-TE17-33B
D063	8-719-820-05	DIODE	1SS181-TE85L
D064	8-719-801-78	DIODE	1SS184-TE85L
D065	8-719-988-61	DIODE	1SS355TE-17
D066	8-719-988-61	DIODE	1SS355TE-17
D067	8-719-801-78	DIODE	1SS184-TE85L
D068	8-719-820-05	DIODE	1SS181-TE85L
D069	8-719-988-61	DIODE	1SS355TE-17
D101	8-719-820-05	DIODE	1SS181-TE85L
D103	8-719-988-61	DIODE	1SS355TE-17
D104	8-719-988-61	DIODE	1SS355TE-17

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
D105	8-719-820-05	DIODE 1SS181-TE85L				< SHORT >	
D106	8-719-820-05	DIODE 1SS181-TE85L		JR001	1-216-864-11	SHORT CHIP	0
D107	8-719-801-78	DIODE 1SS184-TE85L		JR201	1-216-864-11	SHORT CHIP	0
D108	8-719-801-78	DIODE 1SS184-TE85L		JR202	1-216-864-11	SHORT CHIP	0
D109	8-719-046-74	DIODE AU-01Z-WS		JR203	1-216-864-11	SHORT CHIP	0
D110	8-719-046-74	DIODE AU-01Z-WS		JR204	1-216-864-11	SHORT CHIP	0
D111	8-719-801-78	DIODE 1SS184-TE85L		JR205	1-216-864-11	SHORT CHIP	0
D201	8-719-988-61	DIODE 1SS355TE-17 (EXCEPT AEP, UK, CIS)		JR601	1-216-864-11	SHORT CHIP	0 (EXCEPT US, CND, AEP, UK, CIS)
D231	8-719-988-61	DIODE 1SS355TE-17		JR602	1-216-864-11	SHORT CHIP	0 (US, CND, AEP, UK, CIS)
D232	8-719-977-28	DIODE UDZSTE-1710B		JR603	1-216-864-11	SHORT CHIP	0
D235	8-719-059-21	DIODE RK46LF-T2		JR604	1-216-864-11	SHORT CHIP	0
D236	8-719-059-21	DIODE RK46LF-T2		JR605	1-216-864-11	SHORT CHIP	0
D239	8-719-069-55	DIODE UDZSTE-175.6B		JR606	1-216-864-11	SHORT CHIP	0
D240	8-719-069-55	DIODE UDZSTE-175.6B		JR607	1-216-864-11	SHORT CHIP	0
D241	8-719-988-61	DIODE 1SS355TE-17		JR608	1-216-864-11	SHORT CHIP	0
D242	1-216-295-00	SHORT CHIP 0		JR611	1-216-296-11	SHORT CHIP	0 (US, CND, AEP, UK, CIS)
D243	8-719-801-78	DIODE 1SS184-TE85L		JR612	1-216-864-11	SHORT CHIP	0
D244	8-719-820-05	DIODE 1SS181-TE85L		JR615	1-216-864-11	SHORT CHIP	0
D281	8-719-801-78	DIODE 1SS184-TE85L		JR616	1-216-864-11	SHORT CHIP	0
D291	8-719-820-05	DIODE 1SS181-TE85L		JR618	1-216-864-11	SHORT CHIP	0
D292	8-719-801-78	DIODE 1SS184-TE85L		JR619	1-216-864-11	SHORT CHIP	0
D301	8-719-820-05	DIODE 1SS181-TE85L		JR620	1-216-864-11	SHORT CHIP	0
D501	8-719-801-78	DIODE 1SS184-TE85L (EXCEPT US, CND, AEP, UK, CIS)		JR621	1-216-864-11	SHORT CHIP	0
D661	8-719-083-60	DIODE UDZSTE-174.7B		JR622	1-216-864-11	SHORT CHIP	0
D662	8-719-083-60	DIODE UDZSTE-174.7B		JR625	1-216-296-11	SHORT CHIP	0 (AEP, UK, CIS, KR)
D663	8-719-988-61	DIODE 1SS355TE-17		JR651	1-216-296-11	SHORT CHIP	0
D671	8-719-988-61	DIODE 1SS355TE-17		JR701	1-216-864-11	SHORT CHIP	0
D691	6-500-522-21	DIODE 10EDB40-TB3		JR702	1-216-864-11	SHORT CHIP	0
D692	6-500-522-21	DIODE 10EDB40-TB3		JR801	1-216-864-11	SHORT CHIP	0 (EXCEPT AEP, UK)
D693	6-500-522-21	DIODE 10EDB40-TB3				< DIODE >	
D694	6-500-522-21	DIODE 10EDB40-TB3		JW690	6-500-522-21	DIODE 10EDB40-TB3	
D695	8-719-988-61	DIODE 1SS355TE-17				< COIL >	
D697	6-500-522-21	DIODE 10EDB40-TB3		L201	1-422-009-13	COIL, AIR-CORE	
D698	8-719-991-34	DIODE 1SS133T-72		L202	1-422-009-13	COIL, AIR-CORE	
D801	8-719-069-54	DIODE UDZSTE-175.1B (AEP, UK)		L311	1-424-849-11	COIL, OSCILLATION (BIAS) (US, CND)	
		< GROUND TERMINAL >		L311	1-437-220-11	TRANSFORMER, BIAS OSCILLATION (EXCEPT US, CND)	
* EP001	1-537-738-21	TERMINAL, EARTH		L901	1-410-501-11	INDUCTOR	2.2uH (AEP, UK, CIS, KR)
* EP099	1-537-738-21	TERMINAL, EARTH				< TRANSISTOR >	
		< FERRITE BEAD/SHORT >		Q022	8-729-120-28	TRANSISTOR	2SC3052EF-T1-LEF
FB601	1-216-295-00	SHORT CHIP 0		Q023	8-729-201-53	TRANSISTOR	2SA1015TP-GR
FB602	1-216-295-00	SHORT CHIP 0		Q024	8-729-120-28	TRANSISTOR	2SC3052EF-T1-LEF
FB693	1-410-396-71	INDUCTOR 0.45uH		Q041	8-729-201-53	TRANSISTOR	2SA1015TP-GR
		< IC >		Q043	8-729-201-53	TRANSISTOR	2SA1015TP-GR
IC001	8-759-701-59	IC TA7809S		Q044	8-729-600-22	TRANSISTOR	2SA1235TP-1EF (EXCEPT AEP, UK, CIS)
IC002	8-759-701-59	IC TA7809S		Q045	8-729-120-28	TRANSISTOR	2SC3052EF-T1-LEF
IC003	6-701-760-01	IC uPC3504AHF		Q046	8-729-120-28	TRANSISTOR	2SC3052EF-T1-LEF
IC601	6-702-895-01	IC BD3881FV		Q047	8-729-120-28	TRANSISTOR	2SC3052EF-T1-LEF
IC671	6-704-074-01	IC NJM2156M (TE2)		Q063	8-729-600-22	TRANSISTOR	2SA1235TP-1EF
IC672	8-759-396-78	IC BU2092F-E2		Q064	8-729-120-28	TRANSISTOR	2SC3052EF-T1-LEF
		< JACK >		Q101	8-729-216-31	TRANSISTOR	2SA1163G-TE85L
J203	1-694-635-12	TERMINAL BOARD (4P) (SPEAKER)		Q102	8-729-216-31	TRANSISTOR	2SA1163G-TE85L
J602	1-793-987-11	JACK, PIN 2P (VIDEO/AUX)					

**MAIN**

Ref. No.	Part No.	Description	Remark
Q103	8-729-216-31	TRANSISTOR	2SA1163G-TE85L
Q104	8-729-216-31	TRANSISTOR	2SA1163G-TE85L
Q105	8-729-120-28	TRANSISTOR	2SC3052EF-T1-LEF
Q106	8-729-120-28	TRANSISTOR	2SC3052EF-T1-LEF
Q107	8-729-120-28	TRANSISTOR	2SC3052EF-T1-LEF
Q108	8-729-120-28	TRANSISTOR	2SC3052EF-T1-LEF
Q109	8-729-271-31	TRANSISTOR	2SC2713G-TE85L
Q110	8-729-271-31	TRANSISTOR	2SC2713G-TE85L
Q111	8-729-255-12	TRANSISTOR	2SC2910S-TP (EXCEPT AEP, UK, CIS)
Q111	8-729-823-99	TRANSISTOR	2SC2909-AA (AEP, UK, CIS)
Q112	8-729-255-12	TRANSISTOR	2SC2910S-TP (EXCEPT AEP, UK, CIS)
Q112	8-729-823-99	TRANSISTOR	2SC2909-AA (AEP, UK, CIS)
Q117	8-729-120-28	TRANSISTOR	2SC3052EF-T1-LEF
Q118	8-729-120-28	TRANSISTOR	2SC3052EF-T1-LEF
Q119	8-729-120-28	TRANSISTOR	2SC3052EF-T1-LEF
Q120	8-729-120-28	TRANSISTOR	2SC3052EF-T1-LEF
Q121	6-550-309-01	TRANSISTOR	2SB1686 (AEP, UK, CIS)
Q122	6-550-309-01	TRANSISTOR	2SB1686 (AEP, UK, CIS)
Q123	6-550-311-01	TRANSISTOR	2SD2642 (AEP, UK, CIS)
Q124	6-550-311-01	TRANSISTOR	2SD2642 (AEP, UK, CIS)
Q125	6-550-292-01	TRANSISTOR	FP1016 (EXCEPT AEP, UK, CIS)
Q126	6-550-292-01	TRANSISTOR	FP1016 (EXCEPT AEP, UK, CIS)
Q127	6-550-291-01	TRANSISTOR	FN1016 (EXCEPT AEP, UK, CIS)
Q128	6-550-291-01	TRANSISTOR	FN1016 (EXCEPT AEP, UK, CIS)
Q129	8-729-216-31	TRANSISTOR	2SA1163G-TE85L
Q130	8-729-216-31	TRANSISTOR	2SA1163G-TE85L
Q181	8-729-052-79	TRANSISTOR	2SD1306NETL
Q182	8-729-052-79	TRANSISTOR	2SD1306NETL
Q183	8-729-600-22	TRANSISTOR	2SA1235TP-1EF
Q201	8-729-120-28	TRANSISTOR	2SC3052EF-T1-LEF (EXCEPT AEP, UK, CIS)
Q231	6-550-293-01	FET	2SK2937
Q232	6-550-293-01	FET	2SK2937
Q233	8-729-600-22	TRANSISTOR	2SA1235TP-1EF
Q234	8-729-120-28	TRANSISTOR	2SC3052EF-T1-LEF
Q235	8-729-600-22	TRANSISTOR	2SA1235TP-1EF
Q281	8-729-216-31	TRANSISTOR	2SA1163G-TE85L
Q282	8-729-271-31	TRANSISTOR	2SC2713G-TE85L
Q291	8-729-027-23	TRANSISTOR	DTA114EKA-T146
Q292	8-729-216-31	TRANSISTOR	2SA1163G-TE85L
Q301	6-550-290-01	FET	2SJ460
Q302	6-550-290-01	FET	2SJ460
Q303	8-729-048-99	FET	2SK2541-T
Q304	8-729-048-99	FET	2SK2541-T
Q305	6-550-290-01	FET	2SJ460
Q306	6-550-290-01	FET	2SJ460
Q307	8-729-048-99	FET	2SK2541-T
Q308	8-729-048-99	FET	2SK2541-T
Q309	8-729-048-99	FET	2SK2541-T
Q310	8-729-011-92	TRANSISTOR	2SC2001TP-K1K2
Q311	8-729-201-53	TRANSISTOR	2SA1015TP-GR
Q312	8-729-120-28	TRANSISTOR	2SC3052EF-T1-LEF

Ref. No.	Part No.	Description	Remark
Q501	8-729-120-28	TRANSISTOR	2SC3052EF-T1-LEF (EXCEPT US, CND, AEP, UK, CIS)
Q503	8-729-195-23	TRANSISTOR	2SA952TP-K1K2 (EXCEPT US, CND, AEP, UK, CIS)
Q601	8-729-027-23	TRANSISTOR	DTA114EKA-T146
Q641	8-729-045-62	FET	2SK2158-T2B
Q642	8-729-045-62	FET	2SK2158-T2B
Q643	8-729-120-28	TRANSISTOR	2SC3052EF-T1-LEF
Q671	8-729-045-62	FET	2SK2158-T2B
Q672	8-729-045-62	FET	2SK2158-T2B
Q673	8-729-045-62	FET	2SK2158-T2B
Q674	8-729-045-62	FET	2SK2158-T2B
Q675	8-729-045-62	FET	2SK2158-T2B
Q676	8-729-045-62	FET	2SK2158-T2B
Q677	8-729-045-62	FET	2SK2158-T2B
< RESISTOR >			
R001	1-216-134-00	METAL CHIP	2.2 5% 1/8W (US, CND, AEP, UK, CIS)
R001	1-219-397-11	RES-CHIP	1.8 5% 1/8W (EXCEPT US, CND, AEP, UK, CIS)
R004	1-216-134-00	METAL CHIP	2.2 5% 1/8W (US, CND, AEP, UK, CIS)
R004	1-219-397-11	RES-CHIP	1.8 5% 1/8W (EXCEPT US, CND, AEP, UK, CIS)
R005	1-216-134-00	METAL CHIP	2.2 5% 1/8W (US, CND, AEP, UK, CIS)
R005	1-219-397-11	RES-CHIP	1.8 5% 1/8 (EXCEPT US, CND, AEP, UK, CIS)
R008	1-216-134-00	METAL CHIP	2.2 5% 1/8W (US, CND, AEP, UK, CIS)
R008	1-219-397-11	RES-CHIP	1.8 5% 1/8 (EXCEPT US, CND, AEP, UK, CIS)
R009	1-216-234-00	RES-CHIP	33K 5% 1/8W
R010	1-216-234-00	RES-CHIP	33K 5% 1/8W
R011	1-216-234-00	RES-CHIP	33K 5% 1/8W
R012	1-216-234-00	RES-CHIP	33K 5% 1/8W
R013	1-216-234-00	RES-CHIP	33K 5% 1/8W
R014	1-216-234-00	RES-CHIP	33K 5% 1/8W
R015	1-216-234-00	RES-CHIP	33K 5% 1/8W (AEP, UK, CIS)
R016	1-216-234-00	RES-CHIP	33K 5% 1/8W (AEP, UK, CIS)
△R017	1-219-121-11	FUSIBLE	0.22 5% 1/4W (EXCEPT AEP, UK, CIS)
△R017	1-219-122-91	FUSIBLE	0.33 5% 1/4W (AEP, UK, CIS)
R024	1-216-184-00	RES-CHIP	270 5% 1/8W
R025	1-216-184-00	RES-CHIP	270 5% 1/8W
R026	1-216-188-00	RES-CHIP	390 5% 1/8W (AEP, UK, CIS)
R026	1-216-190-00	RES-CHIP	470 5% 1/8W (EXCEPT AEP, UK, CIS)
R027	1-216-188-00	RES-CHIP	390 5% 1/8W (AEP, UK, CIS)
R027	1-216-190-00	RES-CHIP	470 5% 1/8W (EXCEPT AEP, UK, CIS)
R028	1-216-190-00	RES-CHIP	470 5% 1/8W
R029	1-216-188-00	RES-CHIP	390 5% 1/8W (AEP, UK, CIS)

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R029	1-216-190-00	RES-CHIP	470 5% 1/8W (EXCEPT AEP, UK, CIS)	R080	1-216-845-11	METAL CHIP	100K 5% 1/10W
R030	1-216-188-00	RES-CHIP	390 5% 1/8W (AEP, UK, CIS)	R082	1-216-840-11	METAL CHIP	39K 5% 1/10W
R030	1-216-190-00	RES-CHIP	470 5% 1/8W (EXCEPT AEP, UK, CIS)	R083	1-216-840-11	METAL CHIP	39K 5% 1/10W
R031	1-216-833-11	METAL CHIP	10K 5% 1/10W	R084	1-216-843-11	METAL CHIP	68K 5% 1/10W (AEP, UK, CIS)
R032	1-216-841-11	METAL CHIP	47K 5% 1/10W	R084	1-216-844-11	METAL CHIP	82K 5% 1/10W (EXCEPT AEP, UK, CIS)
R033	1-216-843-11	METAL CHIP	68K 5% 1/10W	R085	1-216-843-11	METAL CHIP	68K 5% 1/10W (AEP, UK, CIS)
R035	1-216-832-11	METAL CHIP	8.2K 5% 1/10W	R085	1-216-844-11	METAL CHIP	82K 5% 1/10W (EXCEPT AEP, UK, CIS)
R036	1-216-836-11	METAL CHIP	18K 5% 1/10W	R086	1-216-833-11	METAL CHIP	10K 5% 1/10W
R038	1-216-296-11	SHORT CHIP	0	R087	1-216-833-11	METAL CHIP	10K 5% 1/10W
R041	1-216-845-11	METAL CHIP	100K 5% 1/10W (AEP, UK, CIS)	R092	1-216-809-11	METAL CHIP	100 5% 1/10W
R042	1-216-845-11	METAL CHIP	100K 5% 1/10W (AEP, UK, CIS)	R093	1-216-835-11	METAL CHIP	15K 5% 1/10W
R043	1-216-845-11	METAL CHIP	100K 5% 1/10W (AEP, UK, CIS)	R094	1-216-833-11	METAL CHIP	10K 5% 1/10W
R044	1-216-845-11	METAL CHIP	100K 5% 1/10W (AEP, UK, CIS)	R095	1-216-835-11	METAL CHIP	15K 5% 1/10W
R045	1-216-174-00	RES-CHIP	100 5% 1/8W (E, E51, SP, TW, AUS)	R096	1-216-839-11	METAL CHIP	33K 5% 1/10W
R045	1-216-182-00	RES-CHIP	220 5% 1/8W (US, CND)	R097	1-216-839-11	METAL CHIP	33K 5% 1/10W
R045	1-216-184-00	RES-CHIP	270 5% 1/8W (AEP, UK, CIS)	R105	1-216-837-11	METAL CHIP	22K 5% 1/10W
R045	1-216-296-11	SHORT CHIP	0 (MX, KR)	R106	1-216-837-11	METAL CHIP	22K 5% 1/10W
R046	1-216-065-00	RES-CHIP	4.7K 5% 1/10W	R107	1-216-838-11	METAL CHIP	27K 5% 1/10W
R047	1-216-061-00	RES-CHIP	3.3K 5% 1/10W (AEP, UK, CIS, E51, MX)	R108	1-216-838-11	METAL CHIP	27K 5% 1/10W
R047	1-216-065-00	RES-CHIP	4.7K 5% 1/10W (EXCEPT AEP, UK, CIS, E51, MX)	R109	1-216-809-11	METAL CHIP	100 5% 1/10W
R048	1-216-295-00	SHORT CHIP	0	R110	1-216-809-11	METAL CHIP	100 5% 1/10W
R049	1-216-065-00	RES-CHIP	4.7K 5% 1/10W	R113	1-216-820-11	METAL CHIP	820 5% 1/10W (US, CND)
R050	1-216-001-00	METAL CHIP	10 5% 1/10W	R113	1-216-821-11	METAL CHIP	1K 5% 1/10W (EXCEPT US, CND)
R051	1-216-097-11	RES-CHIP	100K 5% 1/10W	R114	1-216-820-11	METAL CHIP	820 5% 1/10W (US, CND)
R061	1-216-234-00	RES-CHIP	33K 5% 1/8W (EXCEPT AEP, UK, CIS)	R114	1-216-821-11	METAL CHIP	1K 5% 1/10W (EXCEPT US, CND)
R062	1-216-234-00	RES-CHIP	33K 5% 1/8W (EXCEPT AEP, UK, CIS)	R115	1-216-083-00	METAL CHIP	27K 5% 1/10W
R063	1-216-234-00	RES-CHIP	33K 5% 1/8W (EXCEPT AEP, UK, CIS)	R116	1-216-083-00	METAL CHIP	27K 5% 1/10W
R064	1-216-234-00	RES-CHIP	33K 5% 1/8W (EXCEPT AEP, UK, CIS)	R117	1-216-206-00	RES-CHIP	2.2K 5% 1/8W
R067	1-216-840-11	METAL CHIP	39K 5% 1/10W	R118	1-216-206-00	RES-CHIP	2.2K 5% 1/8W
R068	1-216-840-11	METAL CHIP	39K 5% 1/10W	R119	1-216-206-00	RES-CHIP	2.2K 5% 1/8W
R069	1-216-830-11	METAL CHIP	5.6K 5% 1/10W	R120	1-216-206-00	RES-CHIP	2.2K 5% 1/8W
R070	1-216-838-11	METAL CHIP	27K 5% 1/10W	R121	1-216-198-00	RES-CHIP	1K 5% 1/8W
R071	1-216-838-11	METAL CHIP	27K 5% 1/10W	R122	1-216-198-00	RES-CHIP	1K 5% 1/8W
R072	1-216-830-11	METAL CHIP	5.6K 5% 1/10W	R123	1-218-867-11	METAL CHIP	6.8K 5% 1/10W
R073	1-216-838-11	METAL CHIP	27K 5% 1/10W	R124	1-218-867-11	METAL CHIP	6.8K 5% 1/10W
R074	1-216-838-11	METAL CHIP	27K 5% 1/10W	R125	1-216-823-11	METAL CHIP	1.5K 5% 1/10W
R075	1-216-830-11	METAL CHIP	5.6K 5% 1/10W	R126	1-216-823-11	METAL CHIP	1.5K 5% 1/10W
R076	1-216-821-11	METAL CHIP	1K 5% 1/10W	R127	1-216-809-11	METAL CHIP	100 5% 1/10W
R077	1-216-821-11	METAL CHIP	1K 5% 1/10W	R128	1-216-809-11	METAL CHIP	100 5% 1/10W
R078	1-216-834-11	METAL CHIP	12K 5% 1/10W (EXCEPT US, CND, AEP, UK, CIS)	R129	1-216-809-11	METAL CHIP	100 5% 1/10W
R078	1-216-864-11	SHORT CHIP	0 (US, CND, AEP, UK, CIS)	R130	1-216-809-11	METAL CHIP	100 5% 1/10W
R079	1-216-834-11	METAL CHIP	12K 5% 1/10W (EXCEPT US, CND, AEP, UK, CIS)	R131	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R079	1-216-864-11	SHORT CHIP	0 (US, CND, AEP, UK, CIS)	R132	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
				R133	1-216-824-11	METAL CHIP	1.8K 5% 1/10W
				R134	1-216-824-11	METAL CHIP	1.8K 5% 1/10W
				R137	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
				R138	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
				R139	1-216-841-11	METAL CHIP	47K 5% 1/10W
				R140	1-216-841-11	METAL CHIP	47K 5% 1/10W
				R141	1-216-821-11	METAL CHIP	1K 5% 1/10W
				R142	1-216-821-11	METAL CHIP	1K 5% 1/10W

**MAIN**

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R143	1-216-804-11	METAL CHIP	39	5%	1/10W	R241	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R144	1-216-804-11	METAL CHIP	39	5%	1/10W	R242	1-216-073-00	RES-CHIP	10K	5%	1/10W
R147	1-216-864-11	SHORT CHIP	0			R243	1-216-049-11	RES-CHIP	1K	5%	1/10W
R148	1-216-864-11	SHORT CHIP	0			R244	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
△R149	1-216-361-31	METAL OXIDE	0.22	5%	2W F	R246	1-216-214-00	RES-CHIP	4.7K	5%	1/8W
△R150	1-216-361-31	METAL OXIDE	0.22	5%	2W F	R248	1-216-214-00	RES-CHIP	4.7K	5%	1/8W
△R151	1-216-361-31	METAL OXIDE	0.22	5%	2W F	R249	1-216-214-00	RES-CHIP	4.7K	5%	1/8W
△R152	1-216-361-31	METAL OXIDE	0.22	5%	2W F	R250	1-216-214-00	RES-CHIP	4.7K	5%	1/8W
R153	1-216-824-11	METAL CHIP	1.8K	5%	1/10W (EXCEPT AEP, UK, CIS)	R252	1-216-833-11	METAL CHIP	10K	5%	1/10W
R153	1-216-826-11	METAL CHIP	2.7K	5%	1/10W (AEP, UK, CIS)	R253	1-216-833-11	METAL CHIP	10K	5%	1/10W
R154	1-216-824-11	METAL CHIP	1.8K	5%	1/10W (EXCEPT AEP, UK, CIS)	R257	1-216-841-11	METAL CHIP	47K	5%	1/10W
R154	1-216-826-11	METAL CHIP	2.7K	5%	1/10W (AEP, UK, CIS)	R258	1-216-841-11	METAL CHIP	47K	5%	1/10W
R155	1-216-823-11	METAL CHIP	1.5K	5%	1/10W (AEP, UK, CIS)	R259	1-216-841-11	METAL CHIP	47K	5%	1/10W
R155	1-216-825-11	METAL CHIP	2.2K	5%	1/10W (EXCEPT AEP, UK, CIS)	R260	1-216-841-11	METAL CHIP	47K	5%	1/10W
R156	1-216-823-11	METAL CHIP	1.5K	5%	1/10W (AEP, UK, CIS)	R261	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R156	1-216-825-11	METAL CHIP	2.2K	5%	1/10W (EXCEPT AEP, UK, CIS)	R262	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R157	1-216-809-11	METAL CHIP	100	5%	1/10W	R263	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R158	1-216-809-11	METAL CHIP	100	5%	1/10W	R264	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R159	1-216-049-11	RES-CHIP	1K	5%	1/10W	R280	1-216-073-00	RES-CHIP	10K	5%	1/10W
R160	1-216-049-11	RES-CHIP	1K	5%	1/10W	R281	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R161	1-216-832-11	METAL CHIP	8.2K	5%	1/10W (EXCEPT AEP, UK, CIS)	R282	1-216-834-11	METAL CHIP	12K	5%	1/10W
R161	1-218-867-11	METAL CHIP	6.8K	5%	1/10W (AEP, UK, CIS)	R283	1-216-836-11	METAL CHIP	18K	5%	1/10W
R162	1-216-832-11	METAL CHIP	8.2K	5%	1/10W (EXCEPT AEP, UK, CIS)	R284	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R162	1-218-867-11	METAL CHIP	6.8K	5%	1/10W (AEP, UK, CIS)	R290	1-216-841-11	METAL CHIP	47K	5%	1/10W
R181	1-216-834-11	METAL CHIP	12K	5%	1/10W	R291	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R182	1-216-834-11	METAL CHIP	12K	5%	1/10W	R292	1-216-833-11	METAL CHIP	10K	5%	1/10W
R183	1-216-828-11	METAL CHIP	3.9K	5%	1/10W	R293	1-216-846-11	METAL CHIP	120K	5%	1/10W
R184	1-216-828-11	METAL CHIP	3.9K	5%	1/10W	R294	1-216-846-11	METAL CHIP	120K	5%	1/10W
R185	1-216-843-11	METAL CHIP	68K	5%	1/10W	R295	1-216-837-11	METAL CHIP	22K	5%	1/10W (US, CND)
R186	1-216-841-11	METAL CHIP	47K	5%	1/10W	R295	1-216-841-11	METAL CHIP	47K	5%	1/10W (EXCEPT US, CND)
R201	1-249-393-11	CARBON	10	5%	1/4W	R296	1-216-841-11	METAL CHIP	47K	5%	1/10W
R202	1-249-393-11	CARBON	10	5%	1/4W	R297	1-216-841-11	METAL CHIP	47K	5%	1/10W
R203	1-216-150-11	RES-CHIP	10	5%	1/8W	R301	1-216-840-11	METAL CHIP	39K	5%	1/10W
R204	1-216-150-11	RES-CHIP	10	5%	1/8W	R302	1-216-840-11	METAL CHIP	39K	5%	1/10W
R208	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (EXCEPT AEP, UK, CIS)	R303	1-216-844-11	METAL CHIP	82K	5%	1/10W
R209	1-216-841-11	METAL CHIP	47K	5%	1/10W (EXCEPT AEP, UK, CIS)	R304	1-216-844-11	METAL CHIP	82K	5%	1/10W
R210	1-216-156-00	RES-CHIP	18	5%	1/8W (EXCEPT AEP, UK, CIS)	R305	1-216-849-11	METAL CHIP	220K	5%	1/10W
R211	1-216-296-11	SHORT CHIP	0		(EXCEPT AEP, UK, CIS)	R311	1-216-833-11	METAL CHIP	10K	5%	1/10W (US, CND)
R212	1-216-296-11	SHORT CHIP	0		(EXCEPT AEP, UK, CIS)	R311	1-216-835-11	METAL CHIP	15K	5%	1/10W (EXCEPT US, CND)
R213	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (EXCEPT AEP, UK, CIS)	R312	1-216-833-11	METAL CHIP	10K	5%	1/10W (US, CND)
R236	1-216-861-11	METAL CHIP	2.2M	5%	1/10W	R312	1-216-835-11	METAL CHIP	15K	5%	1/10W (EXCEPT US, CND)
R237	1-216-049-11	RES-CHIP	1K	5%	1/10W	R313	1-216-837-11	METAL CHIP	22K	5%	1/10W (EXCEPT US, CND)
R238	1-216-206-00	RES-CHIP	2.2K	5%	1/8W	R313	1-216-838-11	METAL CHIP	27K	5%	1/10W (US, CND)
R239	1-216-206-00	RES-CHIP	2.2K	5%	1/8W	R314	1-216-797-11	METAL CHIP	10	5%	1/10W
						R315	1-216-804-11	METAL CHIP	39	5%	1/10W (US, CND)
						R315	1-216-808-11	METAL CHIP	82	5%	1/10W (EXCEPT US, CND)
						R316	1-216-833-11	METAL CHIP	10K	5%	1/10W
						R317	1-216-821-11	METAL CHIP	1K	5%	1/10W
						R318	1-216-829-11	METAL CHIP	4.7K	5%	1/10W

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R501	1-216-841-11	METAL CHIP	47K 5% 1/10W (EXCEPT US, CND, AEP, UK, CIS)	R633	1-216-824-11	METAL CHIP	1.8K 5% 1/10W (EXCEPT US, CND)
R502	1-216-849-11	METAL CHIP	220K 5% 1/10W (EXCEPT US, CND, AEP, UK, CIS)	R633	1-216-827-11	METAL CHIP	3.3K 5% 1/10W (US, CND)
R503	1-216-832-11	METAL CHIP	8.2K 5% 1/10W (EXCEPT US, CND, AEP, UK, CIS)	R634	1-216-824-11	METAL CHIP	1.8K 5% 1/10W (EXCEPT US, CND)
R504	1-216-825-11	METAL CHIP	2.2K 5% 1/10W (EXCEPT US, CND, AEP, UK, CIS)	R634	1-216-827-11	METAL CHIP	3.3K 5% 1/10W (US, CND)
R505	1-216-827-11	METAL CHIP	3.3K 5% 1/10W (EXCEPT US, CND, AEP, UK, CIS)	R635	1-216-819-11	METAL CHIP	680 5% 1/10W (EXCEPT US, CND)
R506	1-216-833-11	METAL CHIP	10K 5% 1/10W (EXCEPT US, CND, AEP, UK, CIS)	R635	1-216-822-11	METAL CHIP	1.2K 5% 1/10W (US, CND)
R507	1-216-864-11	SHORT CHIP	0 (EXCEPT US, CND, AEP, UK, CIS)	R636	1-216-819-11	METAL CHIP	680 5% 1/10W (EXCEPT US, CND)
R511	1-216-829-11	METAL CHIP	4.7K 5% 1/10W (EXCEPT US, CND, AEP, UK, CIS)	R636	1-216-822-11	METAL CHIP	1.2K 5% 1/10W (US, CND)
R512	1-216-829-11	METAL CHIP	4.7K 5% 1/10W (EXCEPT US, CND, AEP, UK, CIS)	R637	1-216-815-11	METAL CHIP	330 5% 1/10W
R601	1-216-809-11	METAL CHIP	100 5% 1/10W	R638	1-216-815-11	METAL CHIP	330 5% 1/10W
R602	1-216-809-11	METAL CHIP	100 5% 1/10W	R643	1-216-827-11	METAL CHIP	3.3K 5% 1/10W
R603	1-216-852-11	METAL CHIP	390K 5% 1/10W	R644	1-216-827-11	METAL CHIP	3.3K 5% 1/10W
R604	1-216-852-11	METAL CHIP	390K 5% 1/10W	R645	1-216-850-11	METAL CHIP	270K 5% 1/10W
R605	1-216-822-11	METAL CHIP	1.2K 5% 1/10W	R646	1-216-850-11	METAL CHIP	270K 5% 1/10W
R606	1-216-822-11	METAL CHIP	1.2K 5% 1/10W	R647	1-216-850-11	METAL CHIP	270K 5% 1/10W
R607	1-216-845-11	METAL CHIP	100K 5% 1/10W	R648	1-216-852-11	METAL CHIP	390K 5% 1/10W
R608	1-216-845-11	METAL CHIP	100K 5% 1/10W	R649	1-216-852-11	METAL CHIP	390K 5% 1/10W
R609	1-216-836-11	METAL CHIP	18K 5% 1/10W	R651	1-216-809-11	METAL CHIP	100 5% 1/10W
R610	1-216-836-11	METAL CHIP	18K 5% 1/10W	R652	1-216-809-11	METAL CHIP	100 5% 1/10W
R611	1-216-829-11	METAL CHIP	4.7K 5% 1/10W	R653	1-216-837-11	METAL CHIP	22K 5% 1/10W
R612	1-216-829-11	METAL CHIP	4.7K 5% 1/10W	R654	1-216-837-11	METAL CHIP	22K 5% 1/10W
R615	1-216-835-11	METAL CHIP	15K 5% 1/10W	R655	1-216-837-11	METAL CHIP	22K 5% 1/10W
R616	1-216-835-11	METAL CHIP	15K 5% 1/10W	R656	1-216-837-11	METAL CHIP	22K 5% 1/10W
R617	1-216-835-11	METAL CHIP	15K 5% 1/10W	R657	1-216-842-11	METAL CHIP	56K 5% 1/10W (EXCEPT US, CND, AEP, UK, CIS)
R618	1-216-835-11	METAL CHIP	15K 5% 1/10W	R658	1-216-837-11	METAL CHIP	22K 5% 1/10W
R619	1-216-838-11	METAL CHIP	27K 5% 1/10W	R659	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
R620	1-216-838-11	METAL CHIP	27K 5% 1/10W	R661	1-216-835-11	METAL CHIP	15K 5% 1/10W
R621	1-216-830-11	METAL CHIP	5.6K 5% 1/10W	R662	1-216-841-11	METAL CHIP	47K 5% 1/10W
R622	1-216-830-11	METAL CHIP	5.6K 5% 1/10W	R663	1-216-833-11	METAL CHIP	10K 5% 1/10W
R623	1-216-828-11	METAL CHIP	3.9K 5% 1/10W	R664	1-218-867-11	METAL CHIP	6.8K 5% 1/10W
R624	1-216-828-11	METAL CHIP	3.9K 5% 1/10W	R665	1-218-867-11	METAL CHIP	6.8K 5% 1/10W
R625	1-216-827-11	METAL CHIP	3.3K 5% 1/10W (EXCEPT AEP, UK)	R666	1-216-826-11	METAL CHIP	2.7K 5% 1/10W
R625	1-216-828-11	METAL CHIP	3.9K 5% 1/10W (AEP, UK)	R667	1-216-826-11	METAL CHIP	2.7K 5% 1/10W
R626	1-216-827-11	METAL CHIP	3.3K 5% 1/10W (EXCEPT AEP, UK)	R670	1-216-833-11	METAL CHIP	10K 5% 1/10W
R626	1-216-828-11	METAL CHIP	3.9K 5% 1/10W (AEP, UK)	R671	1-216-842-11	METAL CHIP	56K 5% 1/10W
R627	1-216-825-11	METAL CHIP	2.2K 5% 1/10W	R672	1-216-833-11	METAL CHIP	10K 5% 1/10W
R628	1-216-825-11	METAL CHIP	2.2K 5% 1/10W	R673	1-216-821-11	METAL CHIP	1K 5% 1/10W
R629	1-216-833-11	METAL CHIP	10K 5% 1/10W	R674	1-216-827-11	METAL CHIP	3.3K 5% 1/10W
R630	1-216-833-11	METAL CHIP	10K 5% 1/10W	R675	1-216-827-11	METAL CHIP	3.3K 5% 1/10W
R631	1-216-817-11	METAL CHIP	470 5% 1/10W (US, CND)	R676	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R631	1-216-825-11	METAL CHIP	2.2K 5% 1/10W (EXCEPT US, CND)	R677	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
R632	1-216-817-11	METAL CHIP	470 5% 1/10W (US, CND)	R678	1-216-817-11	METAL CHIP	470 5% 1/10W
R632	1-216-825-11	METAL CHIP	2.2K 5% 1/10W (EXCEPT US, CND)	R679	1-216-834-11	METAL CHIP	12K 5% 1/10W
				R680	1-216-833-11	METAL CHIP	10K 5% 1/10W
				R681	1-218-867-11	METAL CHIP	6.8K 5% 1/10W
				R682	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
				R683	1-216-827-11	METAL CHIP	3.3K 5% 1/10W
				R684	1-216-817-11	METAL CHIP	470 5% 1/10W
				R685	1-216-828-11	METAL CHIP	3.9K 5% 1/10W
				R686	1-216-828-11	METAL CHIP	3.9K 5% 1/10W

<b>MAIN</b>	<b>MOTOR (LD)</b>	<b>MOTOR (TB)</b>	<b>PANEL</b>
-------------	-------------------	-------------------	--------------

Ref. No.	Part No.	Description	Remark
R687	1-216-821-11	METAL CHIP	1K 5% 1/10W
R688	1-216-816-11	METAL CHIP	390 5% 1/10W
R691	1-216-837-11	METAL CHIP	22K 5% 1/10W
R692	1-216-833-11	METAL CHIP	10K 5% 1/10W
R693	1-216-821-11	METAL CHIP	1K 5% 1/10W
R694	1-216-837-11	METAL CHIP	22K 5% 1/10W
R695	1-216-833-11	METAL CHIP	10K 5% 1/10W
R696	1-216-821-11	METAL CHIP	1K 5% 1/10W
R697	1-216-837-11	METAL CHIP	22K 5% 1/10W
R698	1-216-833-11	METAL CHIP	10K 5% 1/10W
R699	1-216-821-11	METAL CHIP	1K 5% 1/10W
R700	1-216-837-11	METAL CHIP	22K 5% 1/10W
R701	1-216-837-11	METAL CHIP	22K 5% 1/10W
R702	1-216-833-11	METAL CHIP	10K 5% 1/10W
R703	1-216-833-11	METAL CHIP	10K 5% 1/10W
R704	1-216-833-11	METAL CHIP	10K 5% 1/10W
R705	1-216-833-11	METAL CHIP	10K 5% 1/10W
R730	1-216-833-11	METAL CHIP	10K 5% 1/10W
R731	1-216-833-11	METAL CHIP	10K 5% 1/10W
R732	1-216-833-11	METAL CHIP	10K 5% 1/10W
R733	1-216-841-11	METAL CHIP	47K 5% 1/10W
R734	1-216-841-11	METAL CHIP	47K 5% 1/10W
R735	1-216-841-11	METAL CHIP	47K 5% 1/10W
R736	1-216-841-11	METAL CHIP	47K 5% 1/10W
R737	1-216-841-11	METAL CHIP	47K 5% 1/10W
R738	1-216-841-11	METAL CHIP	47K 5% 1/10W
R739	1-216-841-11	METAL CHIP	47K 5% 1/10W
R761	1-216-845-11	METAL CHIP	100K 5% 1/10W
R762	1-216-845-11	METAL CHIP	100K 5% 1/10W
R763	1-216-845-11	METAL CHIP	100K 5% 1/10W
R764	1-216-849-11	METAL CHIP	220K 5% 1/10W
R765	1-216-849-11	METAL CHIP	220K 5% 1/10W
R766	1-216-849-11	METAL CHIP	220K 5% 1/10W
R767	1-216-849-11	METAL CHIP	220K 5% 1/10W
R801	1-216-813-11	METAL CHIP	220 5% 1/10W (AEP, UK)
R807	1-216-821-11	METAL CHIP	1K 5% 1/10W (AEP, UK)
R809	1-216-864-11	SHORT CHIP	0 (AEP, UK)
R810	1-216-821-11	METAL CHIP	1K 5% 1/10W (AEP, UK)
R812	1-216-864-11	SHORT CHIP	0 (AEP, UK)
< RELAY >			
RY201	1-755-307-11	RELAY (EXCEPT AEP, UK, CIS)	
< THERMISTOR >			
TH101	1-803-790-21	THERMISTOR	
TH102	1-803-790-21	THERMISTOR	
< CONNECTOR >			
WH013	1-817-363-11	HOLDER, WIRE 11P	
WH201	1-816-818-11	HLDR, WIRE 2.5-5P	
*****			
1-687-133-11	MOTOR (LD) BOARD		*****
*****			

Ref. No.	Part No.	Description	Remark
1-687-134-11	MOTOR (TB) BOARD		*****
< CONNECTOR >			
CN742	1-784-727-11	CONNECTOR, FFC 5P	*****
A-4732-641-A	PANEL BOARD, COMPLETE (US, CND)		
A-4733-014-A	PANEL BOARD, COMPLETE (E51)		
A-4734-513-A	PANEL BOARD, COMPLETE (MX)		
A-4747-732-A	PANEL BOARD, COMPLETE (CIS)		
A-4747-795-A	PANEL BOARD, COMPLETE		(E, SP, TW, KR, AUS)
A-4748-179-A	PANEL BOARD, COMPLETE (AEP, UK)		*****
< CAPACITOR >			
C201	1-126-960-11	ELECT	1uF 20% 50V
C202	1-164-173-11	CERAMIC CHIP	0.0039uF 10% 50V
C203	1-126-965-11	ELECT	22uF 20% 50V
C204	1-110-563-11	CERAMIC CHIP	0.068uF 10% 16V
C205	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C207	1-164-245-11	CERAMIC CHIP	0.015uF 10% 25V
C208	1-162-967-11	CERAMIC CHIP	0.0033uF 10% 50V
C210	1-162-967-11	CERAMIC CHIP	0.0033uF 10% 50V
C211	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C213	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C214	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C215	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C216	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C413	1-126-960-11	ELECT	1uF 20% 50V (EXCEPT US, CND, AEP, UK, CIS)
C414	1-164-156-11	CERAMIC CHIP	0.1uF 25V (EXCEPT US, CND, AEP, UK, CIS)
C415	1-164-156-11	CERAMIC CHIP	0.1uF 25V (EXCEPT US, CND, AEP, UK, CIS)
C501	1-126-960-11	ELECT	1uF 20% 50V
C502	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C503	1-126-960-11	ELECT	1uF 20% 50V
C504	1-126-916-11	ELECT	1000uF 20% 6.3V
C505	1-126-964-11	ELECT	10uF 20% 50V
C507	1-164-227-11	CERAMIC CHIP	0.022uF 10% 25V
C508	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C509	1-126-965-11	ELECT	22uF 20% 50V
C510	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C601	1-126-947-11	ELECT	47uF 20% 16V
C809	1-126-947-11	ELECT	47uF 20% 16V
C902	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C903	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C904	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C905	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C906	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C907	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C908	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C909	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C910	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C911	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C912	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C914	1-126-947-11	ELECT	47uF 20% 35V



Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark	
C915	1-131-992-11	CERAMIC CHIP	0.1uF	35V		< FLUORESCENT INDICATOR TUBE >		
C916	1-126-163-11	ELECT	4.7uF	20%	50V	FL901	1-518-894-11	INDICATOR TUBE, FLUORESCENT
C917	1-126-163-11	ELECT	4.7uF	20%	50V			
C918	1-164-156-11	CERAMIC CHIP	0.1uF		25V		< IC >	
C919	1-162-918-11	CERAMIC CHIP	18PF	5%	50V	IC201	6-704-046-01	IC BU2099FV
C920	1-162-919-11	CERAMIC CHIP	22PF	5%	50V	IC501	6-704-135-01	IC MM1614A
C921	1-164-156-11	CERAMIC CHIP	0.1uF		25V	IC502	8-759-533-04	IC M62703ML-E1
C922	1-162-919-11	CERAMIC CHIP	22PF	5%	50V	IC801	6-600-213-01	IC GP1UE271XK
C923	1-162-919-11	CERAMIC CHIP	22PF	5%	50V	IC901	6-803-359-01	IC LC876764C-52C7 (US, CND, E, SP, TW, KR, AUS)
C924	1-216-864-11	SHORT CHIP	0					
C926	1-164-156-11	CERAMIC CHIP	0.1uF		25V	IC901	6-803-497-01	IC LC876796B-52D8 (AEP, UK, CIS, E51, MX)
C927	1-164-156-11	CERAMIC CHIP	0.1uF		25V		< SHORT >	
C930	1-164-156-11	CERAMIC CHIP	0.1uF		25V	JR101	1-216-296-11	SHORT CHIP 0 (AEP, UK)
C931	1-164-156-11	CERAMIC CHIP	0.1uF		25V	JR102	1-216-296-11	SHORT CHIP 0
C932	1-164-156-11	CERAMIC CHIP	0.1uF		25V	JR201	1-216-864-11	SHORT CHIP 0
C933	1-164-173-11	CERAMIC CHIP	0.0039uF	10%	50V	JR202	1-216-864-11	SHORT CHIP 0
C935	1-128-057-11	ELECT	330uF	20%	6.3V	JR203	1-216-864-11	SHORT CHIP 0
C999	1-126-916-11	ELECT	1000uF	20%	6.3V	JR204	1-216-864-11	SHORT CHIP 0
		< CONNECTOR >				JR205	1-216-864-11	SHORT CHIP 0
CN101	1-793-767-11	CONNECTOR, BOARD TO BOARD 30P				JR206	1-216-864-11	SHORT CHIP 0
CN403	1-784-784-11	CONNECTOR, FFC 23P				JR213	1-216-864-11	SHORT CHIP 0
CN601	1-784-774-11	CONNECTOR, FFC 13P				JR215	1-216-864-11	SHORT CHIP 0
CN701	1-568-830-11	CONNECTOR, FFC 11P				JR216	1-216-864-11	SHORT CHIP 0
		< DIODE >				JR218	1-216-864-11	SHORT CHIP 0
D101	8-719-991-34	DIODE 1SS133T-72				JR219	1-216-864-11	SHORT CHIP 0
D201	8-719-991-34	DIODE 1SS133T-72				JR220	1-216-864-11	SHORT CHIP 0
D402	8-719-991-34	DIODE 1SS133T-72 (EXCEPT US, CND, AEP, UK, CIS)				JR401	1-216-864-11	SHORT CHIP 0
D501	8-719-991-34	DIODE 1SS133T-72				JR402	1-216-864-11	SHORT CHIP 0 (EXCEPT US, CND, AEP, UK, CIS)
D502	8-719-991-34	DIODE 1SS133T-72				JR601	1-216-296-11	SHORT CHIP 0
D503	8-719-991-34	DIODE 1SS133T-72				JR602	1-216-864-11	SHORT CHIP 0
D504	8-719-991-34	DIODE 1SS133T-72				JR902	1-216-864-11	SHORT CHIP 0
D505	8-719-991-34	DIODE 1SS133T-72				JR903	1-216-864-11	SHORT CHIP 0
D506	8-719-991-34	DIODE 1SS133T-72				JR905	1-216-864-11	SHORT CHIP 0
D507	8-719-921-80	DIODE MTZJ-T-72-11B				JR906	1-216-864-11	SHORT CHIP 0
D508	8-719-991-34	DIODE 1SS133T-72				JR907	1-216-864-11	SHORT CHIP 0
D601	8-719-991-34	DIODE 1SS133T-72				JR908	1-216-864-11	SHORT CHIP 0
D602	8-719-991-34	DIODE 1SS133T-72				JR909	1-216-296-11	SHORT CHIP 0
D605	8-719-991-34	DIODE 1SS133T-72 (EXCEPT US, CND)				JR910	1-216-864-11	SHORT CHIP 0
D607	8-719-991-34	DIODE 1SS133T-72 (US, CND, E51, MX)				JR911	1-216-864-11	SHORT CHIP 0
D608	8-719-991-34	DIODE 1SS133T-72 (EXCEPT US, CND, AEP, UK, CIS)				JR912	1-216-864-11	SHORT CHIP 0
D609	8-719-991-34	DIODE 1SS133T-72 (AEP, UK, CIS)				JR913	1-216-864-11	SHORT CHIP 0
D610	8-719-991-34	DIODE 1SS133T-72 (CIS)					< LED >	
D611	8-719-991-34	DIODE 1SS133T-72 (E, SP, TW, KR)				LED202	6-500-643-01	DIODE SLR-505VCT31 (ILLUMINATION)
D612	8-719-991-34	DIODE 1SS133T-72 (US, CND, E51, MX)				LED203	6-500-644-01	DIODE SLR-505DCT31 (ILLUMINATION)
D614	8-719-991-34	DIODE 1SS133T-72 (AEP, UK)				LED204	6-500-642-01	DIODE SLR-505YCT31 (ILLUMINATION)
D620	8-719-820-05	DIODE 1SS181-TE85L				LED205	6-500-643-01	DIODE SLR-505VCT31 (ILLUMINATION)
D621	8-719-820-05	DIODE 1SS181-TE85L				LED206	6-500-644-01	DIODE SLR-505DCT31 (ILLUMINATION)
D622	8-719-820-05	DIODE 1SS181-TE85L				LED207	6-500-642-01	DIODE SLR-505YCT31 (ILLUMINATION)
D623	8-719-820-05	DIODE 1SS181-TE85L					< TRANSISTOR >	
D624	8-719-820-05	DIODE 1SS181-TE85L				Q201	8-729-120-28	TRANSISTOR 2SC3052EF-T1-LEF
D625	8-719-820-05	DIODE 1SS181-TE85L				Q202	8-729-120-28	TRANSISTOR 2SC3052EF-T1-LEF
D626	8-719-820-05	DIODE 1SS181-TE85L				Q204	8-729-120-28	TRANSISTOR 2SC3052EF-T1-LEF
D627	8-719-820-05	DIODE 1SS181-TE85L				Q205	8-729-120-28	TRANSISTOR 2SC3052EF-T1-LEF

**PANEL**

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
Q206	8-729-120-28	TRANSISTOR	2SC3052EF-T1-LEF	R242	1-216-188-00	RES-CHIP	390 5% 1/8W
Q601	8-729-116-57	TRANSISTOR	2SB1068TP-K	R243	1-216-188-00	RES-CHIP	390 5% 1/8W
Q602	8-729-140-04	TRANSISTOR	2SB1116-TP-LK	R244	1-249-412-11	CARBON	390 5% 1/4W
Q603	8-729-140-04	TRANSISTOR	2SB1116-TP-LK	R245	1-216-188-00	RES-CHIP	390 5% 1/8W
Q604	8-729-900-80	TRANSISTOR	RN1202TPE4	R246	1-216-188-00	RES-CHIP	390 5% 1/8W
Q605	8-729-900-80	TRANSISTOR	RN1202TPE4	R247	1-216-834-11	METAL CHIP	12K 5% 1/10W
Q606	8-729-900-80	TRANSISTOR	RN1202TPE4	R248	1-216-845-11	METAL CHIP	100K 5% 1/10W
Q607	8-729-027-23	TRANSISTOR	DTA114EKA-T146	R249	1-216-838-11	METAL CHIP	27K 5% 1/10W
Q901	8-729-120-28	TRANSISTOR	2SC3052EF-T1-LEF	R254	1-216-849-11	METAL CHIP	220K 5% 1/10W
		< RESISTOR >		R261	1-216-833-11	METAL CHIP	10K 5% 1/10W
R101	1-249-433-11	CARBON	22K 5% 1/4W	R262	1-216-833-11	METAL CHIP	10K 5% 1/10W
			(AEP, UK)	R263	1-216-833-11	METAL CHIP	10K 5% 1/10W
R102	1-249-436-11	CARBON	39K 5% 1/4W	R264	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
			(AEP, UK)	R334	1-216-833-11	METAL CHIP	10K 5% 1/10W
R103	1-249-436-11	CARBON	39K 5% 1/4W	R335	1-216-833-11	METAL CHIP	10K 5% 1/10W
			(AEP, UK)	R336	1-216-833-11	METAL CHIP	10K 5% 1/10W
R104	1-249-417-11	CARBON	1K 5% 1/4W	R415	1-216-809-11	METAL CHIP	100 5% 1/10W
R105	1-249-417-11	CARBON	1K 5% 1/4W			(EXCEPT US, CND, AEP, UK, CIS)	
R106	1-249-417-11	CARBON	1K 5% 1/4W	R416	1-216-850-11	METAL CHIP	270K 5% 1/10W
R107	1-249-417-11	CARBON	1K 5% 1/4W			(EXCEPT US, CND, AEP, UK, CIS)	
R108	1-249-417-11	CARBON	1K 5% 1/4W	R417	1-216-835-11	METAL CHIP	15K 5% 1/10W
R109	1-249-417-11	CARBON	1K 5% 1/4W			(EXCEPT US, CND, AEP, UK, CIS)	
R110	1-249-417-11	CARBON	1K 5% 1/4W	R418	1-216-853-11	METAL CHIP	470K 5% 1/10W
R111	1-249-417-11	CARBON	1K 5% 1/4W			(EXCEPT US, CND, AEP, UK, CIS)	
R112	1-249-417-11	CARBON	1K 5% 1/4W	R419	1-216-821-11	METAL CHIP	1K 5% 1/10W
R113	1-249-417-11	CARBON	1K 5% 1/4W			(EXCEPT US, CND, AEP, UK, CIS)	
R114	1-249-417-11	CARBON	1K 5% 1/4W	R501	1-249-408-11	CARBON	180 5% 1/4W
R118	1-249-393-11	CARBON	10 5% 1/4W	R502	1-216-841-11	METAL CHIP	47K 5% 1/10W
R119	1-249-417-11	CARBON	1K 5% 1/4W	R503	1-216-841-11	METAL CHIP	47K 5% 1/10W
R121	1-249-417-11	CARBON	1K 5% 1/4W	R504	1-249-429-11	CARBON	10K 5% 1/4W
R122	1-249-417-11	CARBON	1K 5% 1/4W	R505	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R201	1-216-823-11	METAL CHIP	1.5K 5% 1/10W	R506	1-216-815-11	METAL CHIP	330 5% 1/10W
R202	1-247-807-31	CARBON	100 5% 1/4W	R507	1-216-833-11	METAL CHIP	10K 5% 1/10W
R203	1-216-849-11	METAL CHIP	220K 5% 1/10W	R601	1-216-809-11	METAL CHIP	100 5% 1/10W
R204	1-216-840-11	METAL CHIP	39K 5% 1/10W	R607	1-216-821-11	METAL CHIP	1K 5% 1/10W
R205	1-216-829-11	METAL CHIP	4.7K 5% 1/10W	R608	1-216-821-11	METAL CHIP	1K 5% 1/10W
R206	1-216-864-11	SHORT CHIP	0	R609	1-216-821-11	METAL CHIP	1K 5% 1/10W
R208	1-216-825-11	METAL CHIP	2.2K 5% 1/10W	R610	1-216-821-11	METAL CHIP	1K 5% 1/10W
R210	1-216-809-11	METAL CHIP	100 5% 1/10W	R611	1-216-821-11	METAL CHIP	1K 5% 1/10W
R211	1-216-834-11	METAL CHIP	12K 5% 1/10W	R612	1-216-821-11	METAL CHIP	1K 5% 1/10W
R212	1-216-851-11	METAL CHIP	330K 5% 1/10W	R625	1-216-841-11	METAL CHIP	47K 5% 1/10W
R213	1-216-829-11	METAL CHIP	4.7K 5% 1/10W	R626	1-216-841-11	METAL CHIP	47K 5% 1/10W
R214	1-216-849-11	METAL CHIP	220K 5% 1/10W	R627	1-216-841-11	METAL CHIP	47K 5% 1/10W
R215	1-216-809-11	METAL CHIP	100 5% 1/10W	R628	1-216-841-11	METAL CHIP	47K 5% 1/10W
R216	1-216-851-11	METAL CHIP	330K 5% 1/10W	R629	1-216-841-11	METAL CHIP	47K 5% 1/10W
R217	1-216-849-11	METAL CHIP	220K 5% 1/10W	R630	1-216-841-11	METAL CHIP	47K 5% 1/10W
R218	1-216-809-11	METAL CHIP	100 5% 1/10W	R631	1-216-841-11	METAL CHIP	47K 5% 1/10W
R219	1-216-833-11	METAL CHIP	10K 5% 1/10W	R637	1-216-841-11	METAL CHIP	47K 5% 1/10W
R220	1-216-849-11	METAL CHIP	220K 5% 1/10W	R638	1-249-417-11	CARBON	1K 5% 1/4W
R221	1-216-841-11	METAL CHIP	47K 5% 1/10W	R639	1-249-417-11	CARBON	1K 5% 1/4W
R222	1-216-849-11	METAL CHIP	220K 5% 1/10W	R640	1-249-417-11	CARBON	1K 5% 1/4W
R223	1-216-809-11	METAL CHIP	100 5% 1/10W	R641	1-249-417-11	CARBON	1K 5% 1/4W
R225	1-247-807-31	CARBON	100 5% 1/4W	R642	1-249-417-11	CARBON	1K 5% 1/4W
R226	1-249-429-11	CARBON	10K 5% 1/4W	R643	1-249-417-11	CARBON	1K 5% 1/4W
R227	1-249-429-11	CARBON	10K 5% 1/4W	R644	1-249-421-11	CARBON	2.2K 5% 1/4W
R228	1-249-429-11	CARBON	10K 5% 1/4W	R645	1-249-421-11	CARBON	2.2K 5% 1/4W
R241	1-216-188-00	RES-CHIP	390 5% 1/8W	R701	1-216-809-11	METAL CHIP	100 5% 1/10W
				R702	1-247-807-31	CARBON	100 5% 1/4W

PANEL

PT

Ref. No.	Part No.	Description	Quantity	Percentage	Remark	Ref. No.	Part No.	Description	Quantity	Percentage	Remark
R703	1-216-809-11	METAL CHIP	100	5%	1/10W						
R704	1-216-809-11	METAL CHIP	100	5%	1/10W	R953	1-249-441-11	CARBON	100K	5%	1/4W
R705	1-216-809-11	METAL CHIP	100	5%	1/10W	R954	1-216-828-11	METAL CHIP	3.9K	5%	1/10W
						R957	1-249-441-11	CARBON	100K	5%	1/4W
R706	1-216-809-11	METAL CHIP	100	5%	1/10W	R958	1-219-570-11	METAL CHIP	10M	5%	1/10W
R707	1-216-809-11	METAL CHIP	100	5%	1/10W	R959	1-216-853-11	METAL CHIP	470K	5%	1/10W
R708	1-216-809-11	METAL CHIP	100	5%	1/10W						
R709	1-247-807-31	CARBON	100	5%	1/4W	R960	1-216-809-11	METAL CHIP	100	5%	1/10W
R817	1-249-401-11	CARBON	47	5%	1/4W	R961	1-216-821-11	METAL CHIP	1K	5%	1/10W
						R962	1-216-821-11	METAL CHIP	1K	5%	1/10W
R818	1-249-438-11	CARBON	56K	5%	1/4W	R963	1-216-821-11	METAL CHIP	1K	5%	1/10W
R902	1-216-841-11	METAL CHIP	47K	5%	1/10W	R964	1-216-845-11	METAL CHIP	100K	5%	1/10W
R903	1-216-841-11	METAL CHIP	47K	5%	1/10W						
R904	1-216-841-11	METAL CHIP	47K	5%	1/10W	R965	1-216-845-11	METAL CHIP	100K	5%	1/10W
R905	1-216-841-11	METAL CHIP	47K	5%	1/10W	R966	1-216-845-11	METAL CHIP	100K	5%	1/10W
						R967	1-216-845-11	METAL CHIP	100K	5%	1/10W
R906	1-216-841-11	METAL CHIP	47K	5%	1/10W	R968	1-216-845-11	METAL CHIP	100K	5%	1/10W
R907	1-216-841-11	METAL CHIP	47K	5%	1/10W	R969	1-216-845-11	METAL CHIP	100K	5%	1/10W
R908	1-216-841-11	METAL CHIP	47K	5%	1/10W						
R909	1-216-841-11	METAL CHIP	47K	5%	1/10W	R970	1-216-845-11	METAL CHIP	100K	5%	1/10W
R910	1-216-841-11	METAL CHIP	47K	5%	1/10W	R971	1-249-441-11	CARBON	100K	5%	1/4W
						R972	1-249-439-11	CARBON	68K	5%	1/4W
R911	1-216-841-11	METAL CHIP	47K	5%	1/10W						(AEP, UK)
R912	1-216-841-11	METAL CHIP	47K	5%	1/10W	R972	1-249-441-11	CARBON	100K	5%	1/4W
R913	1-216-845-11	METAL CHIP	100K	5%	1/10W						(EXCEPT AEP, UK)
R914	1-216-845-11	METAL CHIP	100K	5%	1/10W	R973	1-216-843-11	METAL CHIP	68K	5%	1/10W
R915	1-216-845-11	METAL CHIP	100K	5%	1/10W						(AEP, UK)
R916	1-216-845-11	METAL CHIP	100K	5%	1/10W	R973	1-216-845-11	METAL CHIP	100K	5%	1/10W
R917	1-216-845-11	METAL CHIP	100K	5%	1/10W						(EXCEPT AEP, UK)
R918	1-216-845-11	METAL CHIP	100K	5%	1/10W	R974	1-249-441-11	CARBON	100K	5%	1/4W
R919	1-216-845-11	METAL CHIP	100K	5%	1/10W	R975	1-249-441-11	CARBON	100K	5%	1/4W
R920	1-216-845-11	METAL CHIP	100K	5%	1/10W	R976	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R921	1-216-845-11	METAL CHIP	100K	5%	1/10W						< VIBRATOR >
R922	1-216-845-11	METAL CHIP	100K	5%	1/10W	X901	1-760-252-12	VIBRATOR, CRYSTAL (32.768kHz)			
R923	1-216-845-11	METAL CHIP	100K	5%	1/10W	X902	1-795-880-11	VIBRATOR, CERAMIC (8.64MHz)			
R924	1-216-845-11	METAL CHIP	100K	5%	1/10W						*****
R925	1-216-845-11	METAL CHIP	100K	5%	1/10W						
R926	1-216-845-11	METAL CHIP	100K	5%	1/10W						1-688-399-12 PT BOARD (EXCEPT E, E51, SP, TW)
R927	1-216-845-11	METAL CHIP	100K	5%	1/10W						1-688-763-11 PT BOARD (E, E51, SP, TW)
R928	1-216-845-11	METAL CHIP	100K	5%	1/10W						*****
R929	1-216-845-11	METAL CHIP	100K	5%	1/10W						
R930	1-216-845-11	METAL CHIP	100K	5%	1/10W						< CAPACITOR >
R931	1-216-845-11	METAL CHIP	100K	5%	1/10W	C003	1-162-974-11	CERAMIC CHIP	0.01uF		50V
R932	1-216-845-11	METAL CHIP	100K	5%	1/10W						(E, E51, SP, TW)
R933	1-216-845-11	METAL CHIP	100K	5%	1/10W	C091	1-165-621-11	CERAMIC CHIP	0.1uF		50V
R934	1-216-845-11	METAL CHIP	100K	5%	1/10W						(AEP, UK, CIS)
R935	1-216-845-11	METAL CHIP	100K	5%	1/10W						
											< CONNECTOR >
R936	1-216-845-11	METAL CHIP	100K	5%	1/10W	* CN090	1-580-230-11	PIN, CONNECTOR (PC BOARD) 2P			
R937	1-216-845-11	METAL CHIP	100K	5%	1/10W						(E, E51, SP, TW)
R938	1-216-845-11	METAL CHIP	100K	5%	1/10W	* CN091	1-580-230-11	PIN, CONNECTOR (PC BOARD) 2P			
R939	1-216-845-11	METAL CHIP	100K	5%	1/10W						(EXCEPT E, E51, SP, TW)
R940	1-216-845-11	METAL CHIP	100K	5%	1/10W	CN093	1-817-542-11	CONNECTOR 11P (E, E51, SP, TW)			
R941	1-216-845-11	METAL CHIP	100K	5%	1/10W						< DIODE >
R942	1-249-420-11	CARBON	1.8K	5%	1/4W	D002	8-719-820-05	DIODE 1SS181-TE85L (E, E51, SP, TW)			
R943	1-249-420-11	CARBON	1.8K	5%	1/4W	D003	8-719-801-78	DIODE 1SS184-TE85L (E, E51, SP, TW)			
R944	1-249-427-11	CARBON	6.8K	5%	1/4W	D091	8-719-820-05	DIODE 1SS181-TE85L			
R945	1-249-427-11	CARBON	6.8K	5%	1/4W						(EXCEPT E, E51, SP, TW)
R946	1-216-845-11	METAL CHIP	100K	5%	1/10W	D092	8-719-801-78	DIODE 1SS184-TE85L			
R947	1-216-845-11	METAL CHIP	100K	5%	1/10W						(EXCEPT E, E51, SP, TW)
R948	1-216-845-11	METAL CHIP	100K	5%	1/10W						
R949	1-216-845-11	METAL CHIP	100K	5%	1/10W						
R950	1-216-845-11	METAL CHIP	100K	5%	1/10W						

**CX-JN5**  
Ver 1.1

**PT**    **SENSOR**    **SW**

Ref. No.	Part No.	Description	Remark
		< TRANSFORMER >	
△ PT002	1-439-976-11	TRANSFORMER, POWER (E, E51, SP, TW)	
△ PT011	1-439-734-11	TRANSFORMER, POWER (US, CND)	
△ PT011	1-439-735-11	TRANSFORMER, POWER (AEP, UK, CIS)	
△ PT011	1-439-944-11	TRANSFORMER, POWER (MX, KR)	
△ PT011	1-439-976-11	TRANSFORMER, POWER (AUS)	
		< RESISTOR >	
△ R098	1-202-723-00	SOLID            2.2M        20%    1/2W (US, CND)	
		< RELAY >	
△ RY001	1-755-276-11	RELAY, POWER	
		< SWITCH >	
△ S001	1-786-404-11	SW, SL 1-2-2 SWS2201 (VOLTAGE SELECTOR) (E, E51, SP, TW)	
		< CONNECTOR >	
WH093	1-817-363-11	HOLDER, WIRE 11P (EXCEPT E, E51, SP, TW)	
*****			
	1-687-132-11	SENSOR BOARD *****	
CN731	1-785-329-21	PIN, CONNECTOR (LIGHT ANGLE) 3P	
		< IC >	
IC731	(not supplied)		
*****			
	1-687-669-11	SW BOARD *****	
		< SWITCH >	
S751	1-786-514-11	SWITCH, LEVER (SLIDE) (OPEN/CLOSE DETECT)	
*****			
		MISCELLANEOUS *****	
55	1-796-485-51	DECK, MECHANICAL (CWM43FF13) (US,CND)	
55	1-796-486-41	DECK, MECHANICAL (CWM43FR16) (AEP, UK, CIS, E, E51, SP, TW, KR, AUS)	
55	1-796-486-51	DECK, MECHANICAL (CWM43FR26)(MX)	
106	1-751-688-11	WIRE (FLAT TYPE) (13 CORE)	
107	1-769-944-11	WIRE (FLAT TYPE) (11 CORE)	
108	1-769-857-11	WIRE (FLAT TYPE) (5 CORE)	
110	1-773-182-11	WIRE (FLAT TYPE) (23 CORE)	
254	1-693-615-11	TUNER PACK (E, MX, E51, SP, TW, AUS)	
254	1-693-616-11	TUNER PACK (AEP, UK)	
254	1-693-617-11	TUNER (KR)	
254	1-693-618-11	TUNER PACK (CIS)	
254	1-693-631-11	TUNER PACK (US, CND)	
256	1-769-943-11	WIRE (FLAT TYPE) (11 CORE) (EXCEPT AEP, UK)	
256	1-773-007-11	WIRE (FLAT TYPE) (15 CORE) (AEP, UK)	
257	1-827-222-11	WIRE (FLAT TYPE) (19 CORE)	

Ref. No.	Part No.	Description	Remark
△ 259	1-696-845-11	CORD, POWER (AUS)	
△ 259	1-757-140-11	CORD, POWER (AEP, SP, CIS, E51)	
△ 259	1-775-787-62	CORD, POWER (UK)	
△ 259	1-823-296-11	CORD, POWER (KR)	
△ 259	1-823-597-11	CORD, POWER (US, CND)	
△ 259	1-827-226-21	CORD, POWER (E, MX)	
△ 259	1-827-597-11	CORD, POWER (TW)	
260	1-400-285-11	F-BEAD, E2515MRT	
509	1-776-182-11	WIRE (FLAT TYPE) (5 CORE)	
602	1-471-035-11	MAGNET ASSY	
△ 657	8-820-020-11	OPTICAL PICK-UP KSS-213D/Z-RP	
658	1-823-859-11	WIRE (FLAT TYPE) (16 CORE)	
C901	1-127-888-11	CERAMIC        0.1uF    10%    50V	
C902	1-127-888-11	CERAMIC        0.1uF    10%    50V	
C903	1-127-888-11	CERAMIC        0.1uF    10%    50V (US, CND, E, SP, TW, KR, AUS)	
C904	1-127-888-11	CERAMIC        0.1uF    10%    50V (US, CND, E, SP, TW, KR, AUS)	
C905	1-127-888-11	CERAMIC        0.1uF    10%    50V (US, CND, E, SP, TW, KR, AUS)	
M501	1-763-738-31	FAN, DC	
M701	X-2625-769-1	GEAR ASSY (MB) (RP), MOTOR (SLED)	
M702	X-2161-802-1	CHASSIS ASSY (DCP), T. T (SPINDLE)	
M741	A-4723-963-A	MOTOR ASSY, TABLE	
M751	A-4736-655-A	MOTOR ASSY, LOADING (EXCEPT MX)	
M751	A-4737-533-A	MOTOR ASSY, LOADING (MX)	
△ PT002	1-439-762-11	TRANSFORMER, POWER (US)	
△ PT002	1-439-921-11	TRANSFORMER, POWER (AEP, UK, CIS)	
△ PT002	1-439-923-11	TRANSFORMER, POWER (MX)	
△ PT002	1-439-924-11	TRANSFORMER, POWER (KR)	
△ PT002	1-439-968-11	TRANSFORMER, POWER (CND)	
△ PT002	1-443-049-11	TRANSFORMER, POWER (AUS)	
△ PT003	1-439-922-11	TRANSFORMER, POWER (E, E51, SP, TW)	
S711	1-477-680-11	ENCODER, ROTARY (DISC TRAY ADDRESS DETECT)	
M701	X-2625-769-1	GEAR ASSY (MB) (RP), MOTOR (SLED)	
*****			

ACCESSORIES  
\*\*\*\*\*

△	1-770-019-51	ADAPTOR, CONVERSION PLUG (UK)
△	1-569-008-32	ADAPTOR, CONVERSION PLUG (E51)

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

MEMO

